

Instrument Handbook

CR:514 & CR:515
Single-Level Acoustic
Calibrator



The content of this manual, any illustrations, technical information and descriptions within this document were correct at the time of going to print. Cirrus Research plc reserves the right to make any changes necessary, without notice, in line with the policy of continuing product development and improvement.

No part of this publication may be duplicated, reprinted, stored in a data processing system or transmitted by electronic, mechanical, photographic or other means, or recorded, translated, edited, abridged or expanded without the prior written consent of Cirrus Research plc.

No liability is accepted for any inaccuracies or omissions in this manual, although due care has been taken to ensure that is it complete and accurate as possible.

Accessories supplied by Cirrus Research plc have been designed for use with the instrumentation manufactured by Cirrus Research plc. No responsibility is accepted for damage caused by the use of any other parts or accessories.

In order to take account of a policy of continual development, Cirrus Research plc reserves the right to change any of the information contained in this publication without prior notice.

Produced by Cirrus Research plc, Acoustic House, Bridlington Road, Hunmanby, North Yorkshire, YO14 OPH, United Kingdom.

© Copyright Cirrus Research plc 2022

Reference Number 07/22/CR514&515/09


Contents

Contents	3
Operation Switching on the Calibrator Permanent-on Mode Calibrating a Sound Level Meter Background Noise Stabilisation	4 4 5
Changing the BatteryBattery type	6
Specification	7
Technical Information	8
Free Field Correction	9 9
EU Declaration of Conformity	10
Product Guarantee & Extended Warranty	11
Cirrus Research Offices	12

Operation

Switching on the Calibrator

Press the Power button on the end of the Calibrator to switch the unit on. The indicator will illuminate to show that the unit is operating.

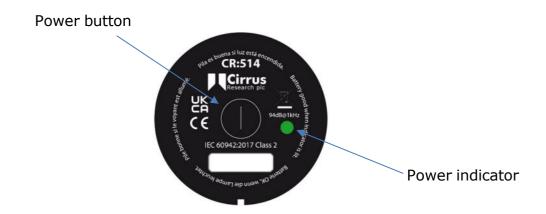

The calibrator will automatically switch off after 5 minutes to preserve battery power.

To switch off the calibrator manually, press the power button again and the indicator will extinguish to show that the unit is switched off.

Permanent-on Mode

For some applications there may be a need to have the calibrator switched on continuously. To allow for this, the calibrator can be turned on by pressing and holding the power button for three seconds.

Release the button and the indicator will flash to show that the unit is in permanent-on mode. Press the power button to switch off the calibrator.

Calibrating a Sound Level Meter

Push the microphone of the Sound Level Meter into the cavity at the end of the calibrator. Ensure the microphone is fully inserted into the cavity and is past the 'O' ring seals. The microphone should be parallel to the body of the calibrator. Also ensure that the small bleed-hole next to the microphone cavity is not blocked as this could cause damage to the microphone.

Most modern Sound Level Meters have electronic calibration with the level adjusted automatically. Adjust the Sound Level Meter to the correct level where applicable. When correcting the value generated by the calibrator a correction for the type of microphone capsule may need to be applied (see Appendix 2)

Background Noise

In order for the calibrator to operate as intended, the ambient acoustic noise level should be no greater than 80dBA.


Stabilisation

In order for the sound pressure level and frequency to stabilise after switching the calibrator on when coupled to a microphone, a period of at least 5 seconds should be allowed before performing a calibration.

Changing the Battery

The CR:514 & CR:515 acoustic calibrators use a single 9v alkaline battery. This type of battery is known as 6F22 or NEDA 1604. It is also commonly known as PP3.

- 1. Unscrew the screw holding the battery cover on, using a coin.
- 2. The battery, type 6F22 (PP3) can now be eased out of its holder and replaced. The battery should be eased out terminal side first by pushing against the spring at the other end. Ensure that the battery is inserted with the correct polarity with the negative terminal at the contact with the larger cutout.

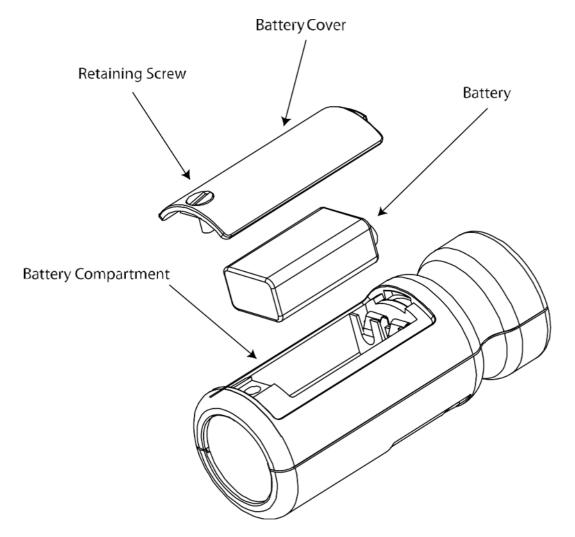

Battery type

The battery should be an alkaline battery, not an ordinary dry cell. The battery is 9 volts when new and will operate the calibrator down to 6.4 volts. When the battery voltage is below 6.6 volts but above 6.4 volts, the power LED will flash to indicate that the battery voltage is low. When the battery voltage is below 6.4 volts the calibrator will not turn on. A discharged battery may allow switch-on but will soon drop in voltage and indicate low battery or switch off.

Specification

Frequency $1kHz \pm 1\%$

Sound Level 94dB re 20µPa

Standardisation CR:514 - IEC 60942:2017 Class 2

CR:515 - IEC 60942:2017 Class 1

Distortion Less than 2%

Operating Humidity 25 to 90% Relative Humidity

Operating Static Pressure 65 kPa to 108kPa

Operating Temperature -10°C to +50°C

Storing Temperature -20°C to +60°C

Effective Volume $6.19 \text{ cm}^3 \pm 0.2 \text{ cm}^3$

Effective Load Volume Sensitivity -0.0008 dB/mm³ @ 1kHz

Cavity Diameter 0.525 inch

Battery 1 x 9v 6F22 (Neda 1604)

Battery Life Approx 15 Hours Continuous Use

Battery Voltage 9v Nominal (10v Maximum, 6.4v Minimum)

Weight with Battery 185g

Dimensions 120mm x Ø48mm

Technical Information

The normal mode of operation of the calibrator is with the unit switched on.

When the LED indicates the unit is switched on this produces the greatest radio frequency emissions.

The calibrator continues to function after exposure to contact discharges up to 4kV and air discharges up to 8kV, for both positive and negative voltages relative to earth ground.

The calibrator conforms to IEC 60942:2017 for a modulated root-mean-square electromagnetic field strength of 10 V/m.

The maximum susceptibility to power and radio frequency fields is with the cavity facing away from the emitter with the battery compartment facing the table, the antenna polarisation horizontal and the calibrator switched on.

Free Field Correction

When calibrating a microphone which is to be used for free field measurements, a small correction may be necessary to compensate for the difference between the microphone's free field response at 'zero degrees' or 'head-on' incidence and the pressure level generated by the calibrator.

Calibration corrections are listed below for the Cirrus Research plc ½" Capsules and three microphone capsules commonly used in Calibration Laboratories:

Microphone Correction Values

Microphone Type	Calibration Correction	Effective Calibration Level
MK:216	-0.3dB	93.7 dB
MK:224	-0.3dB	93.7 dB
B&K 4134	0dB	94.0 dB
B&K 4180	0dB	94.0 dB
B&K 4192	0dB	94.0 dB

Example

An example of the procedure used to calculate the value for an MK:224 microphone is shown below :

Level = 94.0dB + Microphone Correction

Level = 94.0dB + (-0.3dB)

Level = 93.7dB

Different microphones will have different correction values. Please check the operation manual for the Sound Level Meter or microphone concerned for details.

EU Declaration of Conformity

Manufacturer: Cirrus Research plc Acoustic House, Bridlington Road Hunmanby, North Yorkshire, YO14 0PH United Kingdom

CE UK CA

Equipment Description

The following equipment manufactured after 1st September 2022:

CR:514 Acoustic Calibrator CR:515 Acoustic Calibrator

According to: EMC Directive 2014/30/EU Low Voltage Directive 2014/35/EU

meet the following standards

RoHS Directive 2011/65/EU

EN61000-6-3:2020

Electromagnetic compatibility (EMC). Generic standards. Emission standard for residential, commercial and light-industrial environments

EN61000-6-1:2020

Electromagnetic compatibility (EMC). Generic standards. Immunity for residential, commercial and light-industrial environments

EN 61000-6-2:2019

Electromagnetic compatibility (EMC) - Generic standards - Immunity standard for industrial environments

Auxiliary Industry Standards EN 60942:2017 Sound calibrators

Signed

Dated 20th July 2022

Mark Swale **Chief Engineer**

Product Guarantee & Extended Warranty

- 1. Every new product is provided with a 12-month no-quibble warranty. This covers everything we provide against failure, poor workmanship and accidental damage.
 - NB European Union law states a product has to be fit for purpose for 24 months after purchase. This two-year period covers failure and poor workmanship only.
- 2. If the product is calibrated by Cirrus Research or an authorised calibration and service centre, then the initial 12-month warranty is extended by a further 12 months, with the same conditions, for up to 15 years in total.
- 3. If a product has not been calibrated annually by Cirrus Research or an authorised calibration and service centre, then you may buy back into the warranty scheme for a small fee, plus the cost of calibration. This can only be done once during the life of the product.
- 4. If a microphone capsule fails under warranty and is physically damaged, we will replace it with a refurbished capsule.
- 5. If you don't wish to have a refurbished capsule, then you can trade in your damaged capsule for a new one, which will incur a fee.

Cirrus Research Offices

The addresses given below are the Cirrus Research plc offices. Cirrus Research plc also have approved distributors and agents is many countries worldwide. For details of your local representative, please contact Cirrus Research plc at the address below. Contact details for Cirrus Research authorised distributors and agents are also available from the Internet Web site at the address shown below.

Main Office

Cirrus Research plc Acoustic House Bridlington Road Hunmanby North Yorkshire United Kingdom YO14 0PH

Tel: +44 (0)1723 891655 Email: sales@cirrusresearch.com Web: www.cirrusresearch.com

Germany

Cirrus Research GmbH Arabella Center Lyoner Straße 44 – 48 D-60528 Frankfurt Germany

Tel: +49 (0)69 95932047

Email: vertrieb@cirrusresearch.com Web: www.cirrusresearch.de

This page has been left blank intentionally			

This page has been left blank intentionally		

This page has been left blank intentionally	

