

OHP
YOUR PROTECTION OUR PRIORITY

OPERATOR'S MANUAL



QUANTIFIT[®]
FITTRACK GOLD[™]

OHD, Inc.

The OHD Quantifit Respirator Fit Test System

Thank you for recognizing the OHD Quantifit as the world leaders in respirator fit testing.

We welcome your feedback as we support you with your workplace safety needs.

Quantifit and FitTrack Gold Operating Manual

© 2013, OHD, Inc.

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Last Updated 06.26.16

Table of Contents

Foreword	0
Part I Quick Guides	11
1 Add Subject and Test.....	13
2 USB Transfer to Software.....	14
3 Import from FitTrack 5.0.1.....	15
4 Print Reports in FitTrack Gold.....	16
Part II General Information	17
1 Safety and Environmental Considerations.....	18
2 The Quantifit and Its Features.....	18
Introduction	18
Quantifit Features	19
3 Accessories.....	20
Standard Accessories	20
Optional Accessories	20
Part III Instrument Set Up	21
1 Front Panel Controls.....	22
Optical Sensor Knob	22
Front Panel Push Buttons	23
Front Connections	23
Rear Connections	24
Part IV Operating Instructions	27
1 Preparing the Quantifit for testing.....	28
Daily Calibration	28
Interfacing with the Respirator	29
Performing a Fit Test	30
2 Quantitative Fit Test Overview.....	30
Procedure	30
Protocol	31
Fit Factor	31
3 Getting Started.....	32
Power-On and Menu Navigation	32
Using the Optical Sensor Knob and Keyboard	32
Preparing the Respirator for Fit-Testing	33
Instructing the Test Subject	33
Part V Test Menu	35
1 Pre-Test.....	36
Introduction	36
Challenge Pressure	37
Respirator Mask Pressure	37

Pre-Test Parameters	38
Explanation of parameters	38
Running the Pre-Test	39
Pre-Test Results	40
Repeat the Pre-Test	40
Fit Factor	40
Leak Rate	41
Test Time	41
Test-Q	41
Additional Parameters	41
Challenge Pressure.....	41
Modeled Breathing Rate.....	41
Minimum Passing Fit Factor.....	42
2 Protocols.....	42
Which Protocol Should I Use?	42
Preprogrammed Protocols	42
User Definable Protocols	44
Running a Protocol	44
3 Test and Protocol Results.....	45
4 Test Results.....	45
Part VI Edit Protocol Menu	49
1 Introduction.....	50
2 Edit Protocol Menu.....	50
Part VII System Menu	53
1 Introduction.....	54
2 Set Clock.....	54
3 System Reset.....	55
4 Dual Tube Calibration.....	55
5 Zero Pressure.....	57
6 Edit Name.....	57
7 System Setup.....	58
8 Datalog.....	59
Part VIII Utility Menu	61
1 Introduction.....	62
2 Speaker Test.....	62
3 Keyboard Test.....	62
4 Display Test.....	62
5 Printer Test.....	62
6 View Cycle Count.....	63
7 Factory Protocol.....	63
8 Print Help File.....	63

Part IX FitTrack Gold Installation	65
1 Standard Install (Recommended).....	66
2 Custom Install (Advanced).....	68
Part X FitTrack Gold Dashboard	73
1 Navigation.....	74
2 General.....	75
3 Company/Operator.....	75
4 Quantifit Detail.....	76
5 Calibration Due Date.....	76
6 Mask Inventory.....	77
7 Links.....	77
8 Test Statistics.....	77
9 Due for Test.....	78
Part XI FitTrack Gold Personnel	79
1 Personnel General.....	81
2 Personnel Search.....	81
3 Personnel Details.....	82
4 Personnel Output.....	83
5 Add Personnel.....	83
6 Edit Personnel.....	84
7 Delete Personnel.....	84
8 Personnel Test History.....	84
Part XII FitTrack Gold Test	87
1 Test Subject.....	89
2 Subject ID.....	90
3 Test Protocol.....	90
4 Qualitative Input.....	91
5 Test Screen Other.....	93
6 Test Operator.....	93
7 Test Date.....	94
8 Test Mask Information.....	94
9 Test Statistics.....	95
10 Test Operation.....	95
Part XIII FitTrack Gold Company	97
1 General.....	98
2 Create New Company.....	101

3	Edit/Delete Company.....	101
4	Company Search.....	101
5	Company Details.....	102
6	Company Output.....	102

Part XIV FitTrack Gold Reports 103

1	General.....	104
2	Protocol Summary Report.....	105
3	Respirator Summary Report.....	105
4	Calibration Summary Report.....	105
5	Fit Test Summary Report.....	106
6	Fit Test Result Report.....	106
7	Fit Test Log Report.....	106
8	Fit Test Card Report.....	107
9	Outstanding Summary Report.....	108
10	Search.....	108
11	Details.....	108
12	Output.....	109

Part XV FitTrack Gold Tools 111

1	Backup/Restore.....	112
	Synchronize	112
	Backup	114
	Restore	114
2	Import/Export.....	114
	Import Personnel Info	115
	Import from Quantifit	116
	Import from Memory Stick	116
	Import Data	117
	Export Data	118
3	Advanced Options.....	118
	Calibration	118
	Protocol	119
	Respirator	120
	Mask Size	121
	Database	121

Part XVI FitTrack Gold Administration 123

1	General.....	124
	Permissions	124
	Role-Based Settings	125
	Start-Up Options	126
	Home Screen	126
	Date Format	127
	Backup	127
	Auto-Save	128

Mode	128
Languages	128
2 Reports.....	129
Report Filter Settings	129
Report Format Settings	130
3 Security.....	130
User Management	131
Update Firmware	131

Part XVII Troubleshooting 135

1 Test Measurements.....	136
High Leakage	136
Large Leak	136
Erratic Mask Pressure	137
Consistently Low Fit Factors	137
Rapid or Erratic Graph Movement	138
2 Other Problems.....	139
Daily Calibration	139
What do I do when people are not passing a fit test?	139

Part XVIII Instrument Operating Guidelines 141

1 Calibration & Maintenance	142
2 Operating Conditions & Specifications.....	142
3 Service Return Form.....	144
4 What's New.....	145

Part XIX Terms & Conditions 151


1 Claims.....	152
2 Standard Terms and Conditions.....	152
3 Warranty and Product Support.....	152

Index 155

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

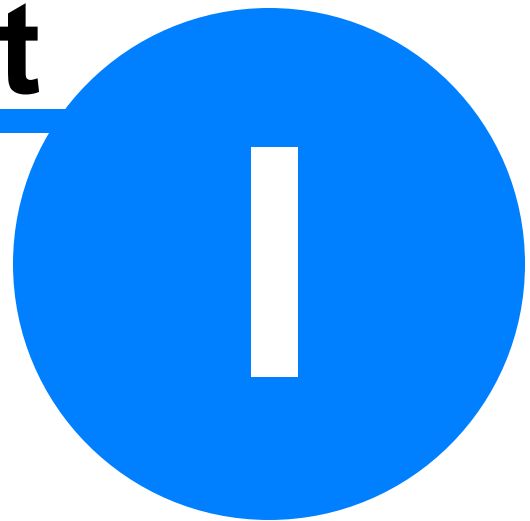

Quick Guides

1 Quick Guides

These Quick Guides may be useful when learning to perform routine tasks with the Quantifit and FitTrack Gold software.

Add Subject and Perform Fit Test


USB Transfer to Software

Import Test Data from FitTrack 5.0.1


Print Reports

1.1 Add Subject and Test

1. Go to the Personnel tab
2. If not already selected, select the Company where the employee should be added
3. Click on the Add button
4. Enter appropriate information (only name is required)
5. Click on Save & Test

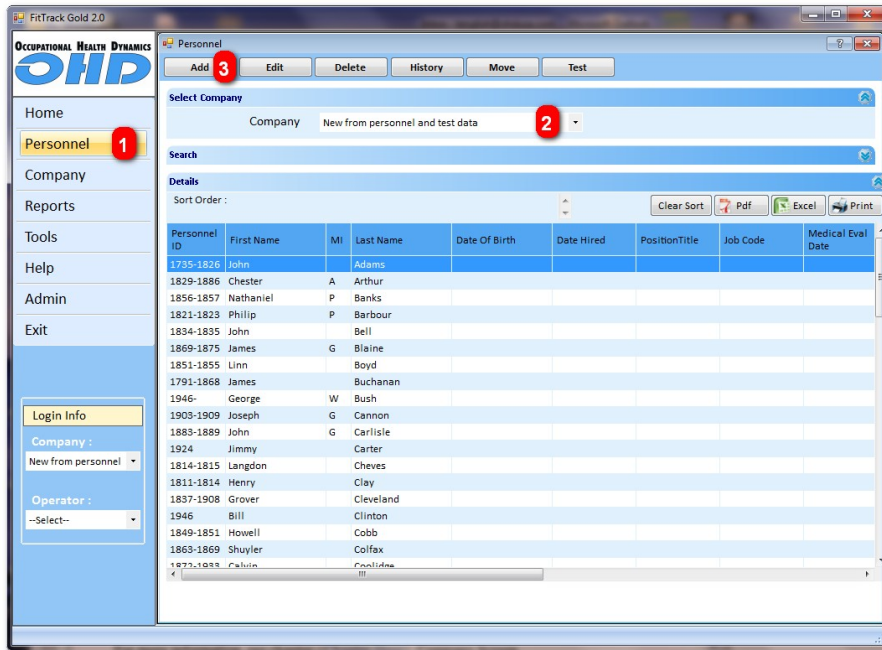


6. Confirm/Select Test Protocol, Mask Manufacturer, and Mask Size
7. Click on the Test button
8. Follow instructions to perform each step
9. After fifth step, click on Save & Print

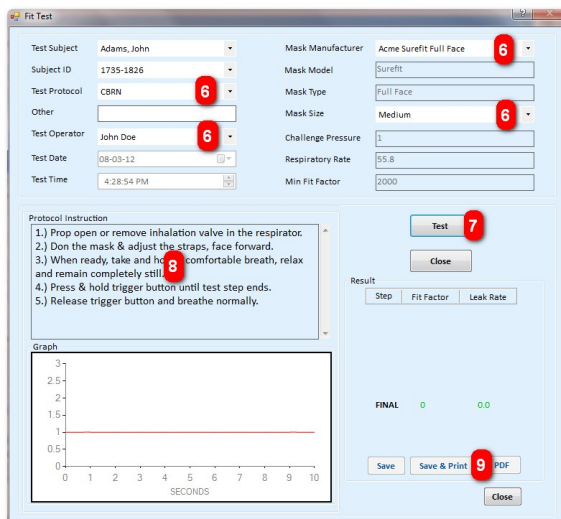

1.2 USB Transfer to Software


Quantifit data can be imported directly into the software when the Quantifit is connected to the computer. Otherwise follow these instructions to import the data file from the Quantifit:

1. Plug a memory stick (thumb drive) into the back of the Quantifit using the upper USB port
2. On Quantifit, go to System > Datalog

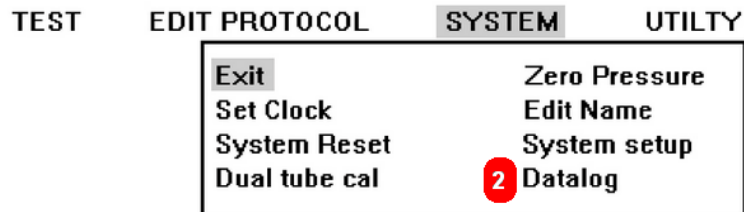


Exit this menu


3. Select File > Save Datalog

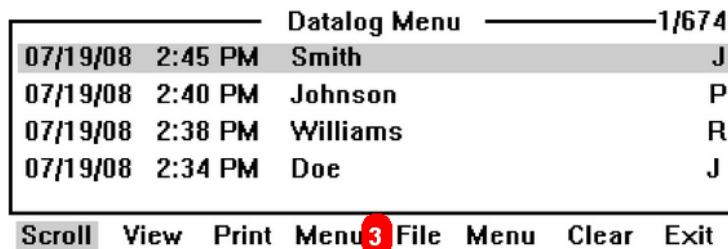

4. Names the file and select Done

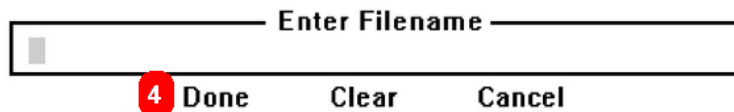


5. When Quantifit is finished saving the file, plug memory stick into your computer
6. Open FitTrack Gold, go to the Tools Tab
7. Click on Import From Memory Stick
8. Browse to the memory stick and the file name
9. Import (NOTE: The data will be imported into the currently opened company)

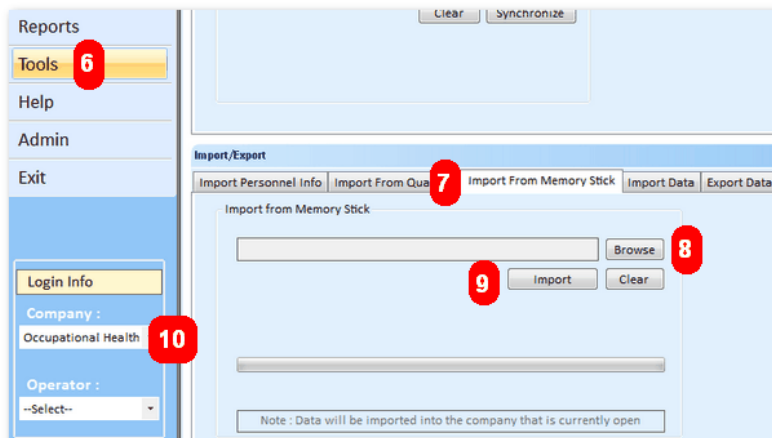


1.3 Import from FitTrack 5.0.1


1. **WARNING:** When restoring the database, all current data will be deleted. Restore only if you do not have tests saved in your database.
2. Go to the Tools tab
3. Click on the Restore tab
4. Choose From FitTrack 5.0.1
5. Click Browse to find the FitTrack 5.0.1 database "FitTrack.mdb"
6. Click on Start
7. First you will be asked if you want to back up the current database. Assuming there is no important data, select No

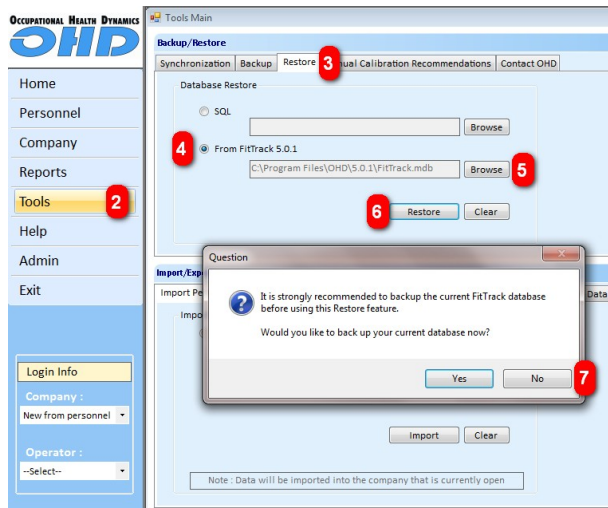


8. Do you want to restore this database? Yes

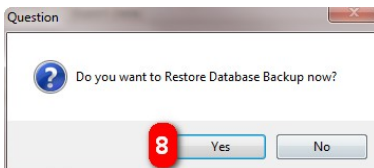

9. Click on Start

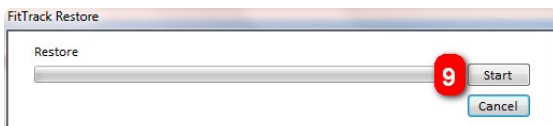


10. Restore complete, click on Close

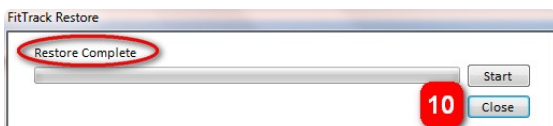


1.4 Print Reports in FitTrack Gold

At the end of each test, the Save & Print option can be selected to print the individual test report. After the test is complete, there are several ways to print out reports. To get to the reports module, select the Reports tab, and choose a company name from which you want to print reports.

1. **Fit Test Report** (the report that prints at the end of each individual test)
 - a. Choose Fit Test Result Report
 - b. Check Test Date (assuming you are looking for tests on a certain date)
 - c. Click on the Search button
 - d. Click on the Print button, and reports will first print to screen for people who were tested on the specific date entered

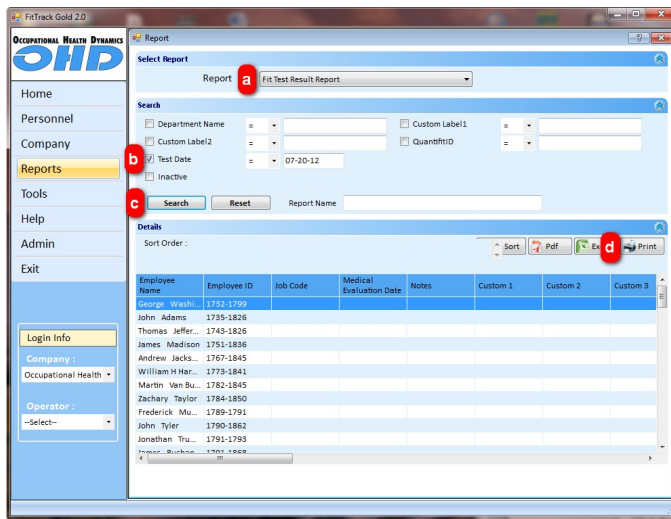


2. **Fit Test Log** (a summary of people tested on a given day)
 - e. Follow the steps above, except choose Fit Test Log Report from the selection
 - f. The Fit Test Log report gives choices as to which information can be selected to appear on the report. The default selections can be left, or the user can choose which fields are important.
 - g. Click on Submit
 - h. The data will be populated, click on print as in the first example (d)

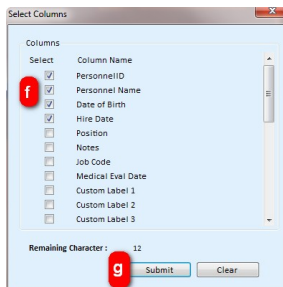

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

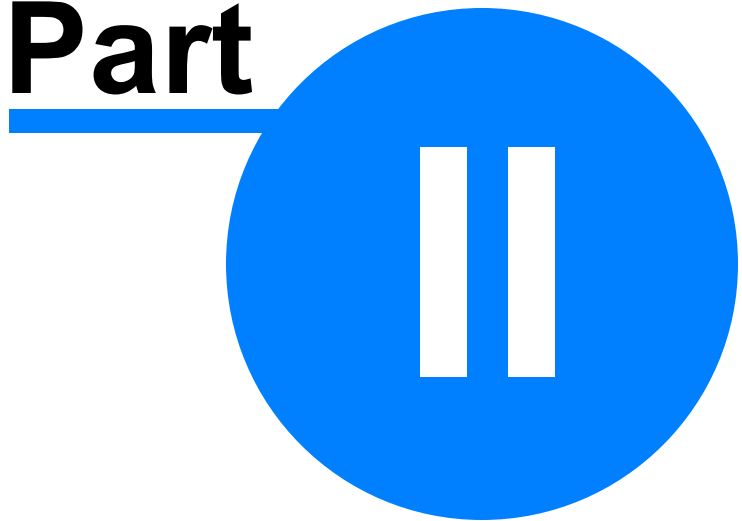

General Information

2 General Information

In this chapter you will learn how to use this manual, where to get help, and about the Quantifit features and specifications.

2.1 Safety and Environmental Considerations

The instrument and related documentation must be reviewed for familiarization with safety markings and instructions before you operate the instrument.

Environmental Conditions

The Quantifit is for use indoors, at an altitude up to 2,000m (6,500 ft.) with a temperature range of 15 to 32 degrees C, (60 to 90 F) maximum relative humidity of 80% non-condensing and pollution degree 2.

Warning

The WARNING! Sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a WARNING! Sign until the indicated conditions are fully understood and met.

Caution

The CAUTION Sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the instrument or data. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

Manual Addenda

Information concerning improvements or changes to the instrument that occur after the printing of this manual will be on an addendum sheet included with the manual. Be sure to review these changes before attempting to operate or service the instrument.

2.2 The Quantifit and Its Features

2.2.1 Introduction

The Quantifit measures...

Face-to-facepiece fit of a respirator. With a perfect respirator and fit, all inhaled air is forced through the filter system, thereby providing maximum respiratory protection for the individual. If the face-to-facepiece seal leaks, unfiltered air bypasses the filter system and enters the individual's lungs during inhalation, thus reducing respiratory protection.

By design, a respirator should prevent contaminated air from entering the lungs of the individual wearing it. If the respirator is in good working order, the only way contaminated air can enter the individual's lungs is through a leak in the face-to-facepiece seal. The Quantifit measures face-to-facepiece seal leakage and then calculates the fit factor (FF) of the respirator being tested.

The Quantifit uses...

The patented Controlled Negative Pressure (CNP) technology. A fit test adapter is used in place of the filter cartridge and inhalation valve on the respirator.* The individual being tested dons the respirator (in accordance with Association National Standards Institute [ANSI] guidelines or manufacturer's instructions), takes a breath, holds the breath, presses the trigger button, and begins the test.

* The inhalation valve must be removed or propped open for the fit test.

The Quantifit functions by...

Creating and maintaining a negative pressure in the respirator mask. This process lasts 8 seconds. Once the adapter valve is closed by pressing the trigger button, sealing the respirator mask, the Quantifit removes air from the respirator mask until the challenge pressure is reached.

At this point, if there isn't a leak, the Quantifit doesn't remove any more air from the respirator mask. If there is a leak, air enters the respirator mask, and the pressure rises. The Quantifit then removes air from the respirator mask until the challenge pressure returns. This process continues for 8 seconds, and then the test ends. The individual under test releases the trigger button and breathes normally.

During the fit test, the Quantifit measures exactly how much air it removed from the respirator mask after reaching the challenge pressure. This measurement is used by the Quantifit to calculate the leak rate.

The Quantifit has two types of protocols: Standard protocols with fixed challenge pressures and modeled breathing rates; and Custom protocols where the user defines parameters, including breathing rate, test steps, and exercises.

Challenge pressure, expressed in hundredths of inches of H₂O, is the maximum partial vacuum created in a correctly fitting mask when the user is working at a typical rate. The modeled breathing rate is the calculated total inspiration for 1 minute.

The modeled breathing rate (in liters per minute [LPM]) is multiplied by 1000 to provide cubic centimeter and then divided by the leak rate (in cubic centimeters per minute [cc/min]) is the fit factor ratio. This is a ratio of the total air inhaled to the contaminated air inhaled.

2.2.2 Quantifit Features

If you don't have a quantitative fit-testing program, the Quantifit helps you start one. Or, if you do have a quantitative fit-testing program, the Quantifit integrates easily into your present program.

These features make the Quantifit simple to use:

- Can be used without a personal computer by utilizing the keyboard and optional printer
- On-board data storage
- Versatile file transfer via thumb drive or directly through USB cable
- Interfaces with personal computer USB ports
- Updates are done by the end-user with an easy internet download
- User prompts that make the instrument easier than ever to use, including self testing
- Doesn't require an invasive probe

- Doesn't use messy challenge agents or alcohol.
- Reduces test time compared to other quantitative fit-test systems
- Directly measures leakage flow—the primary measure of respirator fit
- Tests workers in the actual respirator masks they wear in the workplace
- Displays individual results including Fit Factor, Leak Rate, Test Time, Test-Q (Test Quality), Challenge Pressure, Modeled Breathing Rate, and Minimum Passing Fit Factor
- Displays and prints overall fit-test protocol results including Average Percent Leak, Equivalent Fit Factor, Test Date, Test Time, Test Parameter Values, and a step-by-step summary of the protocol
- Meets OSHA and CSA fit-testing protocol requirements
- Offers two custom protocols that can be created and stored in nonvolatile memory
- Displays menu-selectable commands.
- Provides a comprehensive “Help” program that is available at the touch of a button.
- Outputs test results to the display (LCD display), an external printer, or a database.
- Minimizes cross-contamination (air extracted from the mask exits through the “EXHAUST” port, located on the back of the instrument).

2.3 Accessories

2.3.1 Standard Accessories

Description	Part Number
USB Keyboard	9530-4003
USB Computer Cable	3010-4002
Universal Power Cord	3010-4001
Triple Tube Assembly	9503-4003
Trigger Button	3010-4000
User Manual	3010-0208
FitTrack Software	3010-2019
Rigid Carrying Case	9530-4001


2.3.2 Optional Accessories

Description	Part Number
Adapters	9513-XXXX
Printer	9530-4002
Laminator Kit	FTK PL4A PKG

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

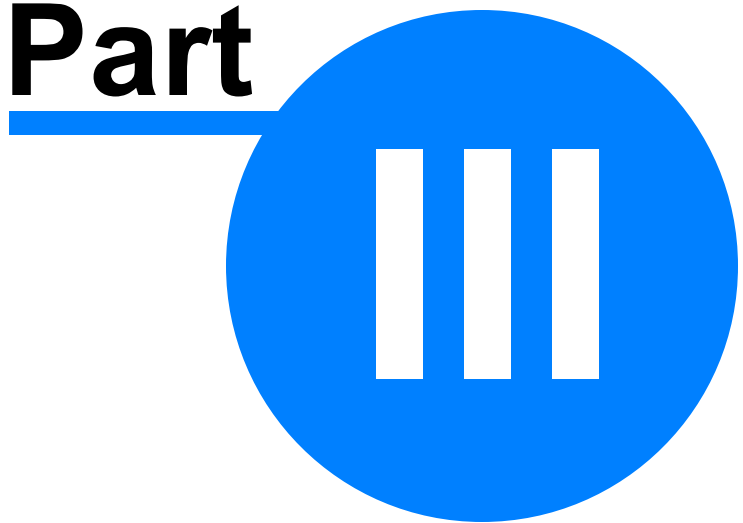

Instrument Set Up

3 Instrument Set Up

In this chapter you will find information about setup and external connections for the Quantifit.

3.1 Front Panel Controls

Front View of Quantifit



3.1.1 Optical Sensor Knob



The Optical Sensor Knob is used for navigation within the Quantifit menu structure. The knob can be turned clockwise or counter-clockwise to move forward or backward through the menu selections. When the appropriate selection is highlighted, push on the Optical Sensor Knob to accept the menu selection.

To use the Optical Sensor button to go back to the previous screen, the user would need to turn the button counter-clockwise until "Exit" is highlighted. Then the user would press on the knob to exit out to the previous menu.

3.1.2 Front Panel Push Buttons



Seal Check

The Seal Check button can be pressed to perform a user-seal check. When the subject has properly donned the respirator and wishes to do a user-seal check, he or she may press the Seal Check button to close off air flow while inhaling to determine if the subject can identify a leak in the respirator. The subject can press the Seal Check button while inhaling, and hold his or her breath for 10 seconds. When the Seal Check button is released, the subject should feel the mask move away from the face as the pressure is released. If this does not occur, this would indicate that the mask leak was so significant that the pressure could not be held for the 10 seconds.

Seal Check + Help

In a rare situation if the trigger button should become lost or damaged, the Seal Check and Help buttons can be pressed together to perform the same function. Hold down the Seal Check button, then depress the Help button. The Help button can be released as long as the seal check is held down for the duration of the test step.

Back

The Back button may be used to back up one step in the menu structure. This button works in the same manner as the back button in an internet web browser. If the user is several levels deep within the menu structure, the back button will bring the user to the previous screen.

Home

The Home button may be used to bring the user back to the start-up screen of the Quantifit. Regardless of where the user is, he or she can press the Home button to return to the start-up screen. If this button is pressed during a test or after data input, the user will be asked to confirm that they want to escape the current position and not save the current data.

Help

The help menu may be used to view further details or instructions when the user needs further assistance. Navigate through the help menu by using Optical Sensor Knob. Scroll to the appropriate subject and press on the knob to enter the subject information.

3.1.3 Front Connections



The connectors located on the front of the instrument will be used during calibration and testing.

Flow, Pressure and Valve

These connectors are used for the Triple Tube. The flow will accept the only male connector. The Pressure connector will take the clear female connector, and the Valve port will take the connection on the blue tube.

Trigger

The Trigger connection will be used for the hand-held trigger button that sets each test in motion.

3.1.4 Rear Connections



On-Off Switch

The On-Off Switch functions like a standard power switch. Toggle to the left (-) and the power is turned off. Toggle to the right (o) and the power is turned on.

9 VDC, 5A (Power) Connection

The power connection is to supply power to the unit, and the universal power supply that was shipped with the Quantifit must be used. Take care to be sure that the flat end of the cable is facing up when connecting the power cord. Do not force the cord into place as this may result in damage to the unit.

Dual Tube Cal Ports

During the instrument's daily calibration, the clear tubing sides of the Triple Tube will be connected to these ports. These ports are interchangeable, therefore, it does not matter which tube gets connected to which port. Do not connect the blue tube to this port, this will result in a failure of the daily calibration.

Exhaust Port

This port exhausts air out of the unit during normal operation. This port is also used during factory calibration and should not be tampered with by the user.

USB PC Port

The USB PC Port is used to connect the Quantifit to a PC. The Quantifit is shipped with a supplied cable for this purpose. The USB symbol (see image at left) on the cable must face up to properly insert this cable. This cable allows for the Quantifit to be operated from the supplied software. This cable may also be used to upgrade the firmware of the Quantifit.

USB Devices (2)

The two standard USB ports may be used to connect the USB Keyboard and the optional printer. These ports are interchangeable and may be used for either of these devices. The top port (only) may be used to connect a flash drive or memory stick to download testing data. Please note that this will only work on the top USB port.


Printer Compatibility Information

Compatible printers include many Hewlett Packard (HP) printers that use an “HP PCL3 Enhanced” printer language. If a connected printer does not work, there is no setting that can be changed on the Quantifit. This simply means that the printer is not compatible. See OHD’s website, www.ohdusa.com, for an updated printer compatibility list. If the tests are being performed via a personal computer and FitTrack software, any Windows-compatible printer may be used. You can check our [website](#) for an updated list of compatible printers.

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

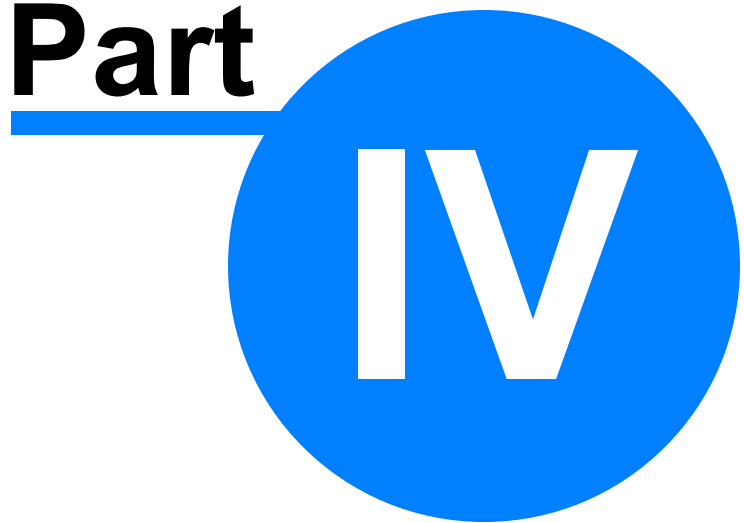

Operating Instructions

4 Operating Instructions

In this chapter you will find information about menu options and preparing the Quantifit for testing.

4.1 Preparing the Quantifit for testing

1. Location

- Use a room that permits spoken communication between the operator of the Quantifit and the test subject.
- Place the Quantifit on a table large enough to also accommodate a printer, keyboard and accessories, while allowing room for two seated persons.

2. Printer and Keyboard Connections

- Turn the power off to both the printer and the Quantifit.
- Connect the printer and keyboard to the Quantifit through the USB Ports on the back of the unit. Plug the square end of the printer cable into the printer.
- Turn on the power to the Quantifit.
- Turn printer power on.

NOTE: Refer to Connecting the Printer for printer compatibility and connector specifications.

3. Printer and Keyboard Connections

- If you wish to use FitTrack software to operate the Quantifit, use the supplied USB cable.
- The square end of the cable goes into the USB PC port.
- The flat end of the cable goes to a USB port on your PC.

4. Test Adapters

- Replace the respirator's filter cartridge (or cartridges) with the appropriate test adapter (or adapters).
- Be sure to prop open or remove the inhalation valve from the mask.

5. Triple Tube & Trigger Button Connections

- First, attach the triple tube assembly (Part # 9503-4003) to the front of the Quantifit. Use the end of the dual tube assembly that has one male quick-disconnect adapter to connect to Flow, use the clear female connector to connect to Pressure, and the blue female tube to connect to Valve.
- Connect the Trigger Button by inserting the quarter-inch connector into the Trigger port.

4.1.1 Daily Calibration

At the beginning of each day, if the Daily Calibration has not been performed, the instrument will prompt the user to do the calibration. It is recommended that the daily calibration be performed before each day of testing. This calibration assures the user not only that the Quantifit is working properly, but that it is also measuring leak within the specified tolerance.

Zero the Sensor

The Quantifit will first prompt the user to zero the sensor of the instrument. In order to do this step, the user must disconnect the Triple Tube from the front of the instrument and press on the Optical Sensor Knob to zero the sensor.

Daily Calibration

For the next step, the instrument will prompt you to connect the Triple tube to the front of the instrument, and then to connect the two ends of the clear tubing to the back of the instruments on the Dual Tube Cal ports. It does not matter which side each tube is connect to, as they are interchangeable.

When the tubes are properly connected, push in the Optical Sensor Knob to "Proceed." The Quantifit will send various flow rates through the instrument to make sure that the measurement of each flow rate is within the accepted tolerance. When the calibration is completed, the Quantifit will confirm that the instrument has passed the calibration requirements. If for some reason the Quantifit should fail this calibration, the user will see an error message to describe the reason for failure. The user should check all connections to make sure they are secure. If the Quantifit does fail calibration, it will be necessary to contact OHD.

4.1.2 Interfacing with the Respirator

The OHD test adapters provide mechanical connections between respirator masks and the Quantifit. Two types of test adapter kits are used:


Single-Piece Adapter

On the single piece adapter, the two clear tubes are connected to the side of the adapter, and the blue tube is connected to the single adapter located at the front of the adapter.



Two-Piece Adapters

When using the two-piece adapters, the clear tubes are connected to the adapter piece that contains the two connector ports, and the blue tube is connected to the piece with the single port.

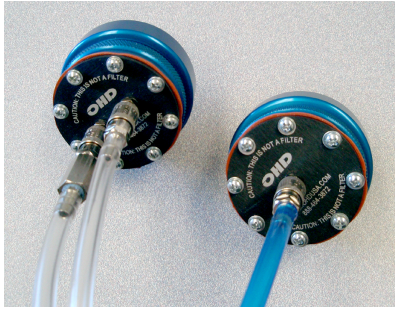

4.1.3 Performing a Fit Test

(See [“Running a Protocol.”](#) for complete instructions.)

Test Step Instructions

To perform each of the five steps of a fit test protocol, the test subject takes a comfortable breath and holds it, and then presses the trigger button to begin the test. The trigger button simultaneously closes off the breathing airway, and starts the test. At the end of the 8-second test, the instrument automatically releases the airway which allows the test subject to breathe.

User Seal Check

If at any time the test subject wishes to do a user-seal check, the Seal Check button on the front panel of the instrument can be used. The subject can press the Seal Check button while inhaling, and hold his or her breath for 10 seconds. When the Seal Check button is released, the subject should feel the mask move away from the face as the pressure is released. If this does not occur, this would indicate that the mask leak was so significant that the pressure could not be held for the 10 seconds.

NOTE: If the trigger button should be lost or damaged, a test can be performed by using the Seal Check and Help buttons simultaneously. Hold down Seal Check, then press Help. Once the test begins, the Help button can be released, but the Seal Check button must remain depressed. (See [Seal Check +Help](#))

4.2 Quantitative Fit Test Overview

4.2.1 Procedure

The Quantifit does not require an invasive probe in the respirator mask. In most cases, the test subject can be tested using the actual respirator mask that is worn in the workplace.

The respirator mask inlets are capped with one or two of the test adapters described in the [previous section](#), and inhalation valves are removed or propped open. The test subject dons the respirator mask to perform the fit test. When the mask is properly positioned, the test subject takes a breath, holds the breath, and presses the trigger button to close the adapter valve and start the test. This starts the piston moving within the cylinder inside the Quantifit. The piston movement within the cylinder removes air from the facepiece until a predetermined challenge pressure is reached (see [Challenge Pressure](#)). Each step of the fit test is completed in 8 seconds or less.

The Quantifit controls the piston movement to maintain the challenge pressure inside the facepiece. The piston speed required to maintain a constant pressure is directly related to the airflow. Since leakage is directly related to the fit of the respirator mask, the lower the leakage, the better the fit. The leak rate is

reported in cubic centimeters per minute.

4.2.2 Protocol

A protocol is a series of quantitative fit tests in various positions or a combination of fit tests and exercises. One quantitative fit test consists of the 8-second-or-less procedure explained above.

[See Which Protocol Should I use?](#)

In September, 2004, OSHA approved the Redon protocol to be used only with CNP instruments. This five-step protocol performs tests with three different donnings to assure that the test subject is proficient at donning a respirator to achieve adequate fit. The test steps measured with this protocol are as follows:

1. Face Forward
2. Bend Over
3. Shake Head
4. Redon Respirator (1)
5. Redon Respirator (2)

It is recommended that the user follow the Redon protocol when testing any air-purifying respirators. When Self-Contained Breathing Apparatus (SCBA) Respirators are used, it is recommended that the SCBA protocol is used. This protocol is identical to the Redon protocol with the one exception that the challenge pressure is increased. The assumption is that while wearing an SCBA, the user will be under more stress, therefore creating a higher breathing rate. The Redon protocol uses a challenge pressure of 0.58 H₂O, while the SCBA protocol uses a challenge pressure of 1.50 H₂O.

The MIL protocol uses a challenge pressure of 1.0 H₂O. The CSA protocol contains the steps currently required by Canadian Standards Association as of this writing. It is expected that the CSA will soon adopt the Redon protocol recommended by OSHA.

The user may also customize the protocol to meet his company's needs or may alternatively use the factory preset protocols and test values. But please note that in order to comply with current standards for respirator fit testing, the user must use one of the factory-set five-step protocols.

4.2.3 Fit Factor

The ratio of the modeled breathing rate to the measured leak rate is the calculated fit factor and is expressed by the following equation.

$$\text{Fit Factor} = \frac{\text{Modeled Breathing Rate (cc/min)}}{\text{Measured Leak Rate (cc/min)}}$$

The modeled breathing rate (MBR)* is the rate at which an individual breathes, predetermined for the standard protocols. The MBR is calculated from the parameters specified by the operator for custom protocols: The operator-specified parameters are inspiratory work rate, respirator mask type, cartridge type, and test subject's gender.

The measured leak rate (MLR) is directly related to facepiece fit. All fit factors are calculated from the leak rate. The leak rate is specified in cubic centimeters per minute (cc/min).

* A feature unique to the Quantifit is its ability to change the modeled breathing rate in order to challenge

the mask at different negative pressures. This allows the user to replicate different or extreme circumstances in the real work environment. By varying the negative pressure, the user can “challenge” or test the mask under varying stress load conditions, and discover how fit will be affected under those loads. The setting of these parameter options is discussed in the PARAMETERS section of Protocol Chapter.

NOTE: The conservative fit factor of the Quantifit is equivalent by definition to fit factors obtained by other quantitative fit test methods (such as ambient aerosol). The direct leakage measurement of the Quantifit is superior to ambient aerosol approximation methods, because the leakage measurement isn’t dependent on aerosol in-mask particle accuracy problems, including collection and counting. The Quantifit leak measurement system uses air, not aerosols; therefore, it eliminates mixing and all other related problems associated with quantitative aerosol measurement methods.

4.3 Getting Started

The following section is intended for using the Quantifit in stand-alone mode (without PC connection).

4.3.1 Power-On and Menu Navigation

The power-on/off switch is located adjacent to the power cord plug on the rear panel of the Quantifit.

Use the Optical Sensor Knob to select the menu you wish to enter. The menu options are Test, Edit Protocol, System and Utility. The following four chapters are devoted to describing the functions and options contained under each menu heading.

4.3.2 Using the Optical Sensor Knob and Keyboard


For navigation through the Quantifit menu structure, you may use the Optical Sensor Knob, the supplied keyboard, or any combination of those two.

The Optical Sensor Knob can be turned clockwise or counter-clockwise to scroll through menus. When you arrive at the selection you wish to choose, simply press on the knob.

The keyboard can be used in the same way by using the cursor arrow keys to navigate through the menus, and by pressing <ENTER> to make a selection.

For the purposes of this manual, all instructions for navigation will use the Optical Sensor Knob. Please know that the keyboard may be used in the same manner for every function performed by the Optical Sensor Knob.

To enter into one of the four menus, press on the Optical Sensor Knob. You may now turn the knob clockwise to move forward to one of the menu items and press on the knob to make your selection. At any time you may press the “Back” button to get back to the previous menu, or use the “Home” button to return to the start-up screen.

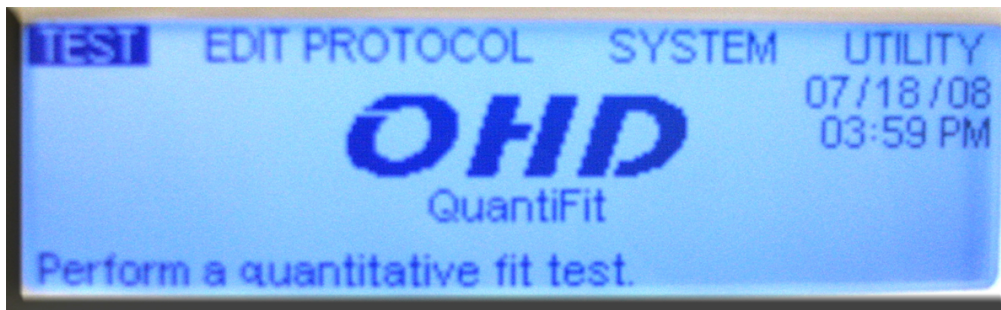

4.3.3 Preparing the Respirator for Fit-Testing

1. **SELECT** the size, brand, and style of respirator that best fits the test subject and is most suitable for the application.
2. **REMOVE OR PROP OPEN** respirator inhalation valve(s) carefully. Upon completion of the fit test, reinstall the respirator inhalation valve(s).
3. **REPLACE** filter cartridge(s) or regulator with test adapter(s).
4. **CONNECT** the blue tube of the Triple Tube (Part # 9503-4003) to single connector on the adapter kit.
5. **CONNECT** two clear tubes of the Triple Tube (Part # 9503-4003) the two connector portion of the fit test adapter kit.

4.3.4 Instructing the Test Subject

Use the instructions below to teach the test subject the procedure for holding one's breath and the guidelines to follow during the fit test.

Have the test subject practice the following steps a few times until comfortable with the procedure.

- Take a breath and hold it, keeping mouth closed.
- Continue holding breath for 8 seconds.
- After holding breath for 8 seconds, relax and breathe normally.

Have the test subject follow these guidelines during a fit test.

- Keep mouth closed (do not swallow or move mouth or tongue).
- Do not exhale any air through the nose.
- Do not make any head or facial movements. Sit or stand as still as possible in the position as instructed. Maintain this position for 8 seconds; then resume normal breathing.

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part



Test Menu

5 Test Menu

In this chapter you will find information about the Test Menu and Protocols.

5.1 Pre-Test

5.1.1 Introduction

The pre-test is not a requirement, but rather a tool that can be used to familiarize the test subject with the fit test, to conduct donning exercises, and to let the test subject quickly see how donning affects fit factor. The pre-test can also be used to “qualify” a mask before beginning a protocol. The Quantifit can quickly check fit factors on different sizes and models of masks to determine the best-fitting respirator.

This introductory section contains the following:

- Information shown on the display when running a pre-test. (See *instructions on [running the pre-test](#)*.)
- Challenge pressure and respirator mask pressure definitions.
- Explanations of the pre-test parameters: inspiratory work rate, respirator mask type, cartridge type, and test subject’s gender. (NOTE: *The minimum passing fit factor is a parameter for protocols only; therefore, see the [Parameters](#) section for instructions on how to change the minimum passing fit factor.*)
- When the minimum passing fit factor is changed for protocols, it affects the pretest results. (See the [Pre-test Results section](#).)
- From the MAIN MENU, select the TEST MENU. Turn the Optical Sensor Knob or use the cursor arrow keys on the keyboard highlight “Pre-Test” on the TEST MENU. The following display appears:

TEST	EDIT PROTOCOL	SYSTEM	UTILITY
Exit	SCBA Protocol	Custom 2	
Pre-Test	CBRN Protocol	Mask Integrity	
Redon Protocol	CSA Protocol		
MIL Protocol	Custom 1		

Run a Single Test Exercise.

Next, press the key, and the display shows:

IMPORTANT:

Inhalation valves must be PROPPED OPEN or REMOVED from the respirator mask prior to the Fit Test! Press Enter to continue.

Press any key to continue, and the display looks like this:

```
58 | PREPARE RESPIRATOR (PRE-TEST)
  0 | Don the mask, adjust straps and connect
    | the dual tube. When ready, take a breath
    | and hold. Press trigger to seal valve and
    | start the test.
    |-----|
    | WR:200 Mask:HM C:Med Male
```

The two numbers in the upper left corner of the above-illustrated display indicate the challenge pressure and respirator mask pressure.

The challenge pressure (58, above) is located immediately above the respirator mask pressure (0, above). See next page for details about these pressures and parameters.

5.1.2 Challenge Pressure

- For PRE-TEST, and CUSTOM 1 AND CUSTOM 2 PROTOCOLS the Quantifit calculates the negative pressure that would be produced in the respirator mask during inhalation, according to operator-selected parameters.
- For the REDON, MIL, and SCBA protocols, the challenge pressure is fixed and is not a factor of operator selected parameters.
- The challenge pressure is equal to the pressure produced in the respirator mask during inhalation, and it appears (in hundredths of an inch of water) in the upper left portion of the display during the pre-test.
- The challenge pressure is the pressure at which the leak rate measurement is made.

5.1.3 Respirator Mask Pressure

The Quantifit monitors the respirator mask pressure via the PRESSURE port (located on the front panel).

The respirator mask pressure appears (in hundredths of an inch of water) below the challenge pressure in the upper left portion of the display.

5.1.4 Pre-Test Parameters

The operator specifies values for four parameters: inspiratory work rate, respirator mask type, cartridge type, and test subject's gender.

These parameter values are used directly in two Quantifit calculations: modeled breathing rate (which is then used to calculate the fit factor) and challenge pressure.

Before you begin the pre-test, use the options listed below to set the parameter values. (An explanation of each parameter follows this list.)

WR: Select the inspiratory work rate.

Msk: Select the respirator mask type.

C: Select the cartridge type.

Male: Select the test subject's gender.

5.1.5 Explanation of parameters

WR:

The inspiratory work rate has the largest influence on internal respirator mask pressure. It is measured in units of kcal/hr (energy consumed).

When a person expends more energy (works harder), he breathes harder, causing greater airflow through the cartridge. This increased airflow results in a higher-pressure drop.

Make an estimate of the work rate that the test subject experiences under normal working conditions. Turn the Optical Sensor Knob to highlight WR, and then push on the knob to make a selection. Scroll through the various options.

- 100 kcal/hr Light – standing still or sitting at ease.
- 200 kcal/hr Moderate – walking (casual) without a load.
- 300 kcal/hr Heavy – walking with or moving a light load.
- 350 kcal/hr Extreme – walking with or moving a heavy load, climbing stairs, digging, etc.

Msk:

The Quantifit tests two types of respirator masks.

- FF Full Face or Full Mask
- HM Half Mask

Because the full-face respirator mask has a CO₂ accumulation in the dead space, the test subject must take harder, deeper breaths to compensate for the lower oxygen content. Deeper breaths mean a higher instantaneous airflow rate through the filter cartridge. Challenge pressure, the pressure differential across the filter cartridge, is directly proportional to the airflow rate through the cartridge.

C:

The cartridges are classified into four categories:

- Low Dust/mist filter
 - Medium Chemical or HEPA
-

- High Combination of chemical and HEPA
- NA Respirator masks that do not use cartridges; for example, SCBA and PAPR

The pressure drop across the cartridge is a function of cartridge resistance and airflow rate; therefore, the higher-density (more resistive) cartridge causes a greater pressure drop across the face-to-facepiece seal.


Male/Female

Men and women both breathe the same volume of air (for a given work rate). They do, however, have different inhalation rates. A male inhales faster, which causes a higher instantaneous flow rate to occur and results in a higher challenge pressure.

5.1.6 Running the Pre-Test

- Set parameter values as explained in the previous section PRE-TEST, Pre-Test Parameters.
- Review the breath-holding procedure with the test subject.
- Complete steps 1–4 in [Preparing the Quantifit for Testing](#).
- Complete steps 1–5 in [Getting Started](#), *Preparing the Respirator for Fit-Testing*.
- Have the test subject don the mask and adjust the straps to achieve a good fit.
- Make sure the test subject is seated or standing comfortably with shoulders facing the Quantifit.
- When the test subject is ready, have him take a breath, then press the trigger button.
- There are two beeps. On the second beep, instruct the subject to release the trigger button and to breathe normally and relax.

During the pre-test, a pressure trace appears as shown below:

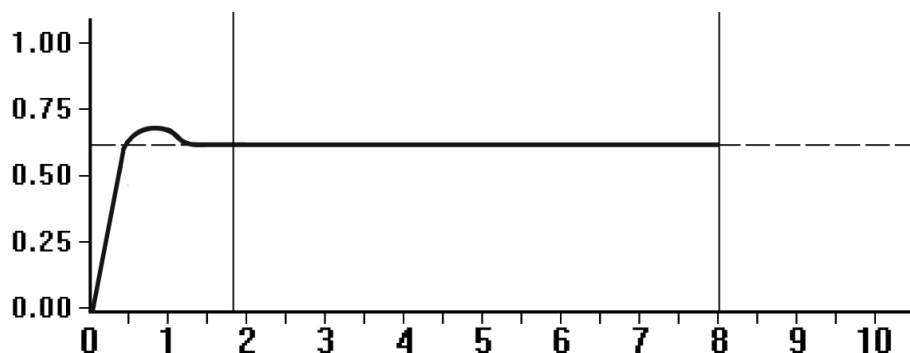

The Quantifit measures respirator mask leakage after the pressure in the mask stabilizes at the challenge pressure.


The two beeps signify the following:

- The first beep (visually indicated by the first vertical line) signifies that the challenge pressure has been reached.
- The second beep (visually indicated by the second vertical line) signifies the end of the test.

5.1.7 Pre-Test Results


The pre-test results are illustrated below and on facing page.

If the leak rate of the respirator mask yields a measurable fit factor, the display will look similar to this:

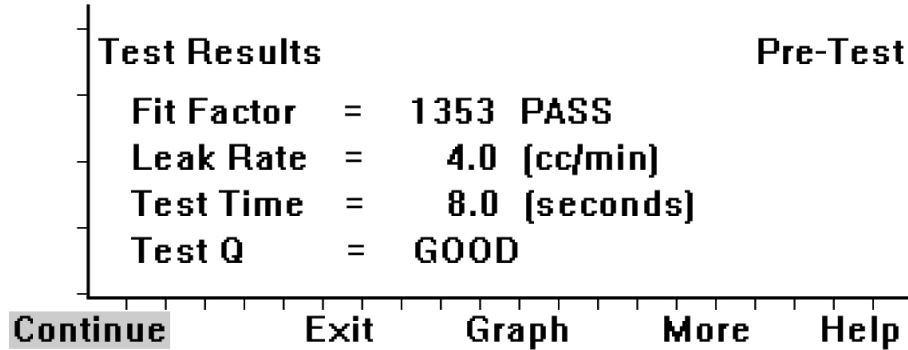

If the leak rate is so great that a fit factor cannot be measured the display will read “NO FIT (fit factor <x),” where x is the lowest fit factor that can be measured for the particular set of parameters. Repeat the pre-test (see instructions below.)

- Select (MORE) for additional information as shown below:

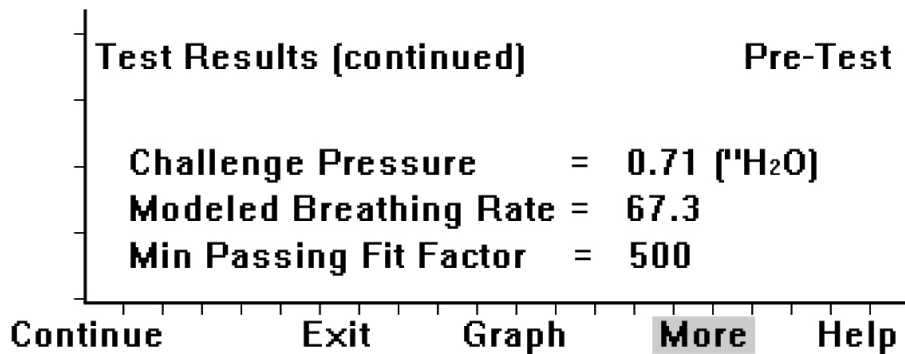

- * To change the minimum passing fit factor, refer to [PARAMETERS. Editing Parameters.](#)

- Press (MORE) again, and the pressure trace is shown again:

5.1.8 Repeat the Pre-Test

It is recommended that the user keep repeating the pre-test until successful test results are achieved, that is, a “GOOD Test-Q” and a passing fit factor.

Press (CONTINUE) to repeat the pre-test.

5.1.9 Fit Factor

The first test result is the calculated fit factor (FF), the ratio of the modeled breathing rate to the measured leak rate.

$$\text{Fit Factor} = \frac{\text{Modeled Breathing Rate (cc/min)}}{\text{Measured Leak Rate (cc/min)}}$$

The direct leakage measurement of the Quantifit is superior to the aerosol approximation methods because the leakage measurement isn't dependent on aerosol particle-size distribution.

Notice the word "PASS" or "FAIL" next to the fit factor:

- FAIL indicates that the calculated fit factor is less than the *Minimum Passing Fit Factor* (explained on next page).
- PASS indicates that the calculated fit factor is equal to or greater than the *Minimum Passing Fit Factor* (explained on next page).

5.1.10 Leak Rate

The next test result is the leak rate. This is directly related to facepiece fit. It is from this leak rate measurement that all fit-factor calculations are made. Leak rate is specified in cc/min.

5.1.11 Test Time

This number represents the time from start to finish during which the subject holds his or her breath. The test time does not exceed 8 seconds. The total test time in seconds appears on the display beneath the "Leak Rate."

5.1.12 Test-Q

The Test-Q, or test quality, is an indication of acceptability of the fit-test results. Accurate results depend on a constant pressure being sustained during the test measurement interval.

To achieve a "GOOD" test quality, there must be enough consistency in the measurement from which the Quantifit will measure a consistent leak rate. Large pressure variations during the test will result in a "BAD" test quality. When this should happen, the user is instructed to try the step once again.

5.1.13 Additional Parameters

Additional parameters relating to the test can be viewed by using the optical sensor knob to scroll over to the "More" selection. The additional test information includes the following items:

5.1.13.1 Challenge Pressure

Shown in hundredths of an inch of water, the challenge pressure is the pressure at which the leak rate measurement is made. Challenge pressure is explained in the [Pre-Test](#), Challenge Pressure section.

5.1.13.2 Modeled Breathing Rate

The modeled breathing rate is the rate, in liters per minute, at which an individual breathes under the conditions specified in the protocol.

For Custom 1 and Custom 2 Protocols, the modeled breathing rate is set by the same parameters as discussed in the pre-test: work rate, respirator mask type, cartridge type, and test subject's gender. The modeled breathing rate is used to calculate the fit factor.

For the REDON, MIL, AND SCBA Protocols, challenge pressure and modeled breathing rate are pre-set and hence are unaffected by changes in the parameters.

5.1.13.3 Minimum Passing Fit Factor

The minimum passing fit factor is the minimum fit factor required for a passing result. This parameter is operator-specified as explained in the PARAMETERS, Editing Parameters section and displayed here. The PASS/FAIL indication that appears next to the fit factor, is calculated based on this parameter number.

5.2 Protocols

Now that you have completed several successful pre-tests, you are ready to begin running a protocol. The protocol is a comprehensive test that accurately measures the fit of a given respirator. Consistent fit-test results are achieved by using a protocol.

The protocol is a sequence of up to 18 fit tests or exercises. The Quantifit stores four standard and two custom protocols in nonvolatile memory. After all steps in a protocol have been completed, the fit-test results are combined to calculate an overall fit factor for the protocol. The protocol results can be printed.

5.2.1 Which Protocol Should I Use?

	REDON	SCBA	MIL	CBRN	CSA SCBA
Half Mask	√				
Air Purifying	√				
Gas/Escape	√				
PAPR	√				
SCBA		√			
Military			√	√	
CBRN				√	
Canada SCBA					√

This graphic outlines the recommended protocols when using the Quantifit. See [Preprogrammed protocols](#) to understand the differences between each protocol.

5.2.2 Preprogrammed Protocols

In September 2004, OSHA approved the Redon protocol for use only with CNP instruments. This 5-step protocol uses the strengths of Controlled Negative Pressure to assure that employees are achieving a proper fit. This protocol also reinforces proper donning techniques as the test measures the fit from three separate donnings. The following four protocols all use the same 5 steps during the protocol. The difference in each comes from the modeled breathing rate. The Redon protocol, as approved by OSHA (1910.134 App. A), requires that the fit is measured against a Challenge Pressure of .58 H₂O. The MIL (Military) protocol increases the pressure to 1.0 H₂O and the SCBA protocol increases all the way to 1.5 H₂O. With the two latter protocols, it is expected that the respirator wearer will be under more duress on a consistent basis. Because of this, the modeled breathing rate has been increased to match the estimated breathing rate of those respirator wearers. The Canadian Standards Association (CSA) approved the Redon protocol in October, 2011. The CSA SCBA protocol is slightly different from the U.S. counterpart in that it requires a minimum fit factor of 1,000, rather than the OHD recommended/U.S. 500 fit factor.

Redon Protocol

Challenge Pressure (0.58 in. H₂O)
Modeled Breathing Rate (53.8 l/min.)

STEP 1: Face Forward

For this first step, after the test subject has selected a respirator and donned it properly, he or she will face forward for this measurement. The employee should be instructed with the proper method for holding breath and remaining still during the test measurement.

STEP 2: Bend Over

The test subject will bend over at the waist and face the floor during this measurement. This step determines if gravity pulling on the mask will create more leak than is permissible. The test subject holds breath and remains still during the test measurement.

STEP 3: Shake Head

The test subject will shake his or her head vigorously from side to side for approximately 5 seconds. The test subject is also required to blow out vigorously or yell while shaking head. The purpose of this exercise is to determine if the mask is unseated, if it will reseat itself properly on the test subject's face. For the test, the subject will stop shaking his or her head, hold breath and remain still during the test measurement.

STEP 4: Redon 1

The test subject will release all straps, remove the respirator (doff it), and then redon the respirator. The redon steps are very effective in determining how well a mask fits according to proper or improper donning techniques. Once the respirator is properly donned, the subject holds breath and remains still during the test measurement.

STEP 5: Redon 2

This step is identical to Redon 1. This gives the test subject one more donning with which to assure proper fit.

MIL Protocol

The MIL protocol procedure is identical to the REDON above but has a higher stress level than the REDON. The MIL protocol is designed to be used in military applications, where mask stress is high and fit requirements are more critical. This extra measure of protection is expressed in the increased values of:

Challenge Pressure (1.00 in. H₂O)
Modeled Breathing Rate (55.8 l/min.)

SCBA Protocol

The SCBA protocol procedure, like the MIL, is identical to the REDON above. It is designed to place the mask under extraordinary stress to be sure the mask can provide protection in life threatening situations where the SCBA is used. This increased exposure protection is better evaluated by values of:

Challenge Pressure (1.50 in. H₂O)
Modeled Breathing Rate (93.1 l/min.)

CBRN Protocol

The CBRN protocol procedure, like the MIL and SCBA, is identical to the REDON above. It is designed to place the mask under extraordinary stress to be sure the mask can provide protection in life threatening situations where the respirator is used. The CBRN protocol requires a minimum passing fit factor of 2,000, and evaluates the respirator fit by values of:

Challenge Pressure (1.00 in. H₂O)
Modeled Breathing Rate (55.8 l/min.)

CSA SCBA Protocol

The CSA Protocol was developed to meet the current standards of the Canadian Standards Association, Z94.4-02. The latest version of this standard was written in 2011. The only requirement that differs from the U.S. SCBA protocol is that the CSA standard requires a minimum fit factor of 1,000.

Challenge Pressure (1.5 in. H₂O)
Modeled Breathing Rate (53.8 l/min.)

5.2.3 User Definable Protocols

CUSTOM 1 AND 2

The Custom 1 and 2 protocols are designed to be defined by the user. They consist of up to 18 programmable steps of exercises or test measurements. The parameter values for the tests are determined by the selection of four parameter variables (see PARAMETERS). These protocols provide the user with the option to customize a protocol to meet his specific needs. The following chapter will explain in great detail the procedure to set up the custom protocols.

Challenge Pressure (VARIABLE in. H₂O)
Modeled Breathing Rate (VARIABLE l/min.)

5.2.4 Running a Protocol

Use the optical sensor knob to select the desired protocol from the TEST menu. When your selection is made, press on the knob to select.

If a keyboard is detected, the Quantifit will prompt the user to enter test information including:

- Test Subject ID
- First Name
- Middle Initial
- Last Name
- Mask Manufacturer
- Mask Model
- Mask Size
- Mask Type
- Test Operator

The Quantifit will display the message: **IMPORTANT: Inhalation valves must be PROPPED OPEN OR REMOVED** from the respirator mask prior to the fit test! Press Enter to continue.

It is very important that this step is put into practice. Examine the interface where the fit test adapters will be mounted onto the respirator. If there is an inhalation valve visible when looking into the respirator, this valve will interfere with the fit test and must be propped open or removed.

If the inhalation valve is easily removed and replaced, this is the recommendation. If it is difficult to remove and replace the valve, it should be held open with some small apparatus. You may use whatever is available for you or whatever will successfully keep the valve open during the test. Some suggestions include cut up drinking straws or coffee stirrs, rubber tubing, or paper clips. These items MUST be removed at the conclusion of the test.

If the inhalation valves are not opened or removed, the Quantifit cannot exhaust air from the respirator to create a negative pressure. This could potentially create an invalid test by only measuring the distance between the dual tube and the inhalation valve.

If a keyboard is not being used, the user will have to select the mask type. HM = half mask, FF = Full Face. This selection will set the minimum passing fit factors to 100 and 500 respectively.

Follow these steps to run a protocol:

1. Review the [breath-holding procedure](#) with the test subject.
2. Complete steps 1–4 in [Preparing the Quantifit for Testing](#)).
3. Complete steps 1–5 in [Getting Started](#), Preparing the Respirator for Fit-Testing.
4. Follow the on-screen prompts that instruct the test subject on activity to perform for each test step.
5. From the Main Menu, select the Test Menu; then select the protocol you wish to use.

5.3 Test and Protocol Results


There are two types of protocol results: test results and protocol results. The test results appear on the display only after each test-step is completed.

The protocol results appear on the display after all test-steps and exercise-steps are completed. The protocol results are a combination of each teststep's test results. From this combination of test results, the Quantifit calculates the "average equivalent fit factor" for the test protocol.

5.4 Test Results

Each test result is explained under PRE-TEST, Pre-Test Results.

If the leak rate of the respirator mask yields a measurable fit factor, the display will look similar to this:

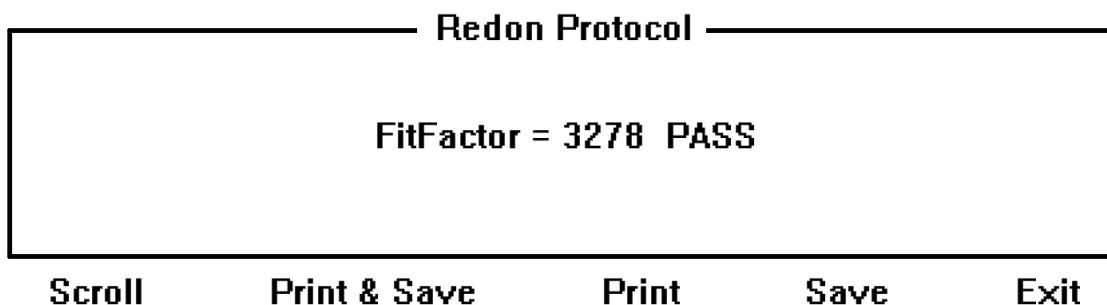

This screen displays the protocol name at the top, the over all fit factor, pass or fail, and then the following options to finish out the test:

Scroll

Scroll will allow you to scroll through the results of the test you just performed. Click on scroll and rotate the knob one click clockwise, and it reveals the date and time of the test as in the following graphic.

Redon Protocol	
Test Date:	07/15/08
Test Time:	04:06 PM
Scroll	Print & Save
Print	Save
	Exit

The following screen displays Mask Type, Subject Gender, Challenge Pressure and Modeled Breathing Rate:

Redon Protocol	
Mask Type	= Half Mask
Subject Gender	= Male
Challenge Pressure	= 0.58 ("H ₂ O)
Modeled Breathing Rate	= 53.8 (LPM)
Scroll	Print & Save
Print	Save
	Exit

You can then scroll through each step of the protocol as seen in step 1 below:

Redon Protocol			
Step	Type	Description	
1	Fit Test	Face Forward	
Leak Rate	Duration	Fit Factor	Quality
42.2	8.0 Seconds	2206	GOOD
Scroll	Print & Save	Print	Save
			Exit

Print & Save

Print & Save will save the test to the Datalog and print a copy.

Print

Print will print a copy of the results without saving to the Datalog.

Save

Save will save the test to the Datalog without printing a copy.

Exit

Exit will take you out of the results screen. If you have not selected Save or Print & Save, you will be prompted with a warning: Exit Test – Are you sure? Test data not saved yet! You can choose Yes or No.

If you choose Save or Print and Save, you will have the option to perform another fit test. This will begin a new test with the same protocol selected as the previous test.

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

Edit Protocol Menu

6 Edit Protocol Menu

6.1 Introduction

This section contains instructions on how to use the EDIT PROTOCOL MENU to make adjustments to the protocol and parameters. Explanations are included on how to:

- View, Build, Edit, and Print a Protocol.
- View, Edit, and Print Parameters.

6.2 Edit Protocol Menu

On the main menu of the Quantifit, you can use the Optical Sensor Knob or keyboard to select EDIT PROTOCOL. You will be presented with a screen that shows the 5 standard protocols along with 2 custom protocols and a Parameters selection.

TEST	EDIT PROTOCOL	SYSTEM	UTILITY
Exit	CBRN Protocol		Parameters
Redon Protocol	CSA Protocol		
MIL Protocol	Custom 1		
SCBA Protocol	Custom 2		

Edit, print, or view Redon Protocol

To edit any of the existing protocols, you may choose that protocol and press the Optical Sensor Knob. In this example we will enter the Redon Protocol. When selecting Redon Protocol, you will see the below options:

Redon Protocol			
EDIT	PRINT	VIEW	HELP
PARAMETERS	RENAME	EXIT	

Select desired function

You can choose to edit, print, view, help, Parameters, rename or exit this menu. Each of these options are explained in detail.

Edit Protocol

Select the EDIT function to edit an existing protocol, or to create or define the custom protocols. When you enter the option to edit a protocol, a screen will be displayed to show the current setting, and the changes you are making to that setting. See diagram below for step 1.

Redon Protocol				
	Step	Type	Action	Dur
Current:	1	Test	Face Forward	N/A
New:	1	Test	Face Forward	N/A
Save and Exit			Cancel and Exit	

Select Step to Edit

The cursor is highlighted on New Step 1. To change a different step, press on the Optical Sensor Knob, and scroll to the step desired. Press on the knob again, and you can toggle the next field between Test and Exer (Exercise) and Clr (Clear) if you choose to delete that particular step. Finally, move over to the Action to select the desired action. The available actions are all of the standard selections that have been used throughout the history of fit testing. The duration is listed as N/A because this is not a changeable feature. By the definition of the way in which Controlled Negative Pressure works, all tests are preset to measure at 8 seconds.

When you have one step completed, scroll to another step if desired. When the protocol is set, you can select Save and Exit to save that protocol. If you decide to delete the changes you've made, you can select Cancel and Exit to exit this menu and lose the settings you've made.

If Custom 1 or Custom 2 had been selected, you can create up to 18 steps in a protocol if you have specific needs or desire to create a protocol for mask integrity testing or any other function of the Quantifit.

Print Protocol

By selecting Print from the Edit Protocol menu, this will simply print the current settings of the protocol if a printer is connected to the Quantifit.

View Protocol

By selecting View Protocol, you can view the current steps that are assigned to the selected protocol.

You will see listed the first 4 steps to the selected protocol. Steps beyond step 4 can be viewed by scrolling the Optical Sensor Knob.

View Redon Protocol			
Step	Type	Action	Dur
1	Test	Face forward	N/A
2	Test	Bend over	N/A
3	Test	Shake head	N/A
4	Test	Re-don 1	N/A

Parameters

This function allows you to set the default mask type (half or full), and set the minimum passing fit

factors for half and full. It is recommended that this not be changed, as the default of 100 is the minimum passing fit factor for half masks. You must remember that CNP produces very conservative fit factors, and 100 on the Quantifit may equal up to 1,000 using Ambient Aerosol or Nuclei Counting technologies.

Rename Protocol

This function allows you to rename the protocol so that your newly assigned name will now appear on the test menu. This is especially helpful if you want to change Custom 1 or Custom 2.


Help and Exit

These choices will lead you to the obvious place. If you choose Help, this will bring you to our on-board help menu. Exit will bring you out to the Edit Protocol Menu.

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

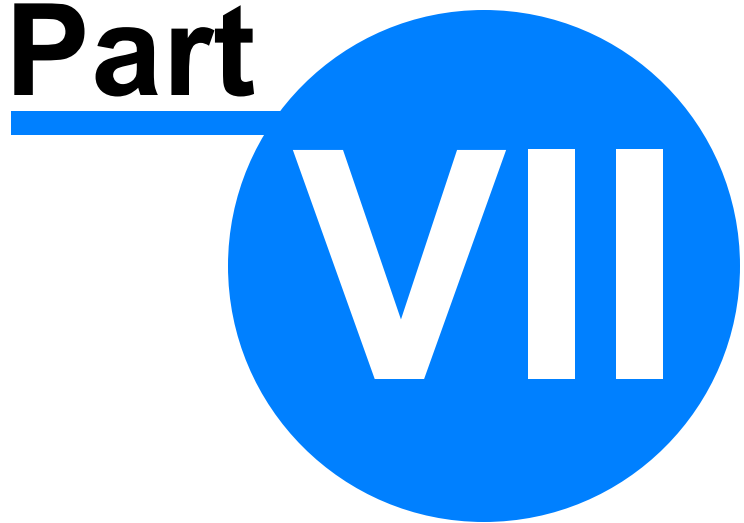

System Menu


7 System Menu

7.1 Introduction

This section contains instructions on how to use the SYSTEM MENU to make adjustments to the system-level parameters. Explanations are included on how to:

- Set the clock.
- Reset protocols and parameters to the factory default values.
- Calibrate the dual tube assembly.
- Zero the pressure transducer.
- Add or edit operator name.
- Setup Quantifit parameters such as view the annual calibration date, change auto advance values, adjust the speaker volume, adjust the screen contrast, and view the version of firmware.


When you scroll to the System menu, you will see the choices displayed on the following diagram. This section will explain operation in each of these selections.

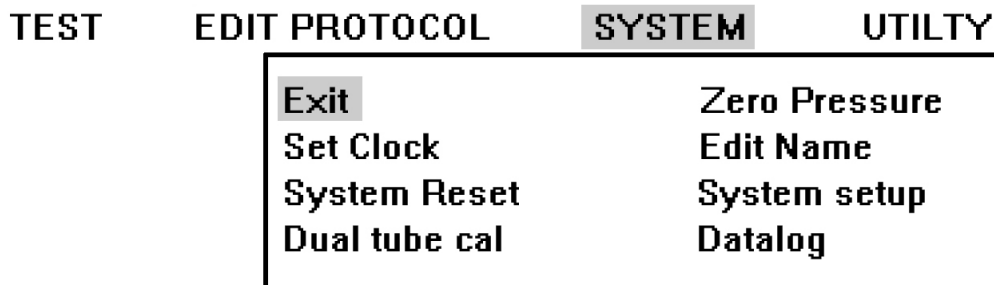

Exit this menu

7.2 Set Clock

Set Clock allows you to adjust the time and date of the clock. All printed reports made by the Quantifit include a time and date stamp; therefore, it is important to maintain an accurate date and time.

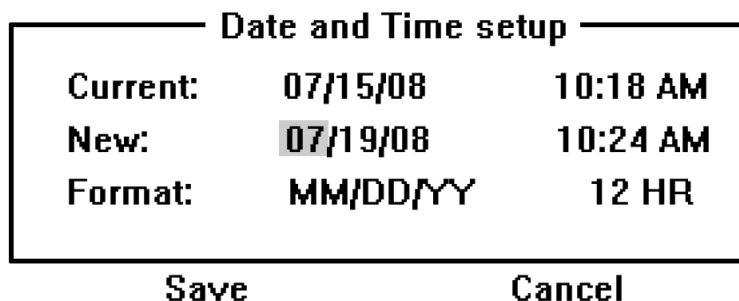

When you open this menu, you'll notice that the month is highlighted. To change this value, press on the Optical Sensor Knob, and then scroll left or right to the appropriate value. Press on the knob again to

accept that value. Then scroll to the right to change day, year, time and AM or PM.

On the Format row, you can choose the way in which you would like this data displayed. For the date, you can choose between MM/DD/YY or DD/MM/YY. For the time, you can choose 12 HR or 24HR.

When you have correctly set the time, choose Save at the bottom of the screen.

7.3 System Reset

The System Reset option will force all settings back to the way they were when the unit was first manufactured. Any alterations you might have made in any of the settings, these will be set back to the default settings. If you created a new protocol, this protocol will be lost by pressing System Reset.

You will receive one warning, "WARNING: System reset will re-load factory default settings. All custom Protocols will be lost! Are you sure?" You can select System Reset or Cancel.

7.4 Dual Tube Calibration

The Dual Tube calibration is the same function as the Daily Calibration. The Quantifit prompts you each day to perform a daily calibration. If you chose to proceed without the daily calibration, but want to do it at a different time, this is where you would go to perform that calibration. There may be other times where you might need to perform the calibration to ensure the accuracy of the instrument.


To accurately measure respirator-mask-fit, the leakage attributed to the triple tube assembly leak orifice must be removed from the total measured fit-test leakage value. Calibrating the dual tube assembly accomplishes this.

The triple tube assembly is terminated with an airtight section of tubing. The Quantifit removes air at eight different flow rates. The pressure developed across the leak orifice is measured at each flow rate and stored in an array of calibration data.

To cancel the effect of orifice leakage during a fit test, an interpolating algorithm uses the array of calibration data to determine orifice leakage at the fit test's particular challenge pressure. This calculated-leakage value is subtracted from the measured-leakage value.


Performing the Calibration:

Select Dual Tube Cal from the SYSTEM MENU. You will see the screen as displayed below.

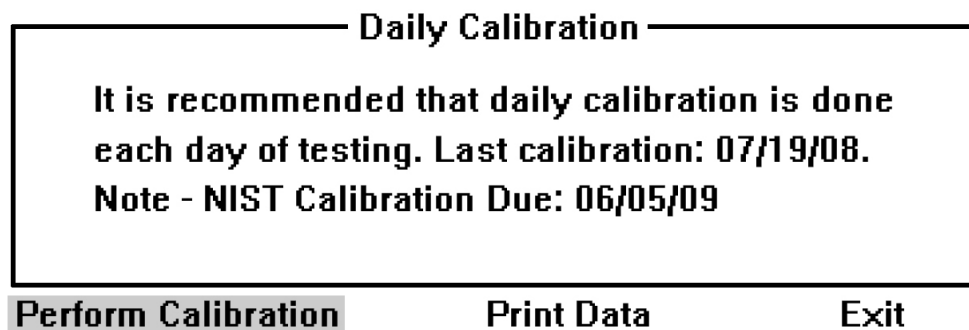


This screen will show the user the last time the unit was calibrated. This screen also shows when the annual NIST Calibration is due. You may Perform Calibration, Print Data, or Exit. If you Print Data, it will print out the last calibration performed on the unit.

Select Perform Calibration to continue with the calibration.

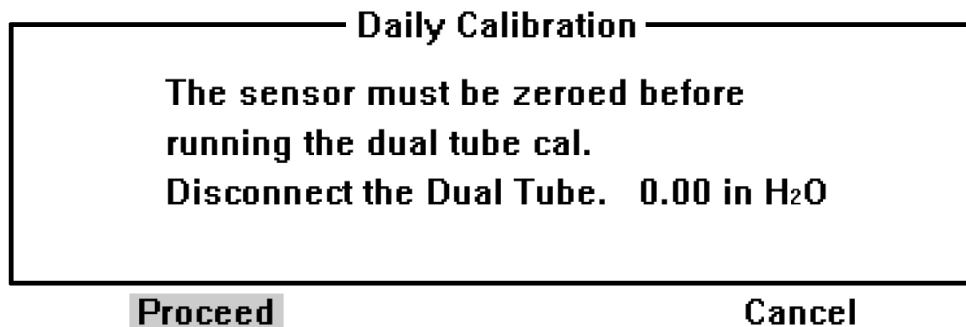

The first part of the calibration performs a Zero Pressure. In order to do this part, you are instructed to remove the tube assembly from the instrument. Press the Optical Sensor Knob to proceed. You will then be instructed to “Connect dual tube assembly to ‘Flow’ and ‘Pressure’ on the front and to ‘Dual Tube Check’ ports on the back of the unit.” This procedure measures only the two clear tube portion of the triple tube. When connecting to Pressure and Flow on the front of the unit, the male and female connectors must be matched properly. On the back of the unit, the other two ends are interchangeable and it does not matter which port each tube is connected to.

When both ends of the clear tube have been secured, press the knob on Proceed to continue. This calibration check will take approximately one minute to complete. The Quantifit will force different pressures through the instrument and tubing assembly and measure the leakage of the leak orifice. After the calibration has been completed, you will see a screen that confirms the calibration, and reminds you to remove the tubing from the back of the unit.

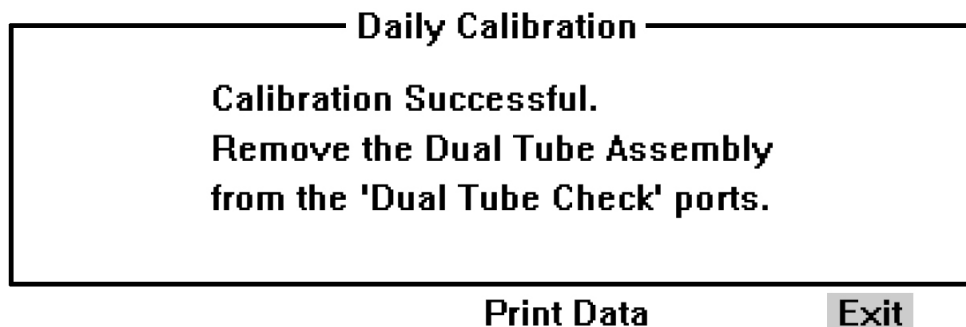

At this time you may Exit from the Dual Tube Calibration, or Print the report. Or you may return to the calibration at any time to re-print the calibration data.

Calibration Errors

If an error should occur and the Quantifit cannot successfully perform the calibration, the unit may not be operating properly. Check all connections, and try the calibration a second time. If it should fail a second time, you must contact OHD for further instructions. The following errors may occur:

ERROR–Bypass orifice not within spec. The message appears when there is a problem with the tubing. The leak orifice may be out of the tolerance range, or there may be a leak within the integrity of the tubing. If you have another tubing set, replace the tubing and try an additional calibration.

ERROR–Check connections and repeat. Reconnect quick-disconnect adapters and repeat.

ERROR–Check transducer calibration. Go to the next diagnostic routine, “Zero Pressure,” and

remove the offset from the pressure transducer.

ERROR—Replace orifice if necessary. Replace the dual tube assembly.

When the Quantifit successfully performs a calibration, this ensures that the unit is working properly and the leak measurements are within tolerance. If an error occurs, this would mean that there is a problem in the system and it must be corrected before successful fit testing can be accomplished.

7.5 Zero Pressure

“Zero Pressure” removes the offset from the pressure transducer. This step is identical to the first step of the Daily Calibration and Dual Tube Calibration. The Zero Pressure option may be used when the user would like to eliminate any offset without going through the Dual Tube Calibration.

When selecting Zero Pressure you will be instructed to remove the Dual Tube from the instrument. Press the Optical Sensor Knob to proceed. After one second, a message will be displayed, “Zero Adjust Successful.” Any offset has been removed from the transducer.

There is an acceptable range of zero-offset values. Exceeding that range of values indicates that the dual tube assembly is connected, or that there is a problem in the pressure transducer or the conversion circuit. Fit-testing is inhibited at these times.

If the dual tube assembly is disconnected an error message occurs, contact OHD to determine if the Quantifit needs service.

7.6 Edit Name

If a keyboard is in use during fit testing, the operator will input his or her name at the beginning of the test. If a keyboard is not being used, the user can enter his or her name into the Quantifit so that it will print out on the report.

Select Edit Name, and you will see the following screen:

— Edit Operator's Name —

Done Clear Cancel

If a name is already present in this screen, you can easily “type over” the existing name, or go to “Clear” to delete the name. To enter a name one letter at a time, you must press on the Optical Sensor Knob to “enter,” and then scroll through the alphabet either clockwise or counterclockwise until you reach the desired letter. When the desired letter has been selected, you may press the knob to confirm that letter, and then move one space to the right to continue with the next letter. When the name has been fully entered, select Done. See below.

— Edit Operator's Name —

John Smith

Done Clear Cancel

7.7 System Setup

System Setup contains options and selections pertaining to the way your Quantifit performs. These functions in no way affect performing fit tests. Options include Auto Advance Fit Factors, Screen Contrast and Speaker Volume.

NIST Calibration Date

The NIST calibration date displays the last time the instrument was calibrated to NIST (National Institute of Scientific Testing) standards. This calibration is recommended annually. The Quantifit will display the calibration due date upon startup when the instrument is within 60 days of calibration expiration.

HM Auto Advance Fit Factor

When performing a fit test, the Quantifit recognizes when the test subject has passed a protocol step, and automatically advances to the next step. For the half mask, OSHA determines that the fit factor must be a minimum of 100. If the fit factor is greater than 100, the Quantifit will move to the next step. If it is below 100, the Quantifit will require that the user retry the step. If you choose to change the minimum requirement to higher or lower than what OSHA has determined, you can change it here. This value does not change the minimum passing criteria, it only changes the value in which the Quantifit will automatically move the user to the next step of the protocol.

If you wish to bypass the auto-advance feature, you may set the value to "0." This will require the user to individually save each step and the Quantifit will not auto-advance.

FF Auto Advance Fit Factor

When performing a fit test, the Quantifit recognizes when the test subject has passed a protocol step, and automatically advances to the next step. For the full-face mask, OSHA determines that the fit factor must be a minimum of 500. If the fit factor is greater than 500, the Quantifit will move to the next step. If it is below 500, the Quantifit will require that the user retry the step. If you chose to change the minimum requirement to higher or lower than what OSHA has determined, you can change it here. This value does not change the minimum passing criteria, it only changes the value in which the Quantifit will automatically move the user to the next step of the protocol.

If you wish to bypass the auto-advance feature, you may set the value to "0." This will require the user to individually save each step and the Quantifit will not auto-advance.

Test Results

Test result determines the way in which the fit factor is calculated. The native technology to the Quantifit is Controlled Negative Pressure (CNP). This measurement is calculated by taking the measured leak rate, dividing it by the modeled breathing rate, and this will give you the fit factor. (See page 20)

If you were to use the "older" approved method of fit testing, Ambient Aerosol (AA), the fit factor is calculated much differently. The AA instrument counts particles outside the mask and then compares it to particles inside the mask (with the assumption that the particles in the mask leaked in through an opening and that it's actually able to "see" a proper sampling of those particles.) The fit factor is calculated by dividing the particles outside the mask by the particles inside the mask, and this will calculate the factor.

Studies show that the fit factors calculated by CNP are at least ten times less than those fit factors calculated using AA or Nuclei Counting technology. The "Aerosol Compatibility" selection will recalculate the CNP fit factor to more directly compare it to a fit factor that would have been determined by Ambient Aerosol tests. However, instead of using the proven ten times factor, the

Quantifit is much more conservative by using a four-times factor.

The default and recommended selection for Test Results is set to Standard Mode for the CNP calculation.

Test Device

The selections for Test Device are Mask or Test Cylinder. For demonstration purposes, one may use a test cylinder or leak canister to emulate a fit test. When using a leak canister, the Quantifit is not able to do the initial exhaust of air as with a respirator. So for more accurate measurements, it's best to use the test canister selection when using such to demonstrate the Quantifit. This is the only time Test Cylinder should be used. But even if the user selects Test Cylinder and forgets to change it, the setting will default to Mask the next time the Quantifit is powered up.

Contrast Adjust

This selection is for the contrast of the Quantifit display. At times you may need to change this setting according to your lighting situation. The default setting is 10, but this can be changed from 0 (no contrast) to 20 (maximum contrast.)

Speaker Volume

Normal operation of the Quantifit produces many electronic beeps and signals for various features. If you are operating the Quantifit in a noisy room, you may find the need to increase the volume of these signals. Or if you are in a quiet room and the signals are too loud, you may decrease the volume. The default setting is 2, which is moderately quiet. This range is from 0 (no sound) to 20 (loudest).

Firmware Version

The firmware version will display the current version of firmware. If you need technical assistance, the firmware version may be helpful to the technician in determining your specific problem. You may also go to the OHD website, www.ohdusa.com, periodically to make sure that you have the newest version of firmware.

7.8 Datalog

The Datalog displays all the tests that have been saved on the Quantifit. You may store 500 tests in the internal memory. The list of tests is displayed with the most recent test at the top of the list.

WARNING: When test #485 is reached, a message will display, "Datalog almost full. 485/500 records stored. Backup and clear log soon." Once you get to test 500, the Datalog cannot store more tests. Save the Datalog to a memory stick and clear the log.

Datalog Menu				1/474
07/19/08	2:45 PM	Smith	J	
07/19/08	2:40 PM	Johnson	P	
07/19/08	2:38 PM	Williams	R	
07/19/08	2:34 PM	Doe	J	

Scroll View Print Menu File Menu Clear Exit

In the upper right corner, this number represents the test number (in order of newest to oldest) and the total number of tests. In this diagram, the highlighted test is 1 of 474.

Scroll

Press the Optical Sensor Knob to enter the scroll feature. You may scroll anywhere in the list to highlight any specific test. The Optical Sensor Knob has a variable speed, so that the faster you turn it, the faster it accelerates. With a single quick turn, you will find the cursor at the bottom of the list. Press the knob again to exit scroll mode, which will allow you to make another selection from the bottom menu.

View

The view selection will allow you to view the test in the same manner that you could view the test directly after its completion. You can scroll through the screens to see the overall fit factor, test details, and then results for each step. You may also print the results for that individual test.

Print Menu

The print menu selection will print a report of fit tests. When selecting this option, you have a choice to print a highlighted record, or print a log. If you choose the Print Record selection, you will print an individual test. If you select Print Log, you will be prompted to choose to print tests from a specific date that you will specify, or you could Print All to print your entire database. This feature will print a landscape (horizontal) page with each test contained within one line. Each line contains date, time, last name, first name, pass/fail, mask model, mask size, fit factor and leak rate. The report contains 40 tests per page.

File Menu

The file menu option is for transferring data. This feature may be used for various reasons including transferring data to FitTrack software (see “Importing Quantifit Data Into FitTrack” in the software section of this manual, page 69), to transfer the test data to another Quantifit, or to simply keep a safe backup of the test data on your instrument.

The **Save Datalog** feature will save the database to a memory stick when one has been inserted into the upper USB port on the back of the Quantifit. If you connect your memory stick to the bottom USB port, you will receive a message on the display telling you to use the upper USB port. When you save the data, you will be asked to name the file to differentiate it from other possible backups that you’ve already performed. If a keyboard is connected, you may type the name of the file on the keyboard. If no keyboard is connected, you must use the Optical Sensor Knob to assign the name.

Note: When naming the datalog to a memory stick, there is a limit of 8 alpha-numeric characters.

Note: If a memory stick is placed in the upper port during testing, test results will automatically be saved to the memory stick as well as the Quantifit’s datalog. This is a good practice to protect from corrupt data.

The **Load Datalog** option will allow you to select a datalog on your memory stick that will be imported into the Quantifit. You will see a list of the exported information contained on your memory stick.

Clear

If you can confirm that your data has been backed up to your memory stick and you wish to clear the data stored on the Quantifit, you can purge the information by selecting Clear. You will be given one warning “Erase Datalog? Data cannot be restored.” You must select Yes or No to complete this task.

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part



Utility Menu

8 Utility Menu

8.1 Introduction

This section contains instructions on how to use the UTILITY MENU to test various aspects of the Quantifit. In this menu you may also view the cycle count of how many test steps have been performed, reset all changed protocols, and you can print the help file.

Perform a diagnostic check of the Quantifit diagnostic routines listed below:

- Speaker Test
- Keyboard Test
- Display Test
- Printer Test

TEST	EDIT PROTOCOL	SYSTEM	UTILITY
	Exit		Printer test
	Speaker Test		View cycle count
	Keyboard Test		Factory protocol
	Display Test		Print help file

Exit this menu

8.2 Speaker Test

The speaker test will confirm that the internal speaker is performing properly. When selecting this option, you will hear a series of tones. If you do not hear tones, make sure that your speaker volume is not set to 0 in the System Setup menu.

8.3 Keyboard Test

The keyboard test will display a screen in which typed characters should appear. If no characters appear, disconnect and reconnect the keyboard. At that time, you should see a "USB Keyboard Connected" message. If you do not see this sign, the keyboard may be faulty.

8.4 Display Test

When selecting this option, the screen will show full dark for 5 seconds, at which time the screen will return to the normal setting. If you cannot see characters on your screen, check the System Setup menu to make sure the Contrast adjustment is not set to the lowest setting.

8.5 Printer Test

The printer test will print a test page to your printer. If this does not occur, your printer could be connected improperly. Check to make sure that the printer is turned on, and reconnect the printer. You should see a message on the display, "USB Printer Connected." If this does not occur, there may be a problem with the printer, or the printer may not be approved for use with the Quantifit. Check the OHD

web site or call for technical support to determine if this is the problem.

8.6 View Cycle Count

The cycle count is a measure of how many fit test exercises have been performed since the unit was last calibrated. Each time an exercise is completed, the cycle count is incremented then stored in memory.

8.7 Factory Protocol

The Factory Protocol will restore all protocols that may have been changed in the Edit Protocol menu.


8.8 Print Help File

If a printer is connected to the Quantifit, this function will print all the information from the help file to your printer. This may be helpful to keep as a resource rather than going through the on-board help menus.

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

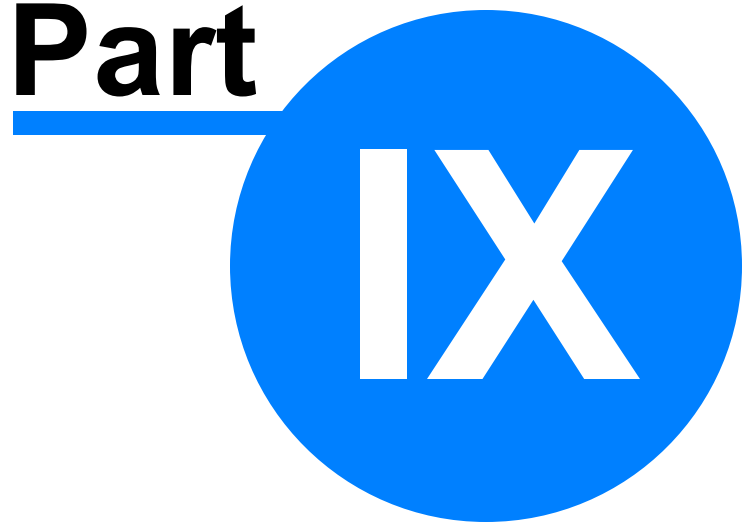

FitTrack Gold Installation

9 FitTrack Gold Installation


This section contains information necessary for installing FitTrack Gold.

9.1 Standard Install (Recommended)

For installation, you must be logged in as a system administrator.


If the installation does not automatically start, open the disc through your computer browser, and double-click on Setup.exe.

The installation files will query the computer to see which prerequisites must be installed.

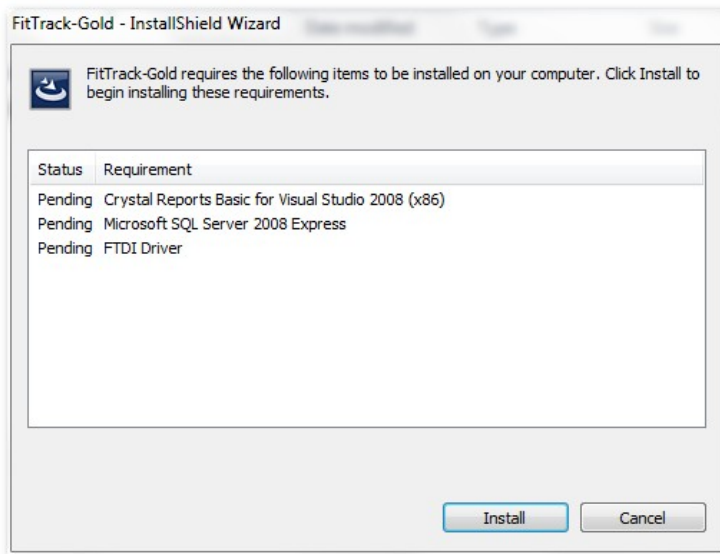


Accept each of the license agreements for individual modules.


If SQL Express installation is required, this may take up to 15 minutes for this portion of the installation.

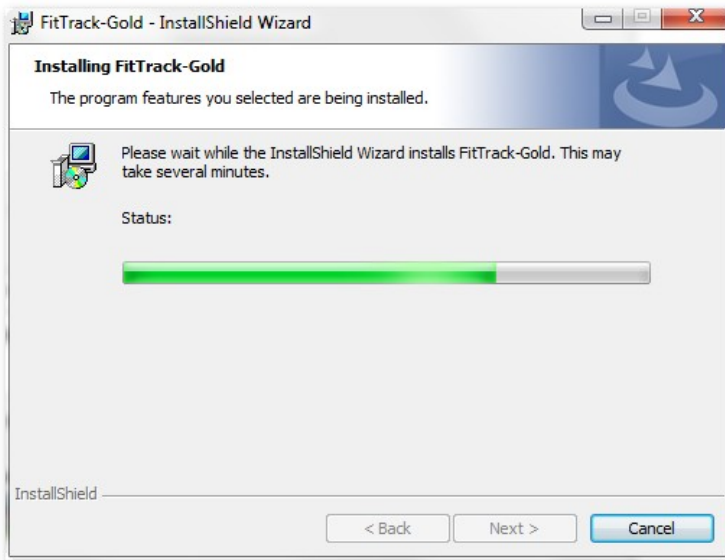

A successful install will state that a database was created successfully.

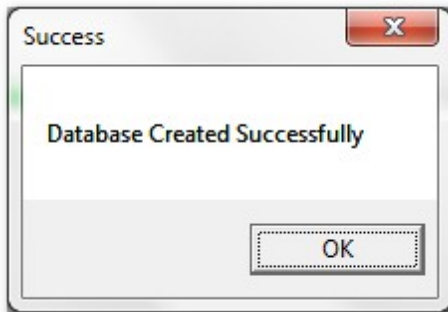

And finally, the confirmation screen.

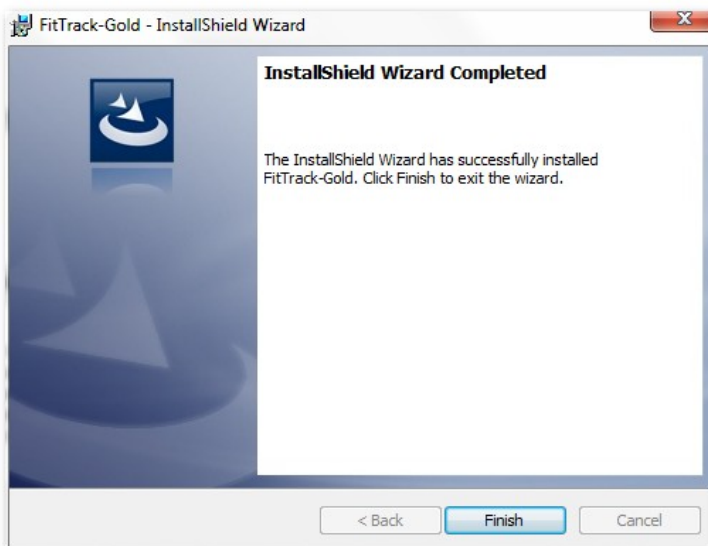

9.2 Custom Install (Advanced)


Custom install may be used for various situations:

- a. To install the FitTrack Gold Database on an existing SQL platform
- b. To change the password and username to something other than the standard default
 - i. Username: sa
 - ii. Password: ohdusa@123


For installation, you must be logged in as a system administrator.

If the installation does not automatically start, open the disc through your computer browser, and double-click on Setup.exe.


The installation files will query the computer to see which prerequisites must be installed.

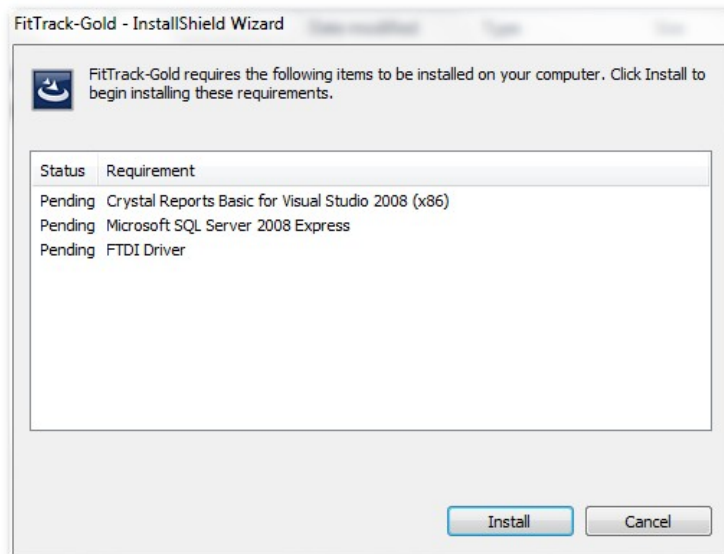


Accept each of the license agreements for individual modules. For Setup Type, choose Custom.

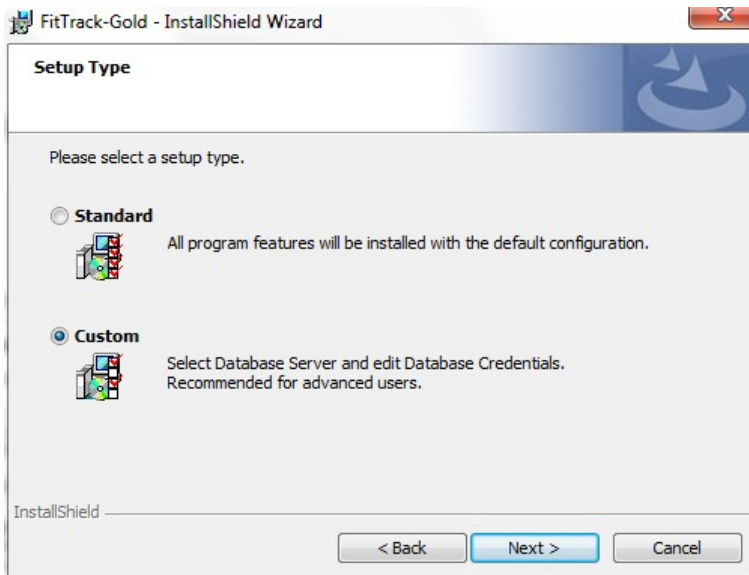


Select change to alter the setup options for the database, and/or click Next.

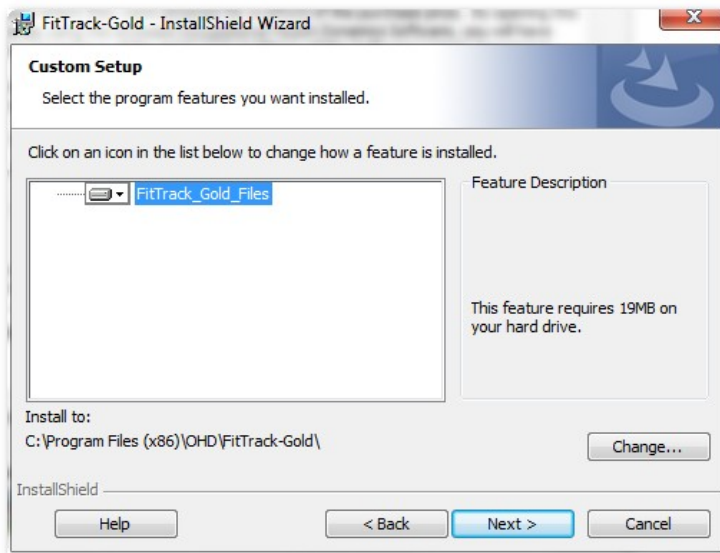

Select the destination for the database.

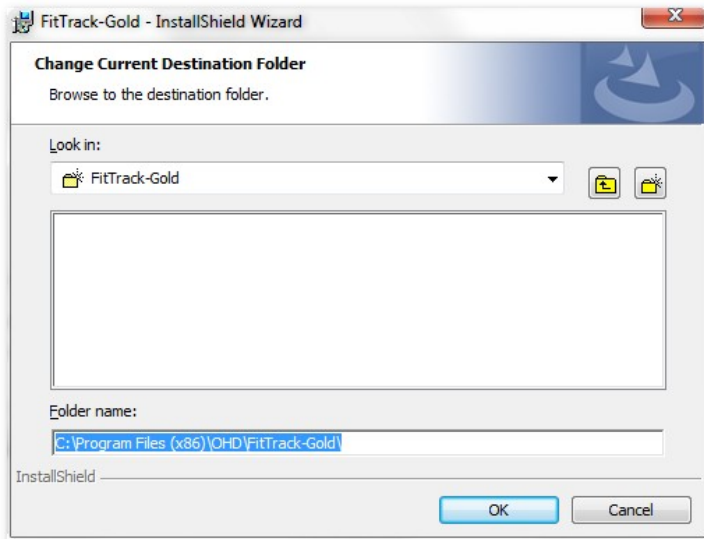


Click "Search Network" to search for other SQL databases. "Test Connection" will confirm the ability to access the SQL database. Click OK to continue.

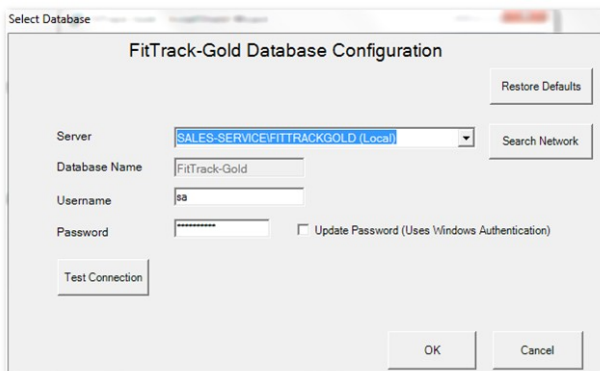




A successful install will state that a database was created successfully.

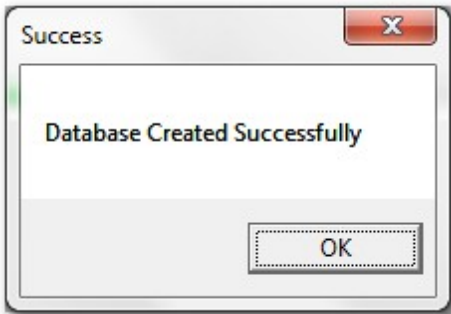


And finally, the confirmation screen.

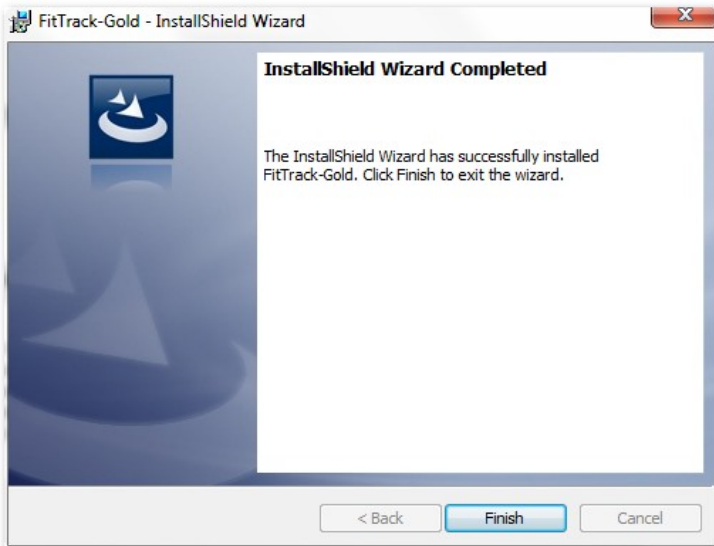

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

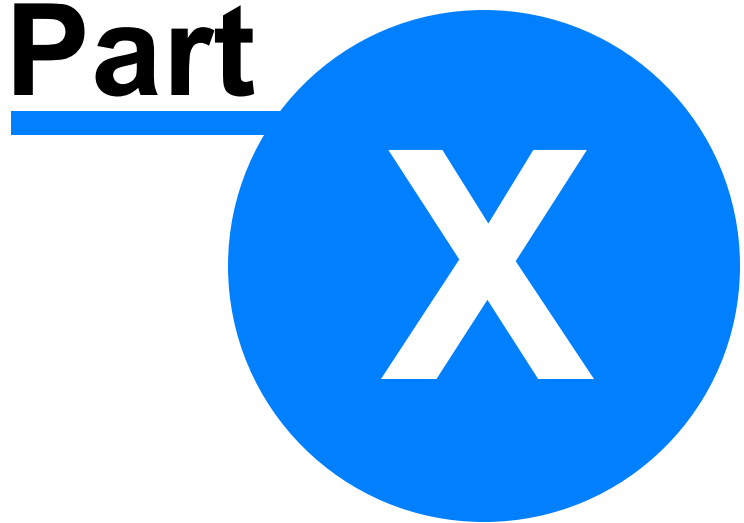

FitTrack Gold Dashboard

10 FitTrack Gold Dashboard

When first starting FitTrack Gold, you will arrive at the Dashboard. This screen is a snapshot, or dashboard of types, showing the user information that may be helpful or useful in maintaining a fit test program.

All modules on the Home Screen may be collapsed by clicking in the light-blue title bar of each module.

The screenshot displays the FitTrack Gold 2.0 Dashboard. At the top, there are dropdown menus for Company (Occupational Health Dynamics), Operator (Aaron Aalison), Mask (-select-), Size (Medium), Test Subject (Pereira, Christopher J), and Protocol (REDON (APR)). A large blue button labeled 'Test!' is prominent. Below this, the 'Due for Test' table lists employees with their OHD Social, Name, and OHD Maiden names. To the right, there are sections for 'Links' (with URLs for OHD, Service Return Form, and OSHA 1910.134 App. A), 'Mask Inventory' (a table of mask models and counts), 'Calibration Dates/Due' (a table of Quantifit IDs and NIST calibration due dates), and 'Test Statistics' (a summary table for Total, Pass, Fail, and Incomplete tests across different time periods). A 'Login Info' section at the bottom left shows the current user as Aaron Aalison.

OHD Social	Name	OHD Maiden
1857-1859	James Orr	
1860-1861	William Pennington	
6008	Christopher Pereira	
1804-1869	Franklin Pierce	
1795-1849	James Polk	
1835-1839	Jim Polk	
1869-1869	Theodore Pomeroy	
1876-1881	Samuel Randall	
1889-1891	Thomas Reed	
1911-2004	Ronald Regan	
1882-1945	Franklin Roosevelt	
1859-1919	Theodore Roosevelt	
1799-1801	Theodore Sedgwick	
9-10-12 15:20:8	Milliford Snebbish	
9-10-12 15:16:...	Hosmer Snodgrass	
1827-1834	Andrew Stevenson	
1857-1930	William Taft	
1784-1850	Zachary Taylor	

Mask Model	Mask Size	Count
3m 6000	Medium	16
3m 6300	Medium	3
3m 6900	Medium	3
North 7700	Medium-Large	2
North 7700-30	Medium-Large	1

Quantifit ID	NIST Calibration Due Date
1751	02-11-15
1907	03-26-15
3288	06-18-15
3417	07-11-15
3472	05-30-15

Test Summary	Total	Pass	Fail	Incomplete
Today	0	0	0	0
Current Week	15	7	6	2
Current Month	29	19	6	4
Current Year	38	21	6	11

10.1 Navigation

FitTrack Gold consists of several modules that populate the main portion of the work area. The left bar is always visible to guide the user to the different modules. This left panel also contains a drop-down list to select the Company to be used as well as the Operator who will be performing the test or doing work in the software. Companies can be defined in the Company module, and the users can be created in the Admin module under the Users section. You may refer to those sections of this manual for further instruction pertaining to those modules.

In some modules, the user must select a tab or division of the module in which the user wants to work or change settings. In other modules, such as Personnel and Company, the user can use the top buttons to perform desired tasks, or right-click on a selection from the list.

You may be prompted with the following options after performing a task:

Save: to save any changes made

Cancel: to leave the open window without saving changes made

Close: When viewing a window that requires no changes

Modify: To make changes to a record or selection

10.2 General

When first starting FitTrack Gold, you will arrive at the Home Screen. This screen is a snapshot, or dashboard, showing the user information that may be helpful or useful in maintaining a fit test program.

All modules on the Home Screen may be collapsed by clicking in the light-blue title bar of each module.

The screenshot shows the FitTrack Gold 2.0 Dashboard. At the top, there are dropdown menus for Company (Occupational Health Dynamics), Mask (-select-), Operator (Aaron Aalison), Size (Medium), Test Subject (Pereira, Christopher J), and Protocol (REDON (APR)). A large 'Test!' button is prominently displayed. Below this, the dashboard is divided into several sections:

- Due for Test:** A table listing employees with columns for OHD Social, Name, and OHD Maiden.
- Links:** A list of external links including OHD, Service Return Form, and OSHA 1910.134 App. A.
- Mask Inventory:** A table showing Mask Model, Mask Size, and Count.
- Calibration Dates/Due:** A table listing Quantit ID and NIST Calibration Due Date.
- Test Statistics:** A table showing Test Summary (Total, Pass, Fail, Incomplete) for Today, Current Week, Current Month, and Current Year.
- Quantit Detail:** A section with a message 'An attached Quantit was not found.' and a 'Connect' button.

On the left side, there is a navigation menu with options: Home, Personnel, Company, Reports, Tools, Admin, Help, and Exit. Below the menu is a 'Login Info' section with dropdowns for Company (Occupational Health) and Operator (Aaron Aalison).

All data on the Home Screen can be selected for all companies in the database, or for the selected company only. This can be changed by selecting a company name, or "All Companies" from the drop-down list at the top of the page. This option can be permanently changed on the Admin Screen under Home Screen.

Any module on the Home Screen can be collapsed by clicking on the blue title bar.

10.3 Company/Operator


The company can be selected from the drop-down list at the top of the screen, or from the left sidebar (not shown).

The data on the Home Screen can be listed for the selected company, or All Companies can be selected for data in the entire database.

Companies are created under the Company module.

The Operator can be selected from the drop-down list at the top of the screen, or from the left sidebar (not shown).


Operators can be added under the Admin module. See the Administration section of this manual.

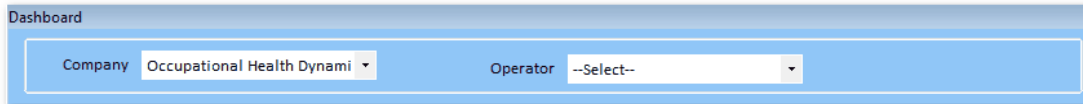

10.4 Quantifit Detail

A quick glance shows if a Quantifit is currently connected to the computer/software.

Displays the last four numerical digits of the serial number, with a button to verify connection if the unit was not already connected when the software was opened.

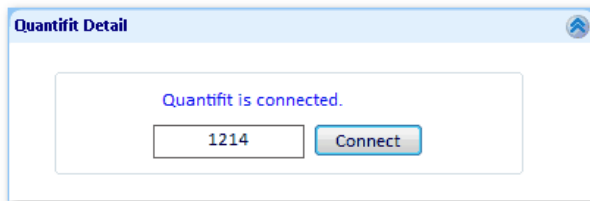


10.5 Calibration Due Date

This shows a list of Quantifits that have been attached to this database, or have been used in an imported database.

The display shows calibration due dates. They display green if the calibration is current, yellow if it's due within a month, and red if it's past due for NIST calibration.

A Quantifit may be removed from this list by right-clicking the unit, and selecting Remove.

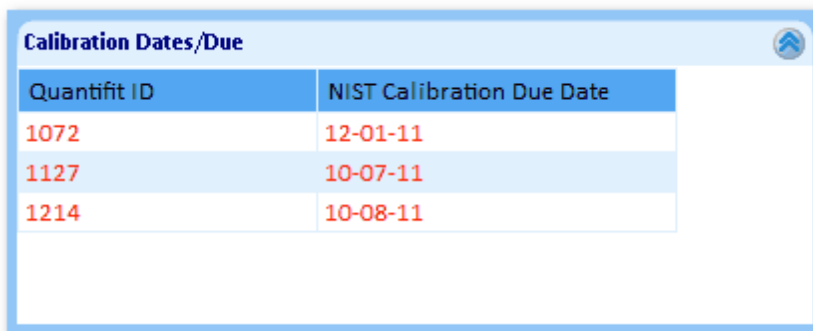

The screenshot shows a window titled "Calibration Dates/Due". It contains a table with two columns: "Quantifit ID" and "NIST Calibration Due Date". The data is as follows:

Quantifit ID	NIST Calibration Due Date
1072	12-01-11
1127	10-07-11
1214	10-08-11

10.6 Mask Inventory


The mask inventory module displays a list of masks in use.

This list reflects all masks that were tested in the previous 12 months.

This shows models and sizes in use, taken from the test database.

The list can be printed by right-clicking on the list and selecting Print.

If a mask is no longer being used, the mask can be removed from the mask inventory by right-clicking, and selecting Remove. **WARNING:** If a mask is removed from the list, it cannot be added back.

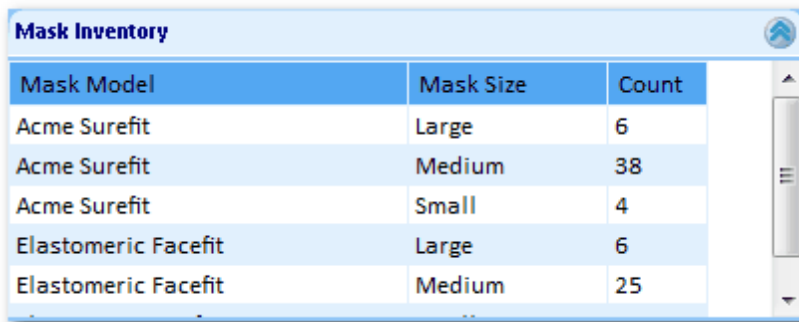


Mask Model	Mask Size	Count
Acme Surefit	Large	6
Acme Surefit	Medium	38
Acme Surefit	Small	4
Elastomeric Facefit	Large	6
Elastomeric Facefit	Medium	25

10.7 Links

The home page displays quick links to OHD's web site, the OHD Service Return Form (used for calibration returns and service), and OSHA 1910.134 Appendix A, which lists all the requirements for respirator fit testing.

These links can be customized or changed in the Admin section.

Four links are available, and three are pre-populated with the links mentioned above.

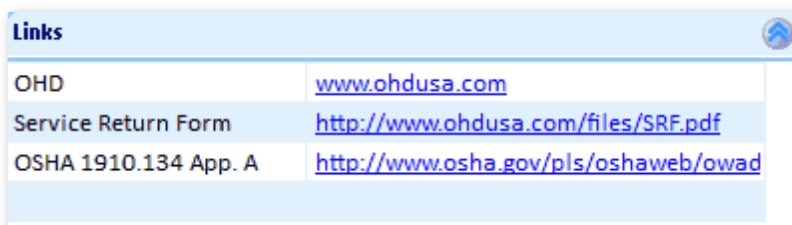

Links	
OHD	www.ohdusa.com
Service Return Form	http://www.ohdusa.com/files/SRF.pdf
OSHA 1910.134 App. A	http://www.osha.gov/pls/oshaweb/owad

10.8 Test Statistics

A quick glance provides the number of tests done year-to-date, month-to-date, week-to-date, and current day's testing.

List will show number of tests passed, failed, and incomplete.

Test Statistics				
Test Summary	Total	Pass	Fail	Incomplete
Today	0	0	0	0
Current Week	0	0	0	0
Current Month	77	77	0	0
Current Year	83	83	0	0

10.9 Due for Test

Due for Test is a quick list to show people in the database who are due for a test.

- The software's default is 48 weeks. Those who have not been tested in the last 48 weeks and are now due. The Administrator can set the number to any number of weeks.
- If a test subject is tested annually on two masks, the subject will remain on this list until both masks have been tested.
- The list by default is sorted by last name. Click on the Personnel ID header to sort by the ID field.

If a user is no longer employed, or if the mask being queried has been switched out for another mask, the operator may remove the subject from the Outstanding Test list.

- Right-click the person on the list
- Select "Remove."
 - The test being queried for the Outstanding Test list, will no longer be queried when it is removed from the list.
 - The test will remain safely in the database.
 - You may also remove people from this list by making a person inactive. (See the [Personnel](#) section.)

The operator may also print this list by right-clicking on any person in the list, and select print.


For a similar report, see Outstanding Test Summary in the Reports section.

Due for Test		
Personnel ID	Name	Job Code
1851-1855	Linn Boyd	
1883-1889	John Carlisle	
1790-1862	John Tyler	

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection


Part

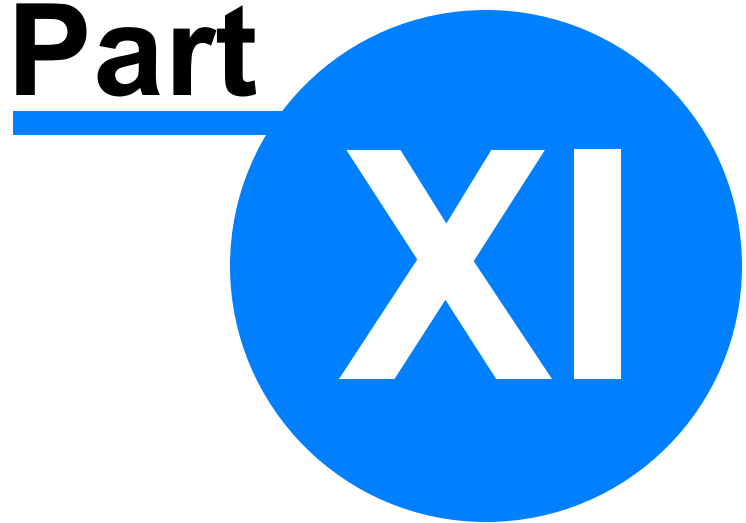

FitTrack Gold Personnel

11 FitTrack Gold Personnel

The Personnel Screen is the entry point for all test subjects and information that must be retained for each person.

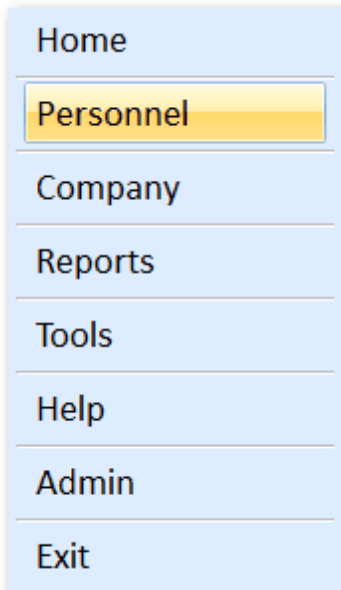

11.1 Personnel General

Personnel ID	First Name	MI	Last Name	Date Of Birth	Date Hired	Position Title	Job Code	Medical Eval Date	Department Name
719	Wallace	V	Ahrens						
172	Andrew	T	Armstrong						
351	Jerry	L	Arnold						
107	Neil	R	Atkinson						
226	Bruce	F	Baker						
920	Tony	b	Baker						
127	Scott	A	Ballard						
171	Donald	R	Barbour						
161	Danny	A	Bickell						
895	Benjamin	J	Blankenbeker						
315	Shawn	A	Brazas						
168	Mark	G	Broniec						
526	Matthew	J	Broniec						
124	Richard	E	Buttram						
242	Shawn	M	Campbell						
293	Dominic	R	Carello						
344	Hammond	L	Charles						
62	Darewin	L	Clardy						
372	Jason	J	Cluver						
134	Jonathan	A	Cluver						
09990	James	a	Coats						
271	Matthew	J	Cody						
153	Michael	A	Cunningham						

To view personnel within a company, the user must select a company name from the Company drop-down list either at the top of the screen or on the left panel.

Opening the software will automatically open the company that was active when the program was last closed.

Each module can be collapsed by clicking on the light-blue title bar.

11.2 Personnel Search

As the personnel list grows, it may be easier to find a particular test subject through the search fields.

- Click on the check-box on a field to be used for a search
- Change the qualifier if necessary (equal to =, or not equal to <>).
- Enter the criteria. When using the name or ID fields, the search engine will use whatever letters or digits you enter and conduct a search accordingly. When using "sm" in the last name search field, the results would be names such as Smalley, Smedley, Smith, etc. "Smi" would result in Smith, Smithson, Smithers, etc.
- Click on the Search button to yield results.

- Click on the Reset button to clear the search.

If the search criteria is not needed, the Search section may be collapsed by clicking on the blue title bar.

The choices used for searching can be added or removed as desired. Details for changing search choices can be found under the Admin Screen, Report Filter Settings.

The Report Name field is a custom field that allows the user to specify the name of the report, if the user wants to print the personnel list.

- Simply type in the name to change the report name.
- When this field is left blank, the default report name is "Personnel Summary Report."

11.3 Personnel Details

The details section of the Personnel Page shows the list of all personnel within the opened company, or displays the searched criteria if any of the search filters are used.


The sort order may be changed by clicking on any of the column headers.

- The personnel is sorted by last name as a default.
- Click on the column header a second time, and it deselects that column header.
- Click on an additional column header to add to the sort order.
- Click on Clear Sort to restore back to last name order.

Personnel ID	First Name	MI	Last Name	Date Of Birth	Date Hired	PositionTitle	Job Code
1767-1848	John	Q	Adams				
1735-1826	John		Adams				
1829-1886	Chester	A	Arthur				
1856-1857	Nathaniel	P	Banks				
1821-1823	Philip	P	Barbour				
1834-1835	John		Bell				
1869-1875	James	G	Blaine				
1851-1855	Linn		Boyd				
1791-1868	James		Buchanan				
1924	George	H	Bush				
1946-	George	W	Bush				

11.4 Personnel Output

The information on the personnel screen can be printed or exported by selecting PDF, Excel, or Print.

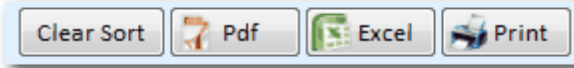

11.5 Add Personnel



Use the Add button, or right-click on any person in the list to add a person to the open company. The Add Personnel Details screen will show.

A screenshot of the 'Add Personnel Details' window. It features a light blue background and a white form area. The form includes several input fields: 'Personnel ID', 'First Name', 'MI', 'Last Name', 'Position/Title', 'Date of Birth [MM-DD-YY]', 'Date Hired [MM-DD-YY]', 'Medical Evaluation Date [MM-DD-YY]', 'Department' (a dropdown menu), and 'Job Code' (a dropdown menu). There is also an 'inactive' checkbox. To the right of the form is a 'Notes' text area. On the far right, there are three buttons: 'Save', 'Save & Test', and 'Close'.

Only First and Last name is required, but fill in the necessary information for your company's requirements.

NOTE: In order to use the synchronization feature, you must record Personnel ID numbers.

The Personnel ID can be set as a required field under the Company settings.

If the test subjects don't use an employee ID, it is recommended that the last four digits of the Social Security number along with first and last initials be used. For example, 6789JS.

The custom fields, if needed, can be relabeled under the Company settings.

The inactive button can be checked to eliminate a person from the Personnel list and search results without deleting their records. Removing the check will bring them back to the active records.

After the needed information has been entered, the user can select Save, or Save and Test if the test subject is ready to be tested.

The Personnel Screen can be modified to show only the desired fields and information. See [FitTrack Gold Company Screen](#) for more information.

11.6 Edit Personnel

A person's record can be opened by selecting the record and clicking on the **Edit** button, by double-clicking on the test subject, or by right-clicking on the person and selecting **Edit**.

Edit is used when personnel information needs to be viewed or changed.

When the editing is finished, click on Save or Save and Test to save the changes.

11.7 Delete Personnel

Select a person, click on the Delete button or right-click on a person's name and select Delete from the list to permanently delete a person.

When a person is deleted, all test records associated with this person are also deleted.

11.8 Personnel Test History

Select a person, click on the **History** button, or right-click on that person and choose **History** to see an individual's test history.

The History screen contains a list of all the tests that have been recorded for this individual.

Select a test from the list, and click on Details to view the details of that particular test.

- By clicking Print when viewing the test details, FitTrack Gold will print the same report that would normally be printed at the conclusion of a test.
- Close the report and Details screen to return to the History screen.

Add may be used to add a test to this person's history.

- A person's test may need to be manually added when the test had not been saved or printed for some reason.
- Fill in the appropriate information in the same manner as performing a fit test. (See Performing a Fit Test).
- Click on Enter Steps, and a screen will provide the opportunity to enter a fit factor for each step of the test.
- Click on Next after a fit factor has been entered for each step.
- After the final step, click on Save to save the test.
- At the History screen, select this test from the list, click on Details and then Print to get a report for this test.

Move Test

- Move may be used to move a person from one company to another.
 - Select a person, click on the Move button, or right-click and select Move.
 - A list will appear with selections of all the companies that have been created in this database.
 - Select the company and click OK.
-

-
- A confirmation box will be displayed, click Yes.


Test

- A fit test can be initiated by selecting a person, and clicking on the Test button, or right-click on the person and select Test.
 - Please see the Test section to view the details of performing a respirator fit test.
-

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

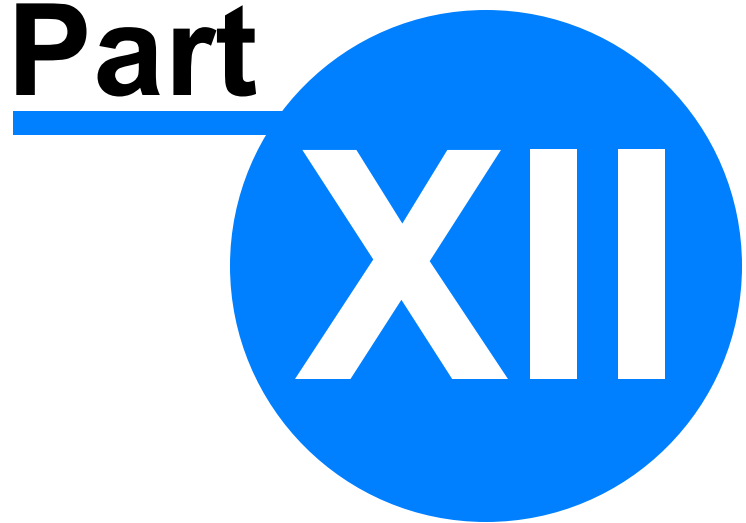


FitTrack Gold Test

12 FitTrack Gold Test

There are various ways to enter the Test Screen:

1. On the Home Screen, enter the appropriate information at the top of the screen and click on Test.
2. On the Home Screen, click on a name in the Due for Test, fill in the respirator, protocol and operator information, and click on Test.
3. On the Personnel Screen, right-click a person and select Test.
4. On the Personnel Screen, select the person, and click on the Test button at the top of the screen.
5. On the Personnel Screen, double-click on a person, and select Save & Test.
6. On the Personnel Screen, Add a person, enter his or her information, and select Save & Test.

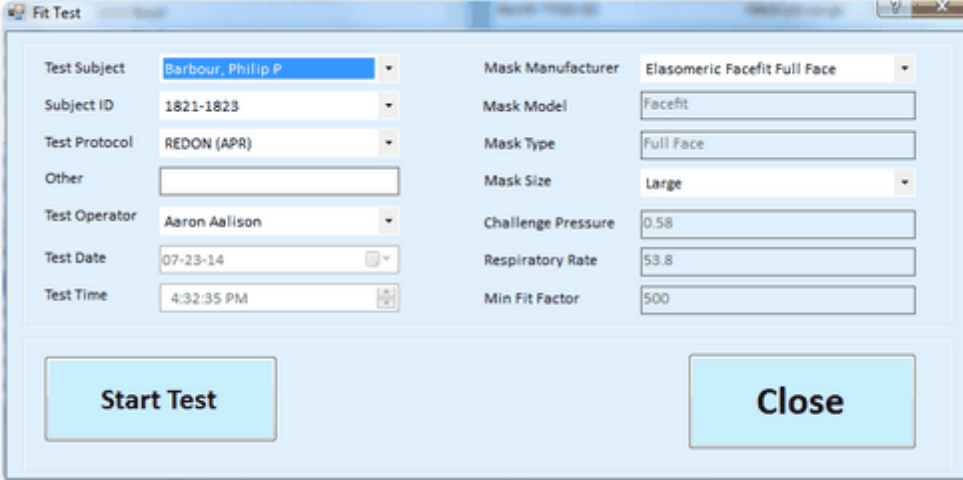


The screenshot shows a 'Fit Test' dialog box with the following fields and values:

Test Subject	Barbour, Philip P	Mask Manufacturer	Elasomeric Facefit Full Face
Subject ID	1821-1823	Mask Model	Facefit
Test Protocol	REDON (APR)	Mask Type	Full Face
Other		Mask Size	Large
Test Operator	Aaron Aalison	Challenge Pressure	0.58
Test Date	07-23-14	Respiratory Rate	53.8
Test Time	4:32:35 PM	Min Fit Factor	500

At the bottom of the dialog box, there are two buttons: 'Start Test' and 'Close'.

If all information is correct, click on Start Test. When test instructions appear, the test may begin.

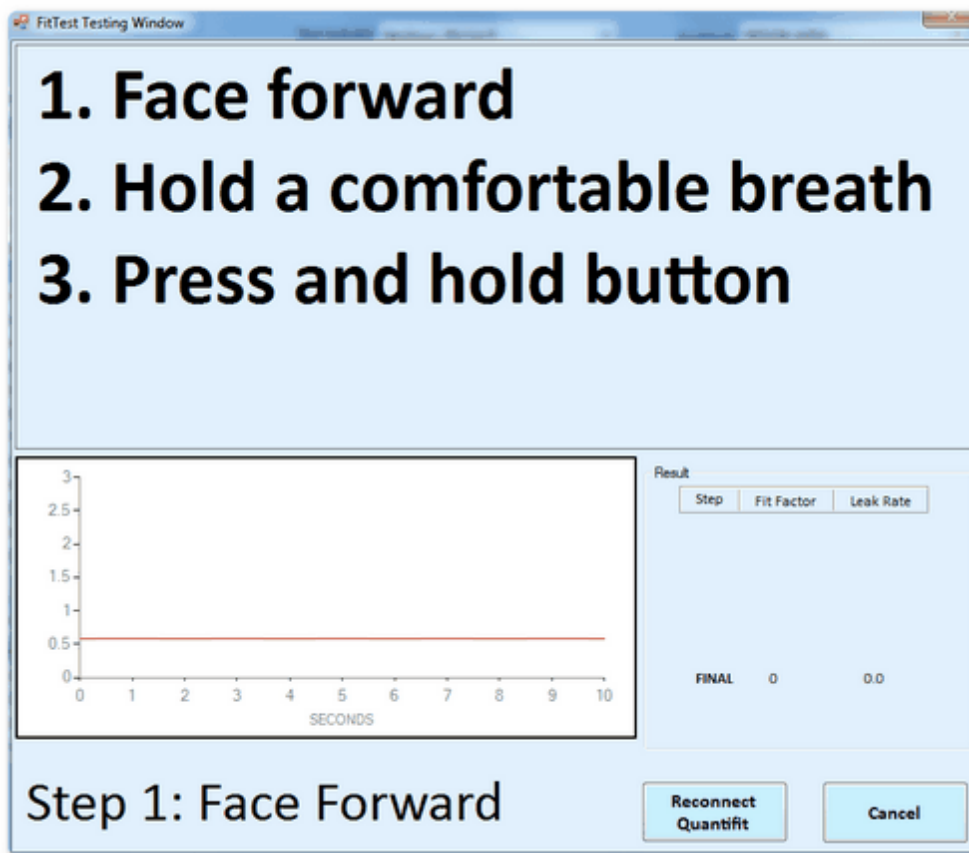


12.1 Test Subject

This field is automatically populated with the test subject who was selected to get into the test screen.

The drop-down list can be used to select a different person.


- If search criteria was used in the personnel screen, only those subjects defined in the search will be available in the drop-down menu.
- Press the first letter of the last name to quickly jump to that portion of the list.

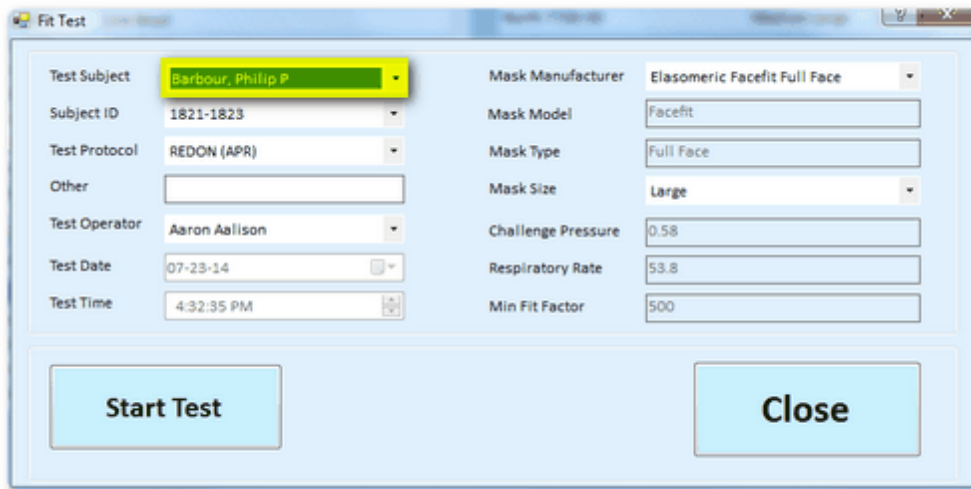

The screenshot shows the 'Fit Test' software window. The 'Test Subject' dropdown menu is highlighted in yellow and contains the text 'Barbour, Philip P'. Other fields include 'Subject ID' (1821-1823), 'Test Protocol' (REDON (APR)), 'Test Operator' (Aaron Allison), 'Test Date' (07-23-14), and 'Test Time' (4:32:35 PM). On the right side, there are fields for 'Mask Manufacturer' (Elasomeric Facefit Full Face), 'Mask Model' (Facefit), 'Mask Type' (Full Face), 'Mask Size' (Large), 'Challenge Pressure' (0.58), 'Respiratory Rate' (53.8), and 'Min Fit Factor' (500). At the bottom, there are two large buttons: 'Start Test' and 'Close'.

12.2 Subject ID

This field is populated and can be used in the same manner as the Test Subject field. By selecting a specific ID, the Test Subject field will automatically be populated.

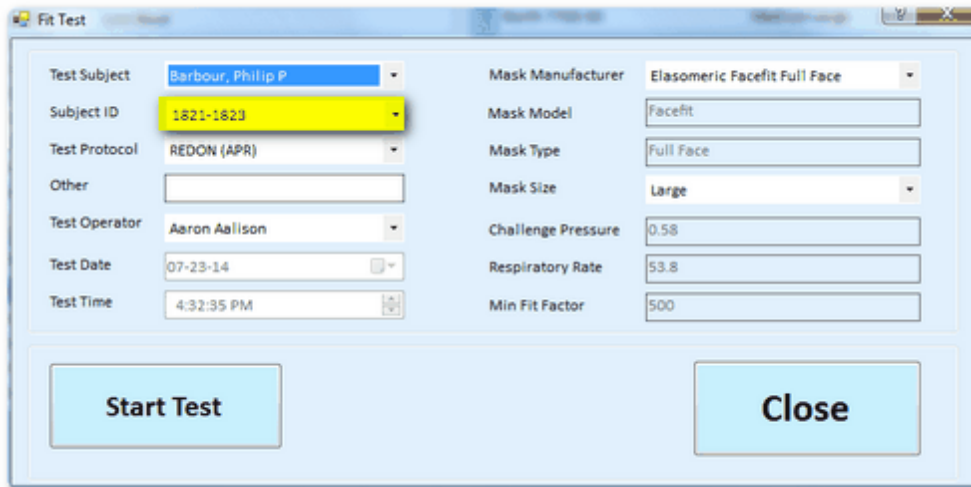

The screenshot shows the 'Fit Test' software window. The 'Subject ID' dropdown menu is highlighted in yellow and contains the text '1821-1823'. The 'Test Subject' field now contains 'Barbour, Philip P'. All other fields and buttons are the same as in the previous screenshot.

12.3 Test Protocol

When selecting a test protocol, this protocol will become your default until you change it again.

Each standard protocol that comes with FitTrack Gold contain the same five test steps. The difference in the protocols is the challenge pressure, or amount of pressure pulled in the facepiece, for each protocol. The steps are as follows:


- Step One:** Face Forward.
- Step Two:** Bend Over
- Step Three:** Shake Head

Step Four: Redon the Respirator

Step Five: Redon the Respirator

These steps and procedures are explained in detail in the [Test Operation](#) section.

Custom protocols may be created. More information on this in the Tools Advanced Options section.

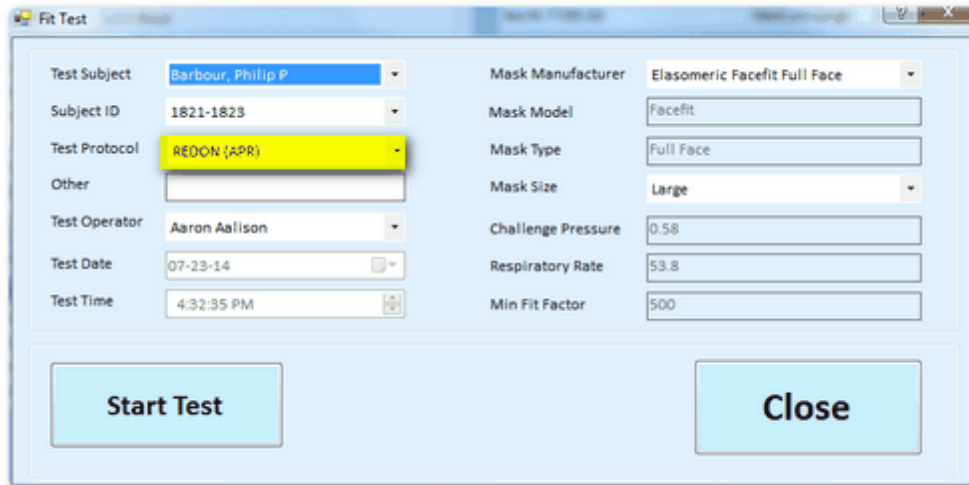

The screenshot shows the 'Fit Test' software window. It contains two columns of input fields. The left column includes: Test Subject (Barbour, Philip P), Subject ID (1821-1823), Test Protocol (REDON (APR)), Other (empty), Test Operator (Aaron Allison), Test Date (07-23-14), and Test Time (4:32:35 PM). The right column includes: Mask Manufacturer (Elasomeric Facefit Full Face), Mask Model (Facefit), Mask Type (Full Face), Mask Size (Large), Challenge Pressure (0.58), Respiratory Rate (53.8), and Min Fit Factor (500). At the bottom, there are two large buttons: 'Start Test' and 'Close'.

12.4 Qualitative Input

While it is not possible to test N-95 disposable masks with Controlled Negative Pressure, OHD recommends testing these masks with The Bitrex qualitative method. After the test is complete, the results can be recorded in FitTrack Gold so that all fit test scores for a particular individual can be archived in the same database.

To record the results of a qualitative test, select the subject just as you would do with any other type of test, but choose "Qualitative" as the protocol. Be sure to select the operator, the mask type and size. Then click on the "Start Test" button. The next screen will allow you to enter the date and time the test took place and whether the subject passed or failed.

Test Subject	Franklin, John	Mask Manufacturer	Surefit Disposable Half Mask
Subject ID	3589JSF	Mask Model	Disposable
Test Protocol	Qualitative	Mask Type	Half Mask
Other		Mask Size	Medium
Test Operator	ADAM 51247	Challenge Pressure	0
Test Date	06-24-16	Respiratory Rate	0
Test Time	11:50:03 AM	Min Fit Factor	100

Start Test **Close**

To record the qualitative test, change the date and time fields to record the actual test time. Then select Pass or Fail, accordingly.

The drop-down at the bottom for the report option, has the choice of None, Print, or PDF. When None is selected, the software will close the current window after recording the results. When Print is selected, the software will load a preview of the report before it is printed out. When selecting PDF, a window will appear so that the operator may select a name and location for saving the PDF file. these reports may also be printed from the Reports module, by selecting the Fit Test Report option.

Qualitative Test

The Quantifit does not perform a qualitative test, this screen is for recording purposes only.

Qualitative Test Result?


Pass **Fail**

Date: 06-24-16 Time: 11:52:24 AM

Notes

Report: None

Cancel Test

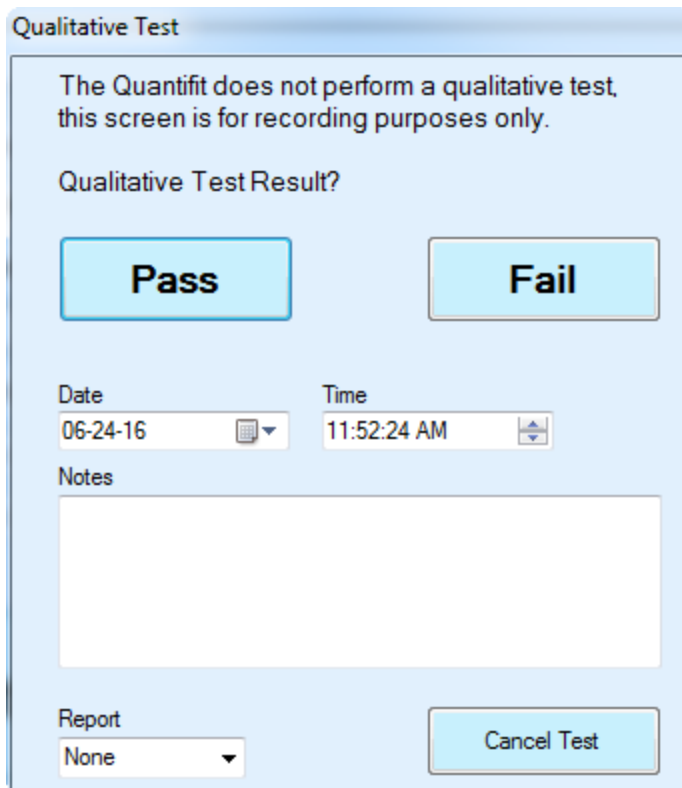

12.5 Test Screen Other


This is an optional field if the operator wants to add test-related information.

This field will print out on the test result printout.

Fit Test

Test Subject	Barbour, Philip P	Mask Manufacturer	Elasomeric Facefit Full Face
Subject ID	1821-1823	Mask Model	Facefit
Test Protocol	REDON (APR)	Mask Type	Full Face
Other		Mask Size	Large
Test Operator	Aaron Aallison	Challenge Pressure	0.58
Test Date	07-23-14	Respiratory Rate	53.8
Test Time	4:32:35 PM	Min Fit Factor	500

Start Test Close

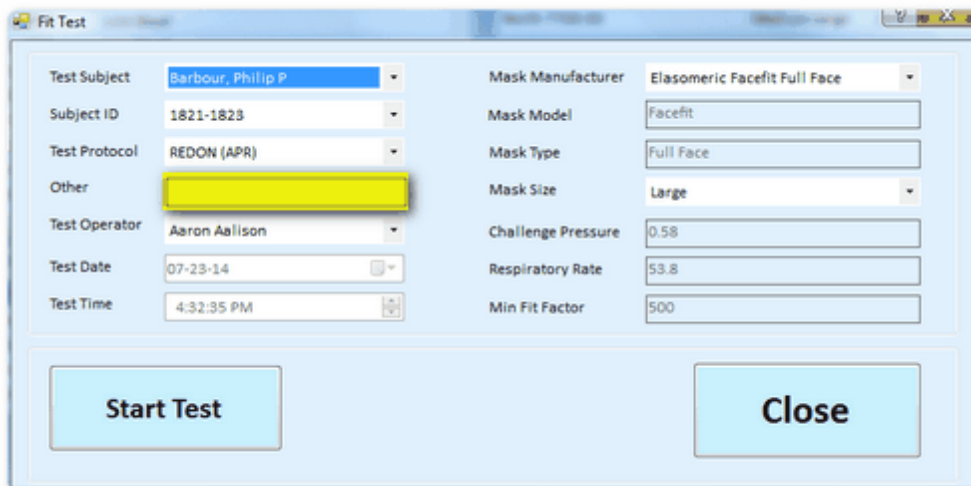

12.6 Test Operator

The selected test operator will be recorded into the database as the person who administered the fit test.

If an Operator is selected in the left side bar, this Operator field will automatically be populated.

If Login is turned on under the Admin Security section, the Test Operator will be grayed out since the user was previously forced to enter his or her login information.

Test Subject	Barbour, Philip P	Mask Manufacturer	Elasomeric Facefit Full Face
Subject ID	1821-1823	Mask Model	Facefit
Test Protocol	REDON (APR)	Mask Type	Full Face
Other		Mask Size	Large
Test Operator	Aaron Addison	Challenge Pressure	0.58
Test Date	07-23-14	Respiratory Rate	53.8
Test Time	4:32:35 PM	Min Fit Factor	500

Start Test Close

12.7 Test Date

This field may not be changed, as it is collected from the computer's internal clock.

12.8 Test Mask Information

Mask Manufacturer

- Use this drop-down to select the respirator that the test subject is wearing for this particular fit test.
- When selecting a respirator, it automatically populates the Mask Model and Mask Type fields.
- If the mask being tested is not on the drop-down list, "Add New Item" may be selected to enter a new mask. This can also be done in the Tools Screen under Advanced Options > Respirator. Instructions on adding a new respirator can be found in that section.

Mask Size

- It is very important to record the proper mask size that is being used for this fit test.
- This list of sizes can be modified in the Admin Screen Advanced Options.

Test Subject	Barbour, Philip P	Mask Manufacturer	Elasomeric Facefit Full Face
Subject ID	1821-1823	Mask Model	Facefit
Test Protocol	REDON (APR)	Mask Type	Full Face
Other		Mask Size	Large
Test Operator	Aaron Allison	Challenge Pressure	0.58
Test Date	07-23-14	Respiratory Rate	53.8
Test Time	4:32:35 PM	Min Fit Factor	500

Start Test **Close**

12.9 Test Statistics

These values are determined by the protocol that has been selected. See Protocol section for further details.

Challenge Pressure	0.58
Respiratory Rate	53.8
Min Fit Factor	500

12.10 Test Operation

For each step of the test, specific instructions will display in this portion of the screen.

Graph

- A graph of the fit test will be displayed during the test.
- The visual reproduction may be helpful in some circumstances to troubleshoot problems with testing.

The test button is used to initiate the test

Close is used to cancel out of the test screen

- If no test has been initiated, the screen will close.
- If a test has been initiated, when using the close button, the operator will be asked to save or delete the results.
- If the result is saved, the test will be recorded as an incomplete test.
- If the result is not saved, the test information will be deleted as if the test were never attempted.
- Saving an incomplete test can help to count the total number of tests attempted, including those who failed as well as those whose tests were canceled.


Result will display the result of each step after that step has been completed.

Save, Save & Print and PDF will remain grayed out until the test is complete.

Save will save the test to the database. Close window or select another person to resume.

Save & Print will save the data and print a copy of the report to the screen. Click on the printer icon to print a copy, or close to return to the test screen.


PDF will print the report to a PDF file. This will not save the test, so be sure to save the test first.

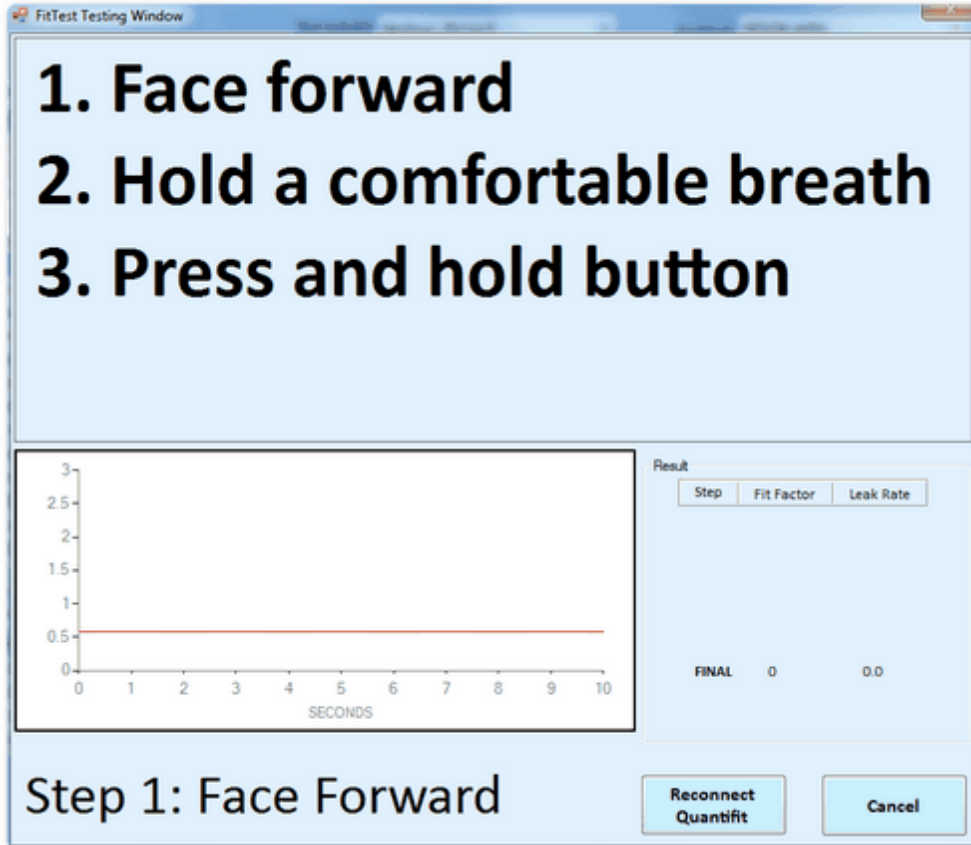

OHD Quantifit and FitTrack Gold Software


The Gold Standard in Respiratory Protection

Part

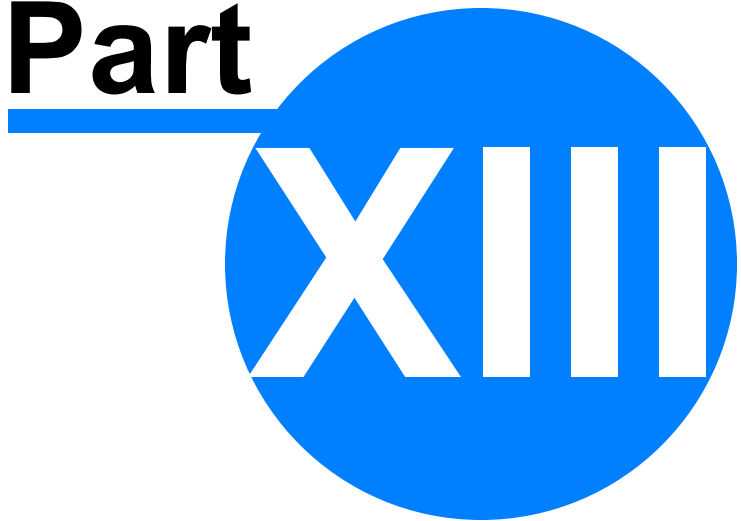


FitTrack Gold Company

13 FitTrack Gold Company

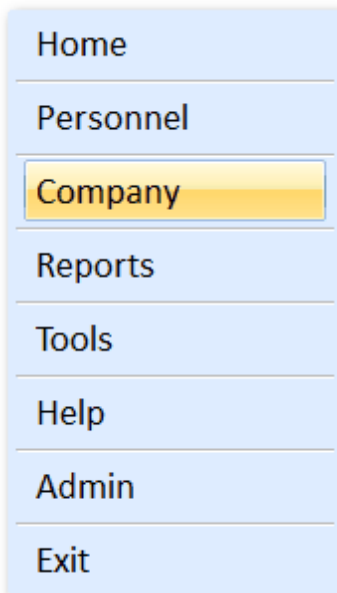

13.1 General

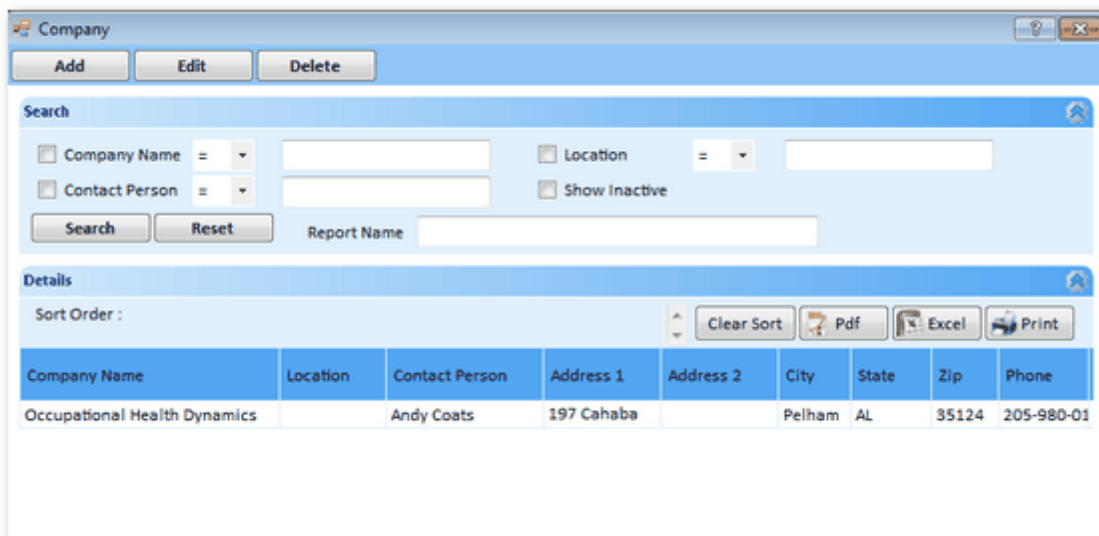

The purpose of using companies is to divide the database into different segments. For instance, larger companies may want to create divisions for different buildings, physical locations, or job levels. This is to segment the database to create smaller lists that are easier to work with. A county may use a Quantifit to test several fire departments, and this would allow the user to separate people by the station in which the individuals work.

A user may use only one company, or use an unlimited number of companies, depending on how the user wants to organize the data.

When importing data, the software will import into whichever company is currently open.

Performing a backup will back up all companies.

The screenshot shows the 'Add Company' dialog box with the following fields and sections:

- Company Name
- Location
- Contact Person
- Address 1
- Address 2
- City
- State
- Zip
- Phone
- Fax
- Notes
- Inactive
- Customize Personnel Fields**
 - Enabled Edit Label Required
 - Personnel ID
 - Position/Title
 - Date Of Birth
 - Date Hired
 - Medical Evaluation Date
 - Department
 - Job Code
 - Middle Initial (MI)
- Labels for custom field located in the "Add Personnel" screen**
 - Custom Label 1
 - Custom Label 2
 - Custom Label 3

Buttons: Save, Close

The Company Name field will appear on each fit test report. All other fields through the notes section are for information/record keeping only.

Some of the labels under the Customize Personnel Fields sections may be changed or turned off.

To change a label, click on the Change button, and rename the field.

The check-boxes next to each field, is to include (checked) or excluded (un-checked) these fields on the Personnel Screen for each within each company.


The check-box for Personnel ID under the Required column, would require that a personnel ID is used when adding new personnel. This box would need to be checked if the database will be synchronized with other databases.

Custom Label 1-3 fields are used to change the custom field labels in each personnel screen pertaining to this Company. If these fields are left blank, the custom fields will not appear on the personnel screen.

Checking the Personnel ID check-box will force the Personnel ID field to become mandatory. This is necessary when using the synchronization feature.

The Inactive box will remove a company from the visible company list, but will not delete it altogether. To view Inactive companies, check the "Show Inactive" check-box in the sort criteria.


This illustration shows the Add Person screen with no boxes checked on the Company Screen:

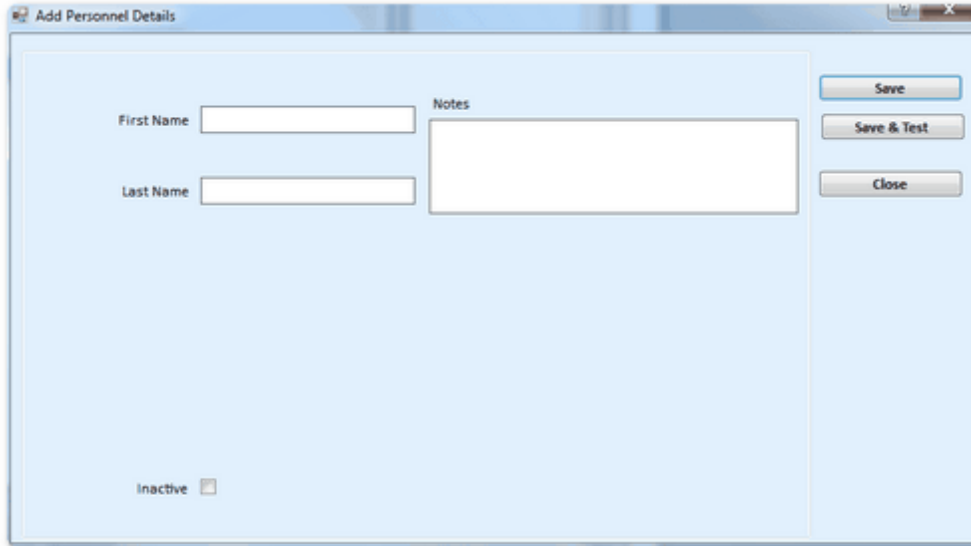

The screenshot shows a window titled "Add Personnel Details". It contains the following fields and controls:

- First Name:
- Last Name:
- Notes:
- Inactive:
- Buttons: Save, Save & Test, Close

The following illustration shows the Add Person screen with all boxes checked on the Company Screen, and fields filled in under the custom label options:

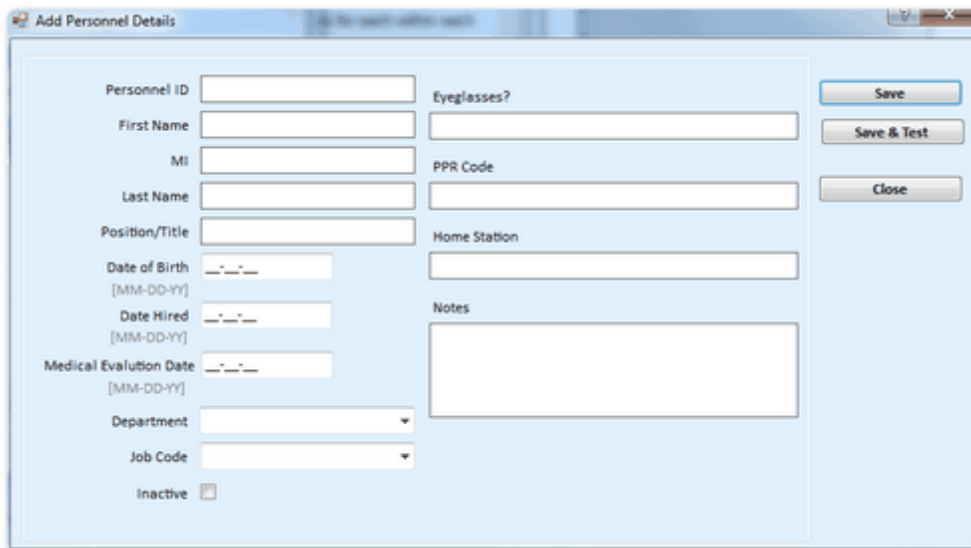

The screenshot shows the "Add Personnel Details" window with the following fields and controls:

- Personnel ID:
- First Name:
- MI:
- Last Name:
- Position/Title:
- Date of Birth: [MM-DD-YY]
- Date Hired: [MM-DD-YY]
- Medical Evaluation Date: [MM-DD-YY]
- Department:
- Job Code:
- Inactive:
- Eyeglasses?:
- PPR Code:
- Home Station:
- Notes:
- Buttons: Save, Save & Test, Close


13.2 Create New Company

Use the Add button, or right-click an existing company, and select "Add" to create a new company. The Company Name Field is the only required field. Whatever is entered into this field will print on every report while testing within this company.

All other data fields are optional for the user's use.

Custom 1 through Custom 3 allows the user to customize personnel information.


- After filling in a custom field, a new field will be added to the personnel information screen for all entries made under this company (see example below).
- The custom screens will apply only to this company.

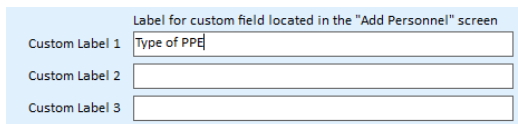

Label for custom field located in the "Add Personnel" screen

Custom Label 1	Type of PPE
Custom Label 2	
Custom Label 3	

Custom Fields on Company Screen

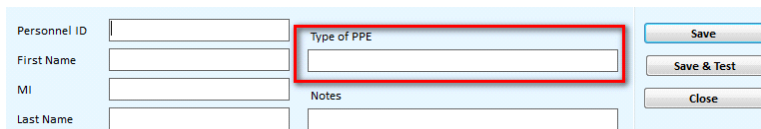

Personnel ID

First Name

MI

Last Name

Type of PPE

Notes

Save

Save & Test

Close

Custom Field added to Add Personnel.

13.3 Edit/Delete Company

Click on the **Edit** button to make changes to an existing company

With the appropriate company selected, click on the **Delete** button to delete a company.

- **WARNING!** When a company is deleted, it cannot be retrieved. The company along with all personnel in that company will be deleted.
- If there is a chance the company might be needed in the future, the user may choose to make the company Inactive instead of deleting it.

13.4 Company Search

As the company list grows, it may be easier to find a particular company through the search fields.


- Click on the check-box on a field to be used for a search
- Change the qualifier if necessary (=, <>).
- Enter the criteria on which to search.
- Click on the Search button to yield results.
- Click on the Reset button to clear the search.

If search criteria is not needed, the Search section may be collapsed by clicking on the blue title bar.

The choices used for searching can be added or removed as desired. Details for changing search choices can be found under the Admin Screen, Report Filter Settings.

The Report Name field is a custom field that allows the user to specify the name of the report, if the user wants to print the personnel list.

- Simply type in the name to change the report name.
- When this field is left blank, the default report name is "Company Summary Report."

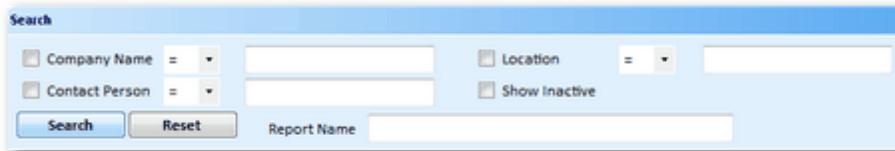

The screenshot shows a search interface with the following elements:

- Company Name: [dropdown] [text input]
- Location: [dropdown] [text input]
- Contact Person: [dropdown] [text input]
- Show Inactive:
- Buttons: Search, Reset
- Report Name: [text input]

13.5 Company Details

The details section of the Company Page shows the list of all companies, or displays the results of the searched criteria if any of the search filters are used.

The sort order may be changed by clicking on any of the column headers.

- The default sort is alphabetically by company name.
- Click on the column header a second time, and it deselects that column header.
- Click on an additional column header to add to the sort order.
- Click on Clear Sort to restore back to last name order.

13.6 Company Output

The information on the company screen can be printed or exported by selecting PDF, Excel, or Print.



The company sort order will be defaulted by Company name, or will change if any of the column headers has been selected to change the sort order.

The sort order can return to default by clicking on "Clear Sort."

OHD Quantifit and FitTrack Gold Software


The Gold Standard in Respiratory Protection

Part

FitTrack Gold Reports

14 FitTrack Gold Reports

While the standard fit test reports print at the end of each test, the report module allows for more flexibility in both reporting and exporting needs. The Reports tab is used when there is a necessity to print reports or export information in a batch. All reports can be saved as a PDF file, exported to Excel, or sent to a printer.

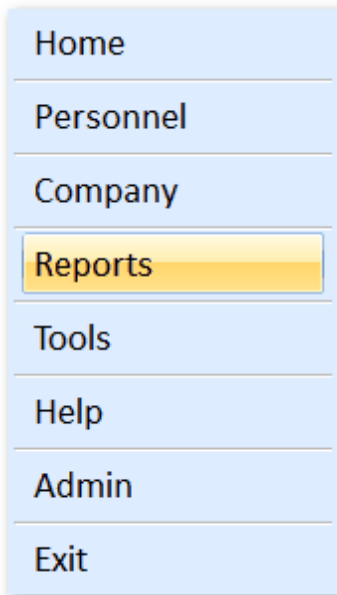

14.1 General

When printing a report, the details portion of the screen will first be populated by relevant data pertaining to the open company, and filtered through the search criteria.

All reports are set to preview before the report is sent to a printer.

The user can add three lines of header information to the top of each report, as well as a logo.

- The header information is set up in the Report Format Settings of the Administration section.
 - When header information has been set, this will print on all reports regardless of company.
 - Select all reports by the drop-down menu at the top of the screen.
-

The image shows a sample of a Fit Test Result Report. The header includes a placeholder for the company name, address, and slogan, along with the Occupational Health Dynamics (OHD) logo. The report title is "Fit Test Result Report" and the test date is "07-20-12" at "2:31:09 pm". The testee's name is "George Washington" with ID "1732-1799". The report lists various test parameters and calibration information.

Occupational Health Dynamics		Fit Test Result Report	Test Date:-	07-20-12	2:31:09 pm
George Washington 1732-1799					
Department Name:					
Medical Evaluation Date:					
Job Code:					
Mask: ElasmERIC Facefit Medium Full Face					
Challenge: Pressure:	1.50	Protocol:	SCBA-1		
Last NIST Calibration:	07-20-12	Respiratory Rate:	93.10		
Minimum Passing Fit Factor:	500	Last Daily Calibration:	07-20-12		
Other :		Serial No:			

Sample of added text in report header along with company logo. In the lower report header, "Occupational Health Dynamics" is the name of the selected company that is being tested, as opposed to the company doing the fit testing, which appears in the header of the report along with the logo.

14.2 Protocol Summary Report

This report will print information pertaining to each protocol in the database.

The report includes challenge pressures, breathing rates, step details, and minimum passing fit factors.

14.3 Respirator Summary Report

This report lists all the respirators that have been entered into the software.

The report will not show respirators that have been entered directly into the Quantifit, even after data has been transferred. The Quantifit respirator information will remain with the test information, but will not be added to the respirator selection within the software.

For details on respirator usage, view Mask Inventory on the Home Screen.

14.4 Calibration Summary Report

This report will print every recorded calibration.

Users can specify a report for current day, or a range of dates by using the Search criteria.

14.5 Fit Test Summary Report

This report will print all fit tests that belong to the personnel list shown.

This report includes the result of each protocol step as well as overall fit factors for each fit test conducted on an individual.

14.6 Fit Test Result Report

This is the report that prints at the conclusion of an individual fit test.


Printing this report from the report page allows the user to print in a batch.

14.7 Fit Test Log Report

The Fit Test Log Report prints a snapshot of Fit Tests.

Search the current day's date, and the report will be of all individuals tested today.

The user can choose which columns appear on this report. This is confined by the space limitations of the width of the printed page.

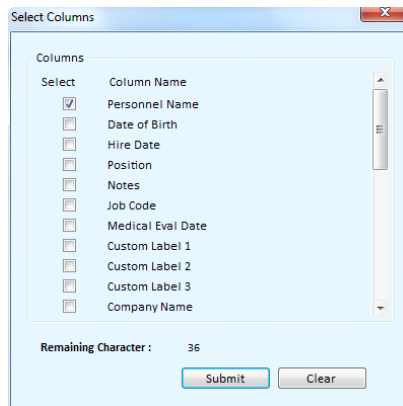

Sample of FitTest Log report shown below.

This report includes test statistics at the top of the report as seen in the following image.

Your Company Name Goes Here
Address or Phone Number
Company Slogan

OCCUPATIONAL HEALTH DYNAMICS
OHD

Fit Test Log Report Date :- 08-20-12

Over All Statistics

Number of Test	Number Passed	Number Failed	Number Canceled
86	86	0	0

Personnel ID	Name	Manufacturer	Size	Model	Type	Test Date	Test Time	Eq.F.F.	Result
1735-1826	John Adams	Acme	Medium	Surefit	Full	07-20-12	1:09PM	4874	PASS
1736-1826	John Adams	Elasomenc	Medium	Facetfit	Full	07-12-12	2:33PM	2111	PASS
1829-1896	Chester A. Arthur	Acme	Small	Surefit	Full	07-20-12	1:10PM	5059	PASS
1856-1857	Nathaniel P. Banks	Acme	Medium	Surefit	Full	07-20-12	1:10PM	5460	PASS
1821-1823	Philip P. Barbour	Acme	Large	Surefit	Full	07-20-12	1:10PM	6610	PASS
1834-1836	John Bell	Acme	Medium	Surefit	Full	07-20-12	1:11PM	2629	PASS
1868-1876	James G. Blaine	Acme	Medium	Surefit	Full	07-20-12	1:11PM	4823	PASS
1851-1896	Linn Boyd	Acme	Medium	Surefit	Full	07-20-12	1:12PM	4997	PASS
1851-1856	Linn Boyd	Elasomenc	Medium	Facetfit	Full	06-14-11	2:59PM	2884	PASS
1791-1898	James Buchanan	Acme	Medium	Surefit	Full	07-20-12	1:12PM	5669	PASS
1824	George Washington	Acme	Small	Surefit	Full	07-20-12	1:13PM	4992	PASS


14.8 Fit Test Card Report


This report allows the user to print fit test cards to be distributed to the respirator user who is being tested.

These can be printed in a batch or one at a time. However, a batch will better maximize the use of paper.

Any standard pre-perforated business card stock will work for this report.

The user can choose the starting place when printing these cards. This allows for a sheet to pass through the printer more than once in order to fill up the sheet. However, it is not recommended to use a sheet that already has cards torn from it.

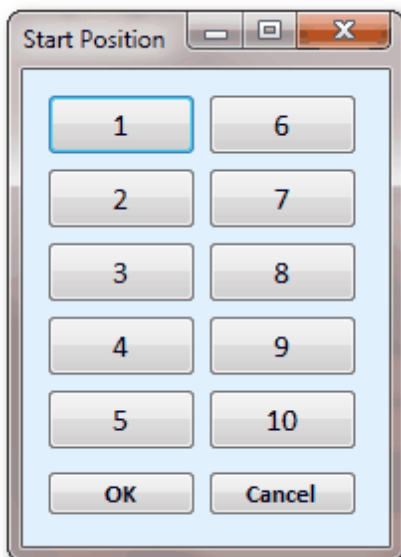

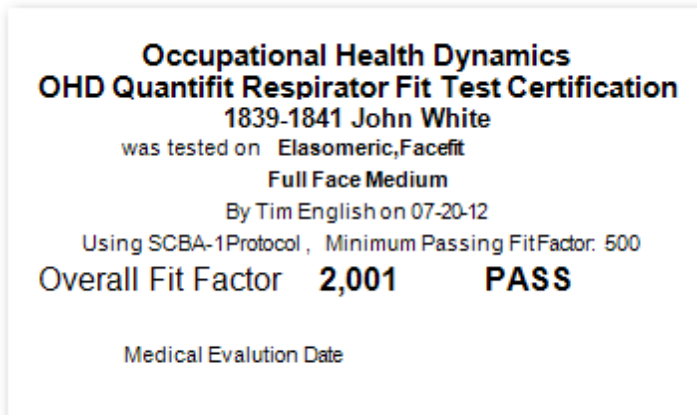

14.9 Outstanding Summary Report

Much like the Due for Test section on the Home Screen, this report will print a list of individuals who have not tested within a specified period of time.

The list takes into account different respirators on which the user has been tested.

14.10 Search

- Click on the check-box on a field to be used for a search
- Change the qualifier if necessary (=, <>).
- Enter the criteria on which to search.
- Click on the Search button to yield results.
- Click on the Reset button to clear the search.

If search criteria is not needed, the Search section may be collapsed by clicking on the blue title bar.

The choices used for searching can be added or removed as desired. Details for changing search choices can be found under the Admin Screen, Report Filter Settings.

The Report Name field is a custom field that allows the user to specify the name of the report, if the user wants to print the personnel list.

- Simply type in the name to change the report name.
- When this field is left blank, the default report name is the respective name of each report.

14.11 Details

The details section of the Reports Page shows results of the searched criteria if any of the search filters are used.

The sort order may be changed by clicking on any of the column headers.

- The default sort is alphabetically by employee name.
 - Click on the column header a second time, and it deselects that column header.
-

- Click on an additional column header to add to the sort order.
- Click on Clear Sort to restore the original order.

14.12 Output

The information on the report screen can be printed or exported by selecting PDF, Excel, or Print.




The sort order will be defaulted by last name, or will change if any of the column headers has been selected to change the sort order.

The sort order can return to default by clicking on "Clear Sort."

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection


Part

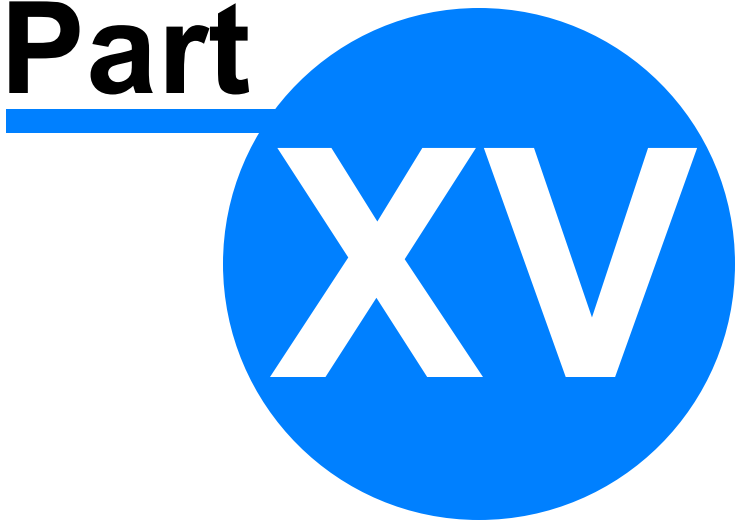


FitTrack Gold Tools

15 FitTrack Gold Tools

The Tools screen allows access to database functions including backup, restore, import, export, and the ability to create default settings to the software.

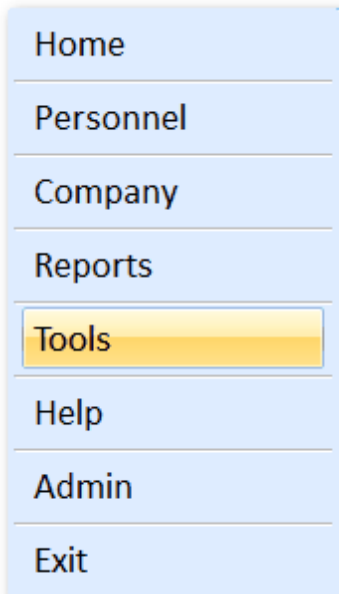

15.1 Backup/Restore

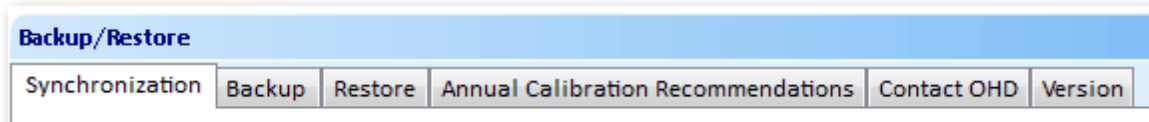

The Backup and Restore functions allow for database functions when synchronizing data or keeping it safe via another storage location.

15.1.1 Synchronize

Synchronization will allow for users to do a two-way synchronization between two databases.

In order to do a synchronization, these requirements must be in place.

- The synchronization will use unique Employee ID numbers to match records.
 - The Employee ID box must be checked in the Company record (See Company section.)
 - All Employee ID's must be unique, or an error will occur.
 - If the company does not utilize employee ID numbers, OHD recommends using the last four digits of the test subject's Social Security number with his or her first and last initial following: 1234AB.
- The two computers that contain the databases to synchronize must be able to view each other


through a network domain.

- A typical scenario would have a central database that has been installed on a server. Then each individual user could connect to the server and synchronize the database.
- Synchronization can be used to synchronize one company at a time, or the entire database.


Peer 1 will be populated with the database from which the user is syncing.

Peer 2 is the database the user will synchronize to.

- Click on Browse.
- Click on the Select Peer drop-down bar. (This may take a minute or two to search for all databases.)
- The list will populate with all found SQL databases. They will be listed as: computer_name/FITTRACKGOLD. Select the desired database.
- The Username and Password will automatically populate with the assumption that the user did not change this when installing FitTrack Gold software.
- Click on Connect.
- Click on Synchronize.
- The user will select the company to synchronize FROM Peer 1, and TO Peer 2.

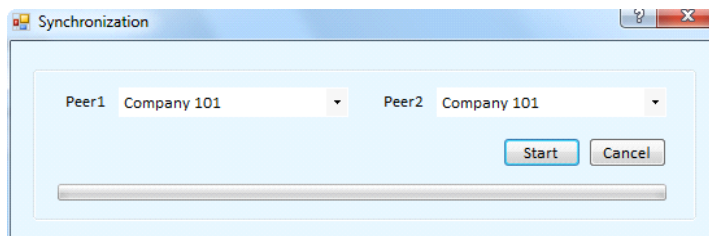

- If the user wants to COPY a company from Peer 1 to Peer 2, there is an option to select --New Company--. This will not synchronize a company, but rather copy all of the company information to the Peer 2 database.
- To synchronize all companies on Peer 1 or Peer 2, choose --Use ALL COMPANIES Here--. If this option is selected on Peer 1, all Peer 1 companies will be synchronized to Peer 2 companies, matching companies by name.

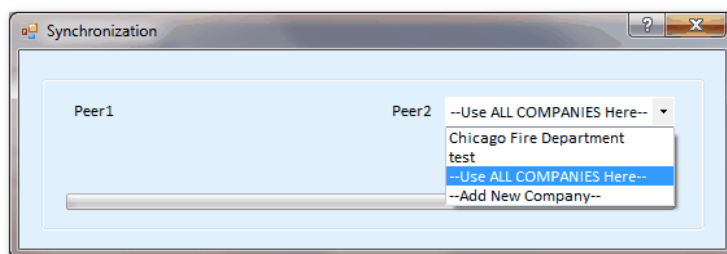

- Click on Start, and synchronization will occur.
- When synchronization is complete, the user will see an information screen detailing synchronized records, added records, and any errors that occurred.

15.1.2 Backup

FitTrack Gold has a built-in schedule to prompt the user to do backups at specified intervals. (The default interval is 15 days.) The Backup section in the Tools section allows the user to do a backup at-will. This may be helpful when using a backup to move the database to another computer, or if the user is required to send his or her database to OHD for analysis.

Backups must be written to a folder on the root drive of the computer. For instance the user could create a folder C:/FitTrack Gold Backup.

Select the Browse button to select a predetermined location.

After the location has been selected, click on Backup, and then Start for the backup process to begin.

15.1.3 Restore

The restore options are to restore a database from SQL or from Microsoft Access.

SQL restore is the best way to move data from one computer to another within FitTrack Gold.

- Do a backup of the files.
- Restore that file on a new install of FitTrack Gold.


FitTrack 5.0.1 is used to restore data from an older version of a FitTrack database.

- This version must come from FitTrack version 5.0.1.
- The file to be restored should be named "FitTrack.mdb."
- **WARNING:** when a database is restored, the previous existing data will be deleted.

To initiate the Restore

- Select SQL or FitTrack 5.0.1.
- Browse to the file to be restored.
- After selecting the file, click on Open.
- Click on Restore and then Start, and wait for the restore to complete.
- This may require a lengthy period of time when restoring a large MS Access database.

15.2 Import/Export

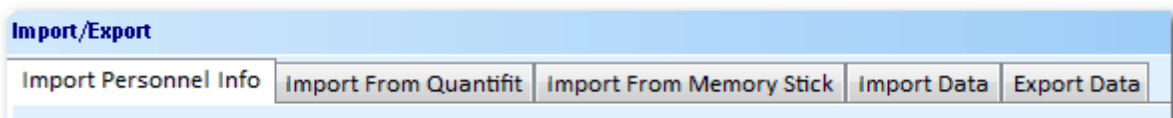

The import/export features allow data to be imported from the Quantifit or another database, or exported for use in other software packages.

15.2.1 Import Personnel Info

Incremental/Non-Incremental

This feature is used to import a list of people that are to be tested. The data will be imported into the open Company only.

Back up the current FitTrack Gold database before you import in case the wrong data or the wrong order is imported inadvertently.

The Excel data must be put into a specific order to correctly match fields with FitTrack Gold. The field headers are required, and must match exactly, or else the data will not be imported for that incorrect column.

While the column headers are required, columns can be left blank. Label the column must match these exact headers (case sensitive) in this order:

- PersonnelID
- FirstName
- MiddleInitialName
- LastName
- PositionTitle
- DateOfBirth
- DateHired
- MedicalEvalDate
- DepartmentName
- JobCode
- Notes
- CustomLabel1
- CustomLabel2
- CustomLabel3

Click on the Browse button to find the file that will be imported.

With the file selected, click on Open.

Click on Import below the importing options.

In the new window, select Get Data.

Data will populate into the window. Select Import at the bottom of the screen, and the shown data will be imported into the open company.

If a company is not open, this will result in an error.

15.2.2 Import from Quantifit


When this tab is selected, the serial number of the current Quantifit connected to the computer will be displayed next to the Connect button.

If no Quantifit number is displayed, click on the Connect button to establish a connection.

Select the Import button.

A message will be displayed when the import is complete, and the data currently on the Quantifit will be present in the open company.

The below Conflict Resolver window uses "smart match" to allow the person importing to decide if two people are the same. If the import tool recognizes two last names that are the same, and the first initial is the same (but first name is not an exact match), the Conflict Resolver will pop up. This would allow the user to match Dave Short with David Short as seen below. If the matched people are in fact the same person, select "Update." If they are not the same person, select "Add New." A final option is "Skip," if the person selected should not be imported into the database.

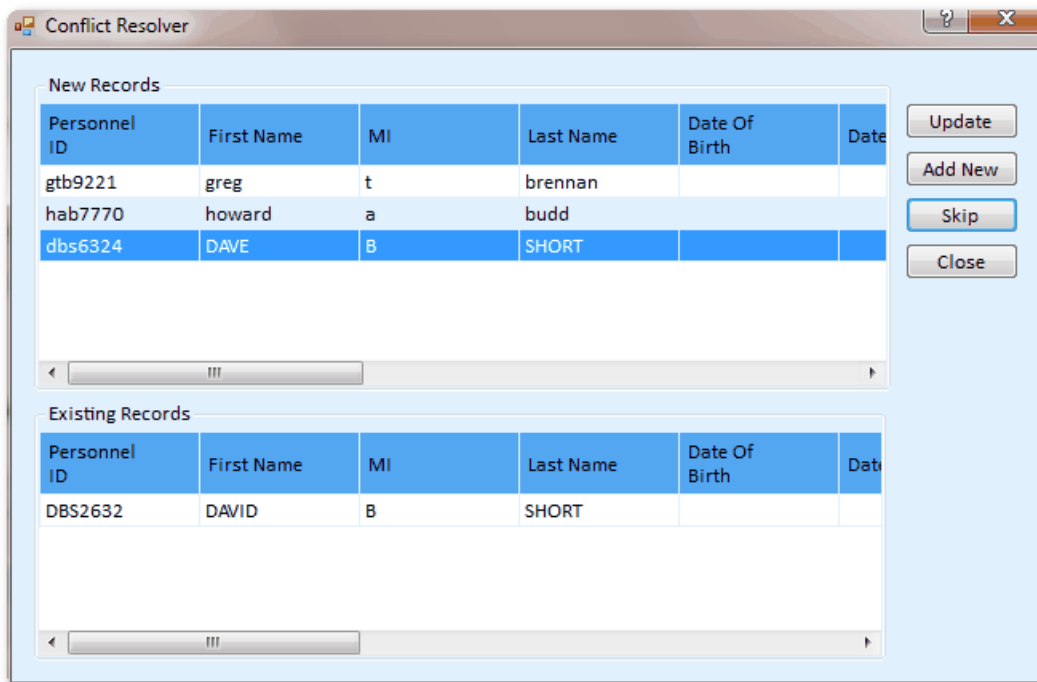

15.2.3 Import from Memory Stick


Save to memory stick from Quantifit

- Place memory stick in the upper USB port on the back of the Quantifit
- On the Quantifit, scroll to the System menu
- Scroll down to the last option, Datalog
- Turn the knob counter-clockwise to the File Menu option
- Select Save Datalog

- Type name (up to 8 standard alpha-numeric characters)
- Select Done

Import from Memory Stick

- Click on the Browse button to browse to the file from the Quantifit.
- This file may remain on a memory stick, or may have been copied to the location on the computer.
- Select the file and click Open.
- Back on the FitTrack Gold screen, select Import. The data from the selected file has been imported into the open company.
- The below Conflict Resolver window uses "smart match" to allow the person importing to decide if two people are the same. If the import tool recognizes two last names that are the same, and the first initial is the same (but first name is not an exact match), the Conflict Resolver will pop up. This would allow the user to match Dave Short with David Short as seen below. If the matched people are in fact the same person, select "Update." If they are not the same person, select "Add New." A final option is "Skip," if the person selected should not be imported into the database.

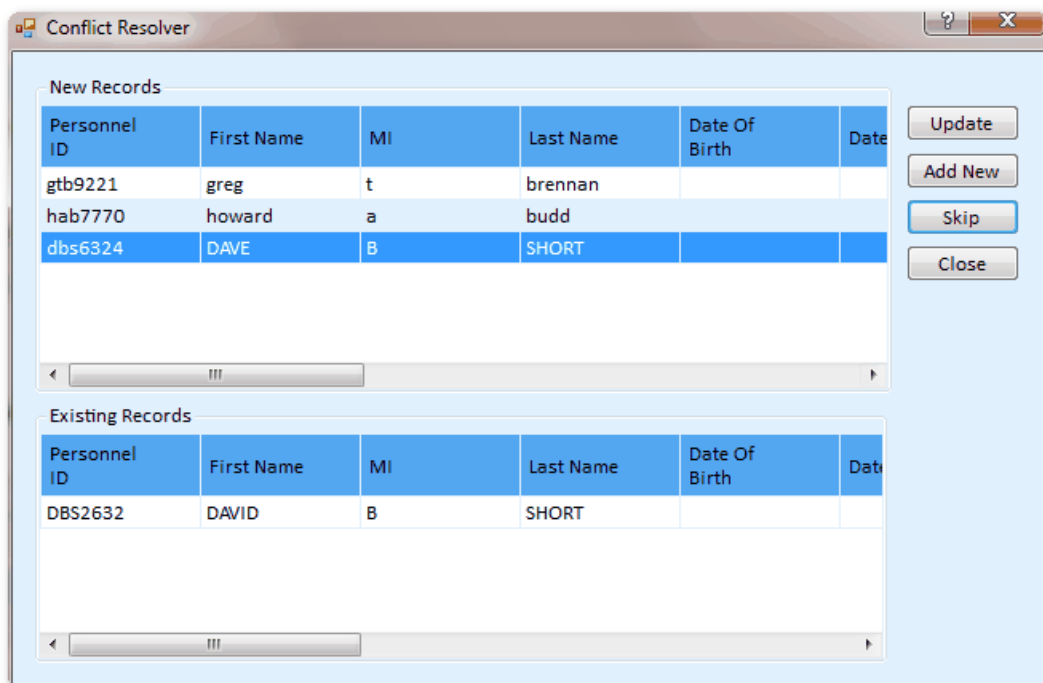

15.2.4 Import Data

The purpose of this tool is to import data that was exported from another instance of FitTrack Gold. (Please view the Backup and Restore options when moving a complete database from one computer to another.)

Data Type defaults to export Personnel and Test Data tables, which is what most users will want to transfer people along with their test results. However, other options include all tables from within the FitTrack Gold database.

- Click on Browse to browse to the file to be imported.
- When the file is found and selected, click Open.
- Click on Import
- In the new window, you must first select Get Data to populate the data into the open window.
- Click Import, and a message will confirm that the data has been imported.

15.2.5 Export Data

The Export option is useful when it is necessary to transfer data to another instance of FitTrack Gold. (Please view the Backup and Restore options when moving a complete database from one computer to another.)

This option defaults to export Personnel and Test Data tables, which is what most users will want to transfer people along with their test results. However, other options include all tables from within the FitTrack Gold database.


The data will be exported only from the company that is currently open.

When Include All Dates is checked, the export will include all tests within the open company.

When the Include All Dates is not checked, the user can enter a date range of tests to be exported.

- Click on Export, and browse to a location where the data will be saved.
- A name of the file will be required in the File Name field.
- Click on Save, and a notification will display to confirm that the data had been exported.

15.3 Advanced Options

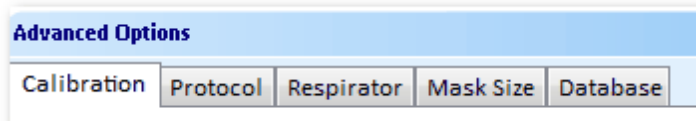

Advanced options include setup information for test protocols, respirators, mask sizes, and calibration retrieval

15.3.1 Calibration

When a Quantifit is connected to a computer and powered up when launching FitTrack Gold, the software will automatically retrieve the daily calibration information.

If for some reason the user wants to retrieve the calibration a second time, or if the Quantifit was not connected when the program was launched, Retrieve Calibration may be used to import the calibration data from the Quantifit.

- Click on Retrieve Calibration
 - Click Yes to confirm that you want to retrieve the calibration data.
 - A message will display confirming that the retrieval was successful.
-

15.3.2 Protocol

The Protocol section allows the user to view, edit, delete, or add, or copy protocols used during testing.

The standard protocols issued by OHD cannot be edited or deleted.

Add Protocol

Step	Step Description	Step Type	Duration
------	------------------	-----------	----------

- Protocol Name: A protocol name must be given.
- Minimum Passing Fit Factor is the minimum passing fit factors for half mask and full face.
- Fit Factor Calculation
 - Controlled Negative Pressure is the native fit factors calculated using the Quantifit.
 - Ambient Aerosol converts the fit factor as it correlates to Ambient Aerosol measurements if this number is preferred.
- Challenge Pressure is the modeled breathing rate, or amount of negative pressure held within the mask during the test.
 - 0.58, Normal, is the negative pressure approved by OSHA and is used in the Redon protocol. This pressure is 0.58 inch of water column, and emulates a “normal” inhalation pressure.
 - 1.0 Heavy, is a negative pressure beyond that of OSHA requirements. This pressure is used for the MIL (military) and CBRN protocols. This pressure is 1.0 inches of water column, and emulates a “heavy” inhalation pressure.
 - 1.5 Extreme, is a negative pressure beyond that of OSHA requirements. This pressure is used for the SCBA protocol. This pressure is 1.5 inches of water column, and emulates an “extreme” inhalation pressure.
- Click on Add to add a step to the protocol.
 - Step No. will indicate which step of the protocol is being edited or created.
 - Step Type will be exercise or test.
 - Step Description is a list of common test or exercise types.
 - Duration is the length of time for the exercise selected. (All test durations will default to 8

seconds.)

- Instructions allows for instructions to the user to be typed in this field.

Edit Protocol allows the user to make changes to an existing protocol, with the exception of protocols that are standard with FitTrack Gold. Edit follows the same guidelines as Add Protocol (above).

Delete Protocol can be used to delete any protocol with the exception of protocols that are standard with FitTrack Gold.

Print is used to print protocol details of any selected protocol.

Copy may be used to copy an existing protocol so that changes can be made without changing the original protocol.

15.3.3 Respirator

The respirator module allows the user to Add, Edit, or Delete respirators that are available on the test screen.

Click on Edit Respirator to enter the edit screen in order to add, remove, or edit a respirator.

Add will allow the user to add a respirator and make it available for all test subjects.

- The Mask field is intended for the respirator manufacturer's name.
- The Model field is for the respirator model.
- Type determines whether the mask is a half mask or full face. This selection allows the software to determine the minimum passing fit factor.
- Edit will bring up a screen similar to the Add Respirator screen, allowing the user to make changes

to existing respirators.


- Delete allows the user to delete a respirator that is no longer used.
- Print will print a list of respirators that have been entered into FitTrack Gold.
- Close will close the Respirator window and bring the user back to the Tools screen.

Mask Size

- The mask size selection contains all the mask sizes that are typically used.
- A user may add a non-standard mask size to make it available for selection, or delete mask sizes that are not applicable.

15.3.4 Mask Size

FitTrack Gold offers the standard sizes for respirator selection. However, if there is ever a need to create an additional mask size, simply add a mask size to this list, which would make the new size available for selection on the test screen.

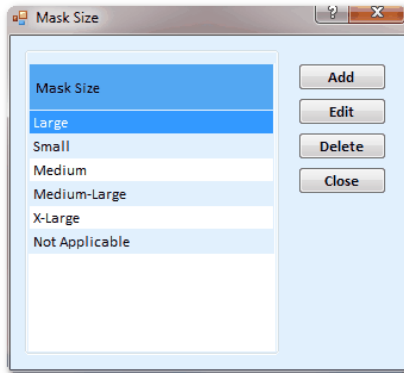

15.3.5 Database

The Database tab allows for the user to attach to a different database to FitTrack Gold. Databases can reside on a server, or even on another workstation connected to the server. The drop-down bar will show the available databases from which to choose. Choose the database, and click on the OK button to connect. If a database does not appear in the selection list, type the path and name, and then click Test Connection. If a connection is established, the newly selected database is being used. Click OK to close the window.

The screenshot shows a dialog box titled "Select Database" with the main heading "FitTrack-Gold Database Configuration". The dialog contains the following fields and controls:


- Server:** A dropdown menu currently showing "OPERATIONS-MGR\FITTRACKGOLD (Local)".
- Database Name:** A text input field containing "FitTrack-Gold".
- Username:** A text input field containing "sa".
- Password:** A text input field with masked characters (dots).
- Update Password:** A checkbox labeled "Update Password (Uses Windows Authentication)" which is currently unchecked.
- Buttons:** "Restore Defaults" (top right), "Search Network" (middle right), "Test Connection" (bottom left), "OK" (bottom center), and "Cancel" (bottom right).

- With a default installation, a standard username and password is assigned. In this Database window, those standard fields are automatically populated. If a custom install was done whereby the installer changed the username and password, those credentials would be needed at this time.
 - Restore Defaults is to change the screen back to the original defaults if the user wants to undo any of the changes that might have been created.
 - When the Database window is opened, FitTrack Gold scans for the available databases. The Search Network button may be used to perform another search.
 - The Update Password option is a safety feature in case the original password is no longer available. This function will only perform this change on a local instance of the database.
-

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection


Part

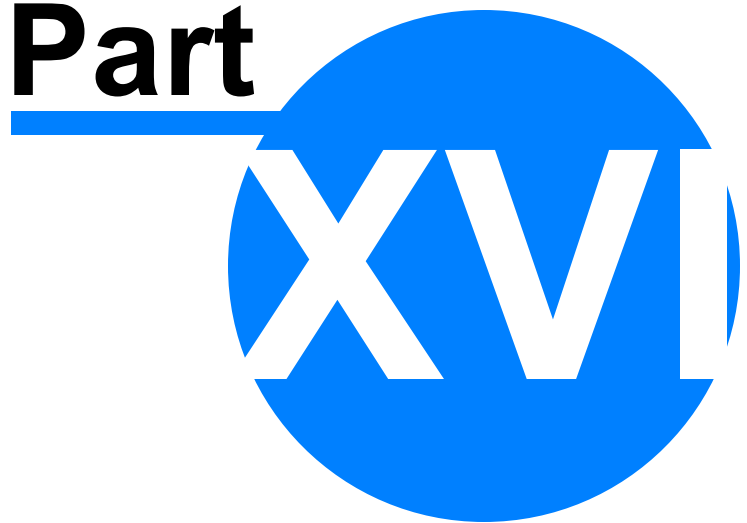

FitTrack Gold
Administration


16 FitTrack Gold Administration

The Administration section allows for flexibility in the way that FitTrack Gold may be used. This includes the way the software opens, security options with users, and functions that average operators can be kept from initiating.

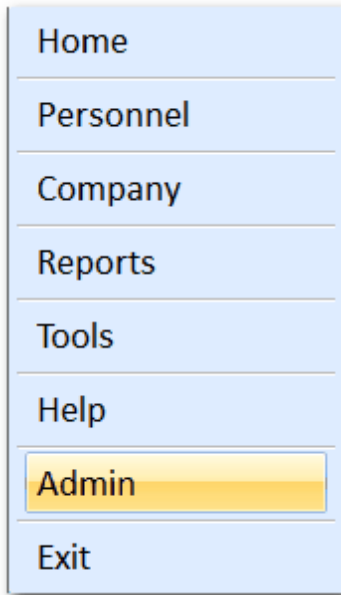


16.1 General

The General Administration fields will assist with enforcing security settings, and allow for flexibility in how the software opens, and determine where database backup information will be stored.

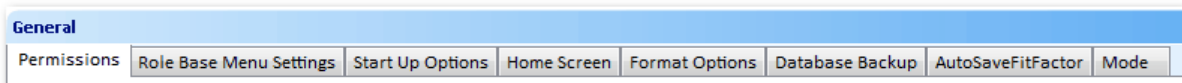

16.1.1 Permissions

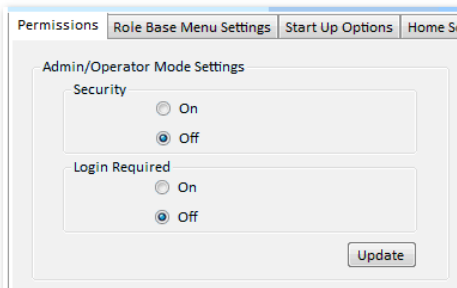

Security pertains to the security of FitTrack Gold. When Security is turned on, there are two types of logins: Operator and Admin. The Admin can select which items the Operators will have permission to


use (see next section, Role Base Menu Setting).

Login Required defines whether or not login credentials are needed to launch FitTrack Gold. (See User Management to learn how to set up login credentials.)

There are four possible configurations for the Admin/Operator Mode Settings. The user or administrator may turn permissions on or off as desired, going from the least secure to the most secure:

- Security OFF, Login Required OFF. This is the default setting for FitTrack Gold, which means the security settings are turned off. There is no login credentials required, and any user has full access to FitTrack Gold and all its settings.
- Security OFF, Login Required ON. This setting requires a user to log in, but once the user is in the program, he or she has permission to do anything within FitTrack Gold.
- Security ON, Login OFF. This setting does not require any user to log in, but there are restrictions to the user's activities as defined by the Role Base Menu Settings (next section). In order to do anything that has been restricted, the user must log into the Administrator screen using administrator credentials, or the default Administrator credentials.
- Security ON, Login ON. This is the most secure way to operate FitTrack Gold. All users must be assigned log in credentials, and only those users with Administrator privileges have full access to FitTrack Gold.

16.1.2 Role-Based Settings

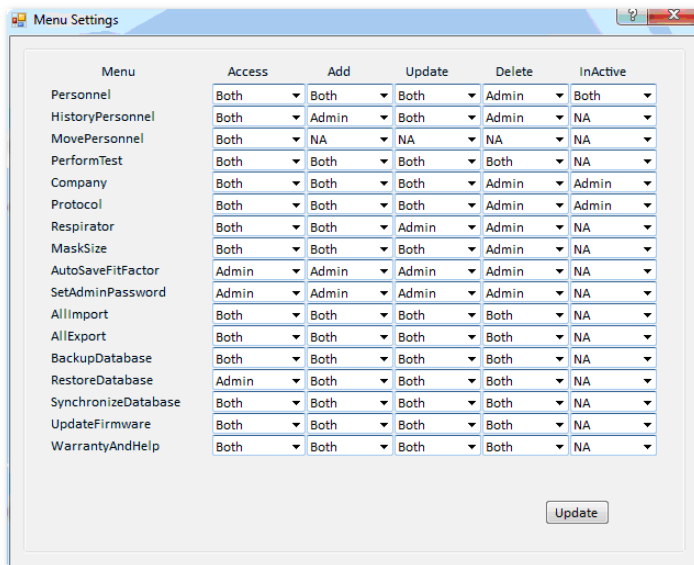

When Security is turned ON in the Permissions screen, these settings will be enforced.

With security turned ON, only an Administrator can make changes to this grid.

When any field in this grid is set to "Both," this means that an Administrator and a User both have permission for this type of action.

When any field in this grid is set to "Admin," this means that only those persons logged in as an Administrator has permission to perform the actions referenced in the grid.


Before any changes take place, the Administrator must click on the Update button.

16.1.3 Start-Up Options

Home Page, when selected, will always open FitTrack Gold to the Home Screen.

Personnel Page with Last Company Opened, when selected, will bypass the Home Screen and go directly to the Personnel screen of the last company opened.

16.1.4 Home Screen

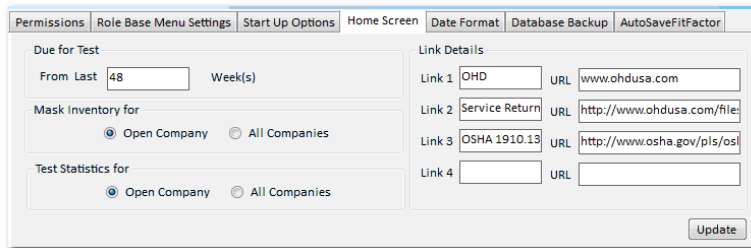

The fields under this tab are used to customize the appearance of the Home Screen.

Due for Test

- On the Home Screen there is a section for Due for Test. This field allows the user to change the number of weeks that FitTrack Gold is using as a guide to notify the user of the people who are due for test.
- The default value is set to 48, which means that FitTrack Gold polls the software, and populates the Home Screen with a list of people who have not been tested in the past 48 weeks.

Mask Inventory

- The mask inventory will reflect only the inventory from the company that is currently opened.
- With All Companies selected, the mask inventory will reflect the mask inventory from all companies in the database.

Test Statistics for


- With Company selected, the test statistics will reflect only the information from the company that is currently selected.
- With All Companies selected, the test statistics will reflect the information from all companies in the database.

Link Details

- For the users convenience, links have been included for popular sites pertaining to fit testing, and OHD. These links can be changed at any time by the user.
 - The OHD link will bring the user to the OHD web site for information and updates on respiratory protection as it pertains to the Quantifit.
 - The Service Return Form link will bring the user to the service return form required when sending the Quantifit in for service or calibration.

- OSHA 1910.134 Appendix A is a link to the OSHA Fit Test Standard, which outlines all the requirements for respirator fit testing.

16.1.5 Date Format

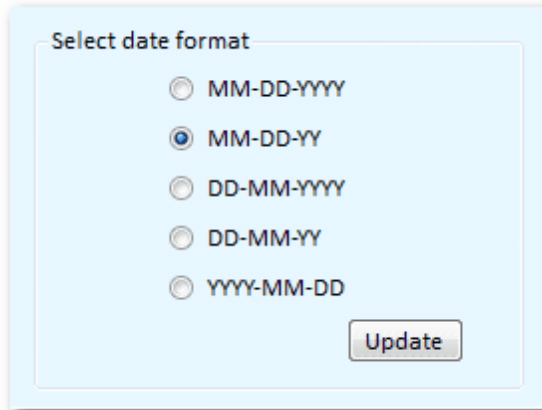

Select date format

MM-DD-YYYY

MM-DD-YY

DD-MM-YYYY

DD-MM-YY

YYYY-MM-DD

Update


The Date Format is user-selectable to the user's preference as to how dates should be displayed.

Changes in the dates will be throughout the program, and includes intelligent sorting when searching or sorting by date.

MM is for a two-digit month, DD is for a two-digit day, YY is for a two-digit year, and YYYY is for a four-digit year.

The User must select Update before leaving this screen in order for the required changes to take place.

16.1.6 Backup

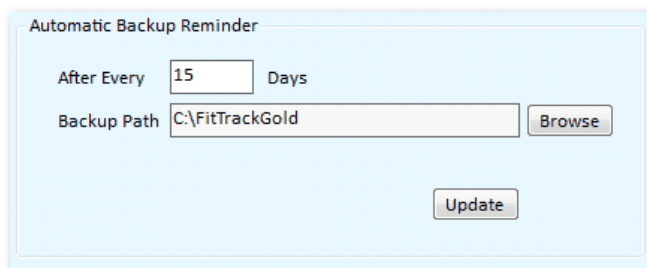

Automatic Backup Reminder

After Every Days


Backup Path Browse

Update

When closing FitTrack Gold, the user will occasionally be prompted to backup the database. This setting allows the user to determine how often that reminder should appear, as well as where the database backup will be saved.

Click Update for changes to take effect.

16.1.7 Auto-Save

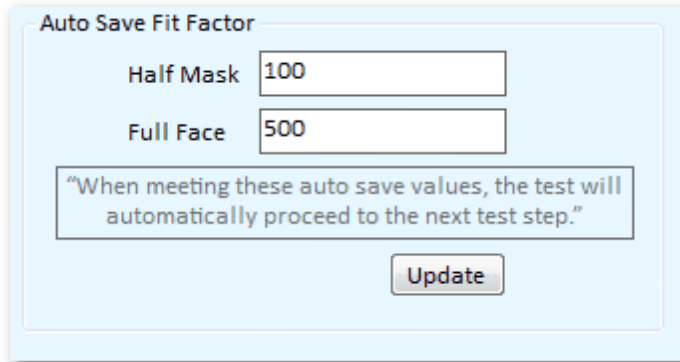

Auto Save Fit Factor

Half Mask 100

Full Face 500

"When meeting these auto save values, the test will automatically proceed to the next test step."

Update

After each test step, FitTrack Gold automatically determines a pass or fail. After a pass, the software forwards the user to the next step of the test.

These settings for the Auto Save Fit Factor do NOT determine whether the test passed or not, they determine whether the step is automatically saved or not.

By default, the values are set to the minimum passing fit factors.

The user can set the values to "0" to turn this function off. The result would be that after each step, the user would have to click Save or Retry.


16.1.8 Mode

Disconnected Mode (Will not communicate with Quantifit at all)

Each time FitTrack Gold starts, the software searches for a connected Quantifit. If a Quantifit has never been connected to the computer, there will always be a warning that the FTDI Drivers have not been installed. This is because a Quantifit must be attached to complete the driver installation.

If a specific computer is being used only for the FitTrack Gold database, it is a good idea to click on this Disconnected Mode. This will eradicate the FTDI message, as well as save computer resources by not querying for an attached Quantifit.

16.1.9 Languages

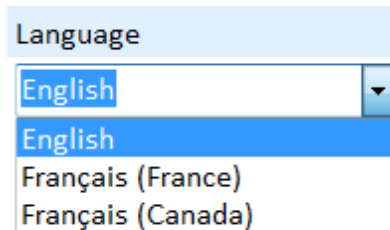

Language

English

English


Français (France)

Français (Canada)


Languages may be changed in FitTrack Gold software for use in countries other than English speaking countries. Languages will continue to be added as particular needs arise. When a language is changed, the user will be prompted to restart FitTrack Gold.

16.2 Reports

The report settings will allow the user to customize header information on the reports, as well as which search options will be available when printing reports from the Reports tab.

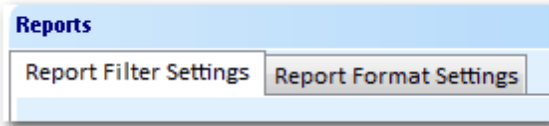


16.2.1 Report Filter Settings

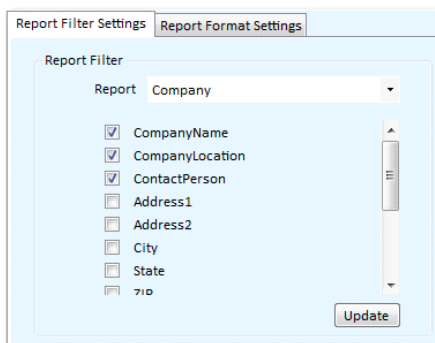


Report filter settings allow the users to turn on or turn off the filters that appear on the report screen, the Personnel screen, or the Company screen.

When a box is checked, the filter criteria will be available on the screen. When the box is unchecked, the filter will not appear as part of the search criteria.

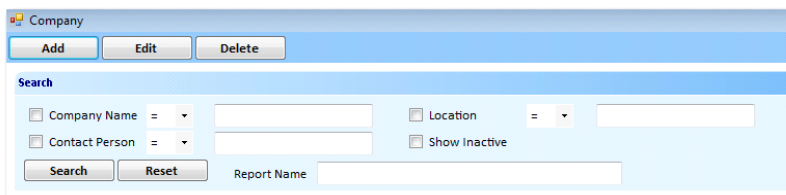


Show Inactive is always available as a filter criteria in case there is a need to find an item that has been made inactive.

Filters can be edited for screen and reports including Company, Personnel, Protocol, Respirator, Calibration Data, Fit Test Summary, Fit Test Result, Fit Test Log, Fit Test Card and Outstanding Test Summary.

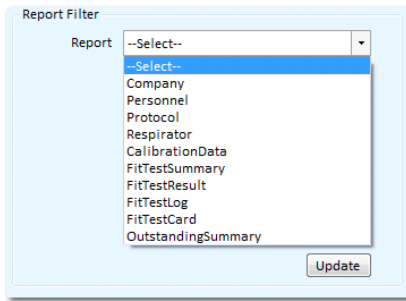


16.2.2 Report Format Settings

Report Format Settings allows the user to customize the header section of each report. Changes made in this tab will affect all reports to be printed from FitTrack.

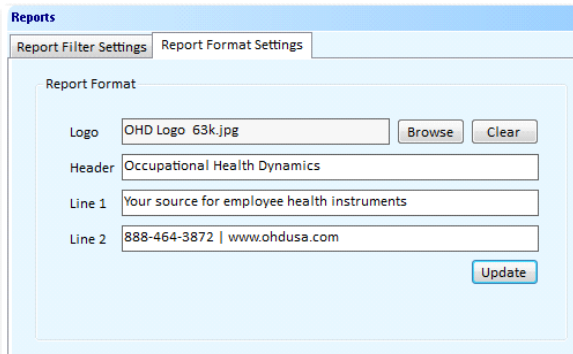


To place a company logo in the upper right side of the report, browse to a location where a logo has been saved, and this will be loaded into the report template.

Header, Line 1 and Line 2 are for the user's discretion. The header line is typically the name of the company who is performing the fit tests. Line 1 and 2 can be an address, or additional information that the user would like to see appear on the reports as seen below.

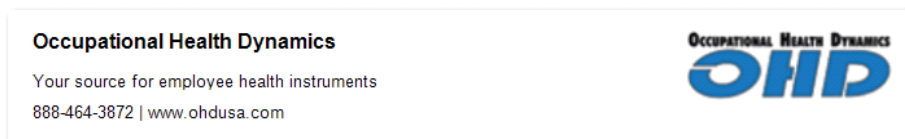


16.3 Security

Security settings include User Management for setting up login accounts, and Update Firmware for when updates become available for the Quantifit.

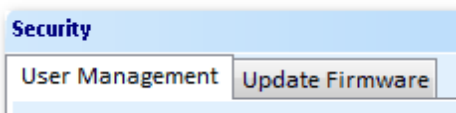

16.3.1 User Management

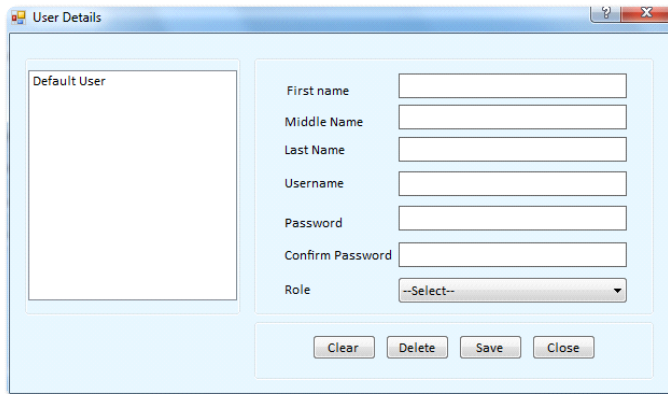

User details is used to create, edit or delete users.

These users will appear in the “Operator” drop-down list when performing a test.


If the login feature is turned on, these profiles will be used for each user to open FitTrack Gold.

The appropriate fields can be edited to create a user’s profile.

Role options are either Admin or Operator

16.3.2 Update Firmware


1. Update Firmware allows the user to update the Quantifit firmware directly into the Quantifit.

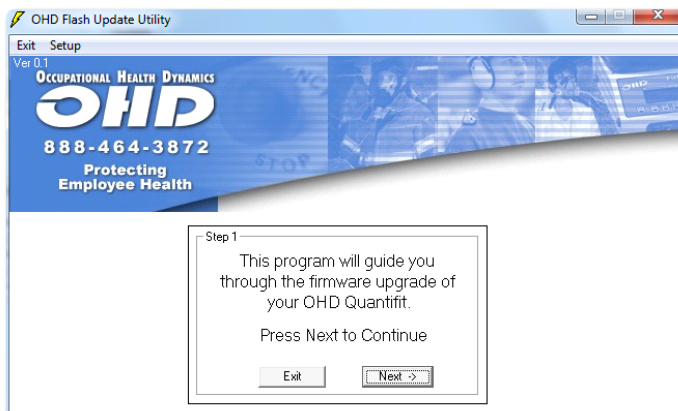


2. Connect the Quantifit and turn it on, and press Next.



3. The software will search for a Quantifit and confirm the connection.

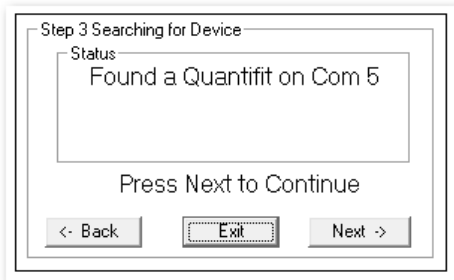


4. If the computer in use has an internet connection, use the Browse Internet Files selection. This will access a specific internet location that contains Quantifit firmware.

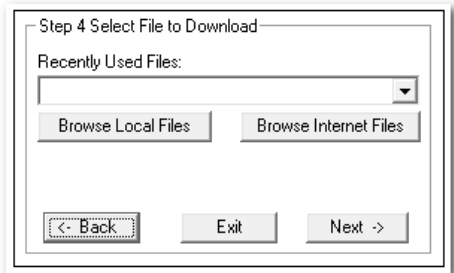


If the computer in use does not have an internet connection, the firmware file must be downloaded from another computer, via the OHD website, and then transferred to the computer containing the FitTrack Gold software. On Step 4 of Update Firmware, the user would select Browse Local Files and then browse to the location in which the firmware file was saved.


5. Shown below is what appears when Browse Internet Files is Selected. Select the file name (to highlight it in blue), and then select Use Selected File.

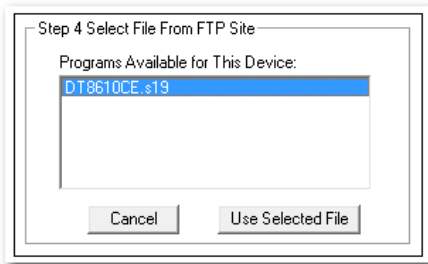

- The following message will appear in the window, and the Quantift will display the message, "Flash programming enabled."

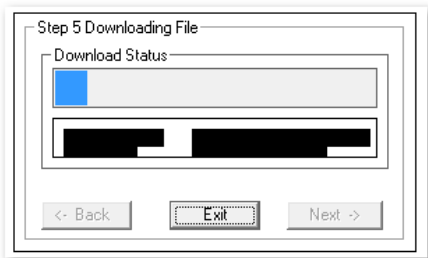


- The following message will appear indicating that the update was successful. The Quantift will restart. Select Finish, and the update is complete.

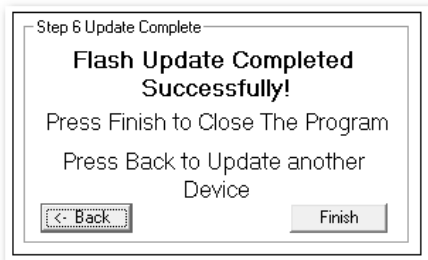

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

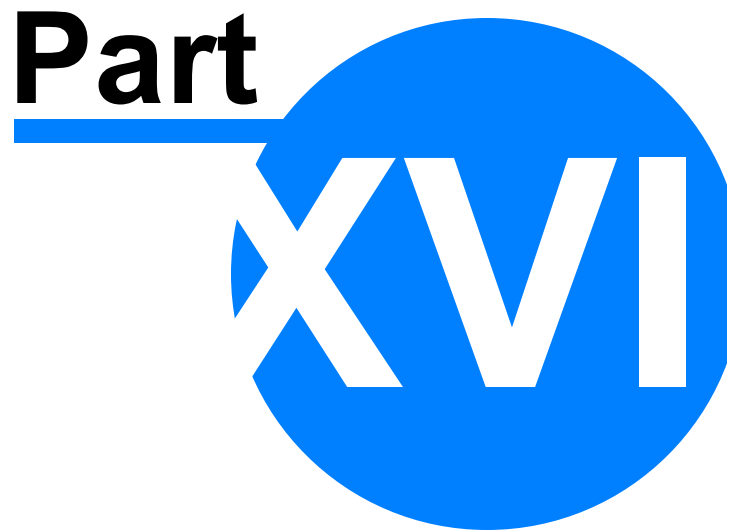

Part

Troubleshooting

17 Troubleshooting


In this chapter you will find information about problems and possible solutions.

17.1 Test Measurements

You may occasionally find a test measurement that is not as you expected. Descriptions of some of these common situations and possible solutions have been included to aid the user in obtaining more accurate measurements.


17.1.1 High Leakage

In many cases, the measured leakage exceeds the ability of the Quantifit to measure. Within the Quantifit, once the measuring cylinder reaches the maximum capacity, the cycle will immediately cease and abort. If the test time does not travel the full 8 seconds of the test, the leak is too great. The FitFactor will equal "0" and the Leak Rate will equal "0.0." You will be required to retry the step and reach an understanding of why the leak is so great.

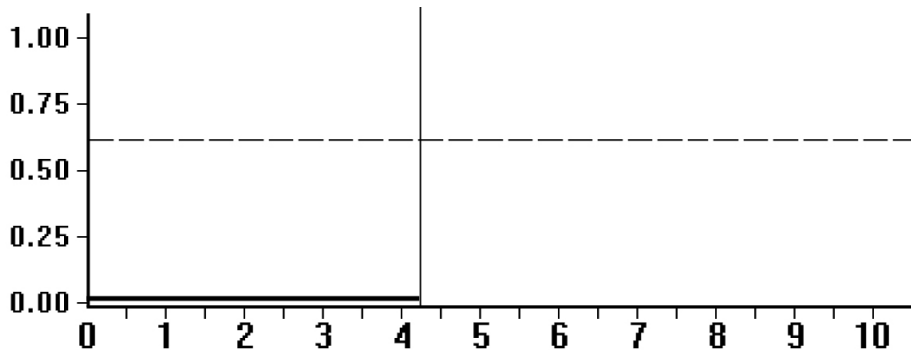

17.1.2 Large Leak

At other times the Quantifit will labor to create the negative pressure only to end the test measurement before the 8-second time. This leakage, although less than maximum, still fills the cylinder and abruptly ends the test. It will look something like this:

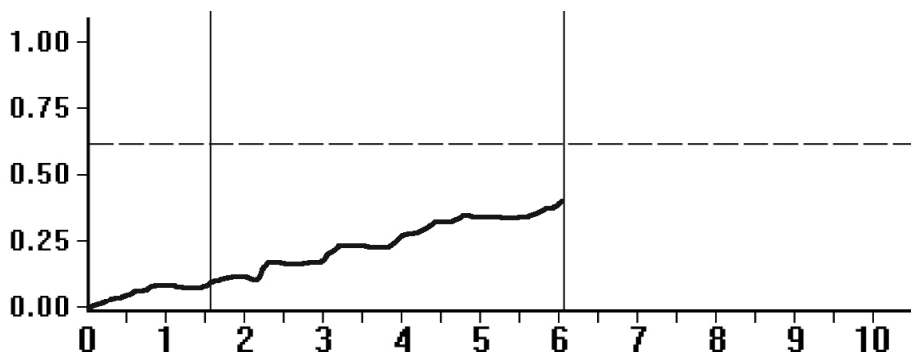

Possible Solutions


1. Check all connections for proper attachment.

2. Check to ensure that the Quantifit mask adapter is properly attached to the respirator. Look for cross-threading, loose connection, etc.
3. Check mask for proper tightness to the face and check that no hair, beard stubble, or other objects inhibit a good face-to-facepiece seal.
4. TRY A DIFFERENT MASK! Many masks SEEM to fit well but are NOT properly sized to a specific wearer. In other cases a different size or style may be better suited for the individual wearer.

17.1.3 Erratic Mask Pressure

The Quantifit is very sensitive to pressure changes inside the mask. If the pump motor sound alternates between high-and low-pitched whines and the pressure tracing line, even after challenge pressure is attained, is erratic, the Quantifit is sensing variations in pressure.

If the traceline varies significantly, and the Quantifit cannot obtain a consistent challenge pressure through the duration of the test, you would need to rerun the measurement. There are a number of causes for this type of reading.

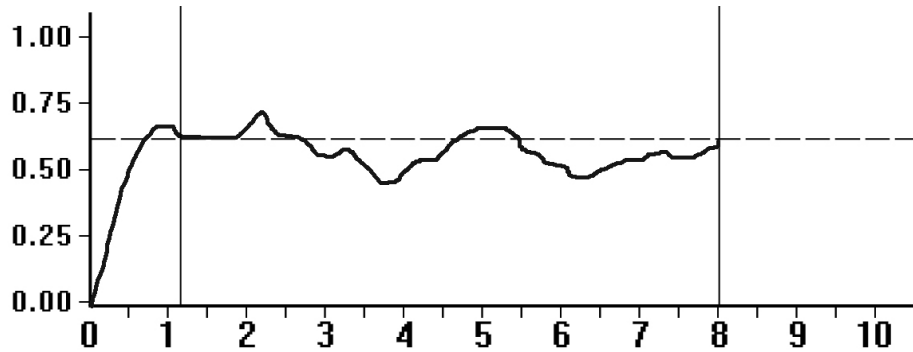


Possible Solutions

1. Movement by the person being tested needs to be minimized. Actions such as swallowing, opening the mouth, and moving the tongue can adversely affect the pressure sensor.
2. Air inhalation or exhalation, even slightly, creates dramatic changes within the mask. Re-instruct the test subject to maintain breath holding during the test measurement.
3. A test subject may be unable to stop the flow of air through the nose while holding his breath. A nose clip can assist the subject (be sure that the nose clip does not interfere with the fit if the respirator).

17.1.4 Consistently Low Fit Factors

When you consistently get low fit factors, even when you know that a respirator should fit, and the pump motor is running slightly faster than normal, the graph could look normal.

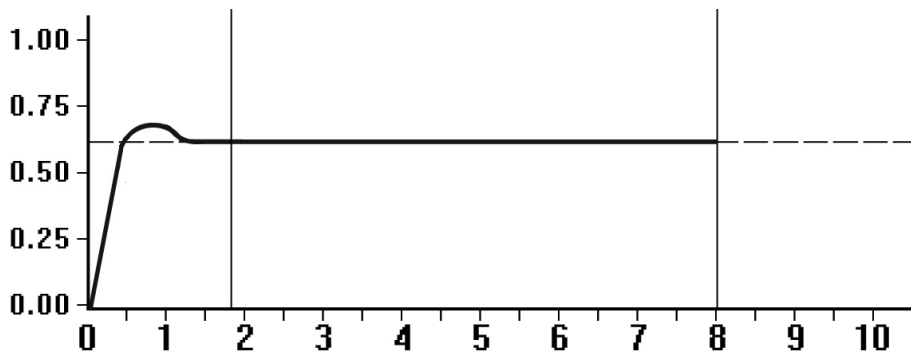

When the leak rate is high, the graph can still look somewhat normal. The Quantifit will often be able to keep up with the leak and give a good test result, regardless of the fact that the leak is too large to yield a passing fit factor.


Possible Solutions

1. As in other leakage situations (see [HIGH LEAKAGE](#)), check all hose connections, adapters, and adapter connections to respirators.
2. Check for proper tension of respirator to face.
3. Try a different size or different respirator.
4. Have Adapter checked for leaks (call OHD for this service).

17.1.5 Rapid or Erratic Graph Movement

(Before or During Test)

When the Quantifit gives erratic, jerky movement during the test, especially before the challenge pressure is attained, and the challenge pressure takes awhile to attain, the problem might be an easy one to find and solve.

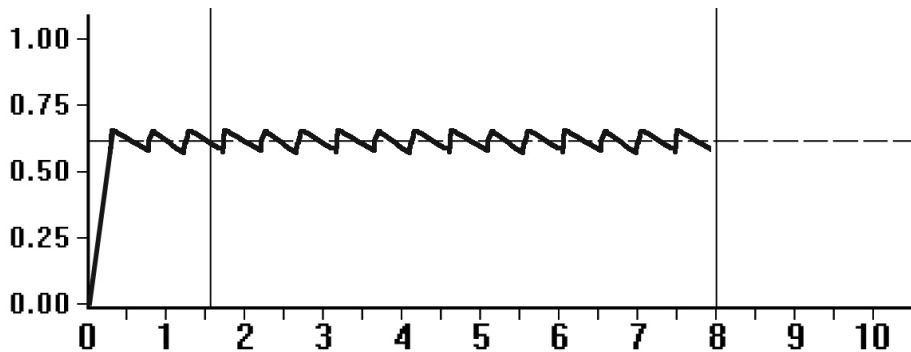

When the inhalation valve is not propped open or removed, the Quantifit is unable to get to the airspace touching the facepiece seal. The Quantifit is only looking at the seal of the inhalation valve, which can rapidly “flutter” with the sealing and breaking of the seal. The inhalation valve can easily be missed on some full-facepiece respirators that can be converted from SCBA or airline to Air Purifying Respiratory.

Possible Solution

Insure that the Inhalation Valve is propped open or removed.

17.2 Other Problems

17.2.1 Daily Calibration

The Daily Calibration normally functions to completion without any intervention by the user. Occasionally a problem may arise. The calibration procedure may stop abruptly or display an error message.

Possible Problem:

1. Something has blocked or partially obstructed the leak orifice on the Dual Tube Assembly and has rendered the tube out of tolerance.
2. Pressure in the transducer has not been zeroed.
3. The transducer needs factory calibration.
4. Blockage of exhaust port on back of the Quantifit.

Possible Solutions

1. Turn Quantifit off at the power switch, wait 15 seconds, power on the Quantifit, zero pressure, and retry Dual Tube Calibration.
2. Replace Dual Tube Assembly.
3. Call OHD to evaluate problem or to arrange return for factory calibration.

17.2.2 What do I do when people are not passing a fit test?

This problem could include a number of variables, but most likely would fall into three categories: machine fault, adapter/mask fault, or subject/operator error. If it's a one-time problem when you are able to pass other people, the answer simply may be that the mask is not a good fit on the subject. When several subjects can't pass, you must look at the other variables.

Instrument Failure

1. You must do the Daily Calibration at the beginning of each day.
2. If the Quantifit finishes the daily calibration without an error message, this assures that the machine is operating properly and within tolerance.
3. If the Quantifit does not complete the daily calibration, service might be needed. Please contact OHD customer service.

Mask/Fit Fault

1. You must first determine that there is a proper fit. Any facial hair, hair getting anywhere under the mask seal, temple hair too far forward, sunken temples or facial scarring, protrusions or blemishes, having the mask too loose or too tight, can all be reason enough to keep the FitTester from pulling a negative pressure within the mask. There are other obstacles that can come into play which are too numerous to list. With more experience fit testing, it's easier for one to see potential problems with fit.
2. To further check on the mask fit, do a user seal check for 10 seconds. Press the Seal Check button on the front of the instrument and take and take in a breath allowing for plenty of suction on the mask. If after 10 seconds the mask "drops" when releasing the Seal Check button, then there was a good seal in place. If there is no felt movement when the Seal Check button is released, then the air has leaked out in those 10 seconds.

3. Exhalation valves may be dirty or creased allowing air to be pulled into the mask. While the inhalation valves must be removed or propped open, the exhalation valve must remain in place and maintain a good seal.
4. On the mask, the apex of the head straps should sit on the crown of the head and not off to one side or the other.
5. Check the manufacturer's recommendation for properly donning a respirator and ensure that the user has been properly trained in donning that respirator as part of the OSHA requirements. All straps must be pulled with equal tension at each point.

Adapter Fault

1. The adapters must be kept clean and in good shape.
 2. Disconnect and reconnect all tubes to make sure the connectors "snap" into place. Hold the the assembly by the tubes rather than the metal connector.
 3. If the adapter had been dropped or crushed, a hairline crack might cause leakage.
 4. Hold down Seal Check button, and place finger over the the side of the blue tube that connects to the adapter, to see if this changes the sound of the air flow. If air flow does not change, it could indicate a fault with the pressure.
 6. To verify the adapter is air-tight, connect only the blue tube to the adapter with the single hose connection. Submerge the adapter and hose connection completely under water. Then press and hold the SEAL CHECK button for at least 5 seconds. Repeat this several times. If bubbles are seen coming from the adapter, there is a leak in the diaphragm or in the eight screws holding the top plate on. Replace the diaphragm and tighten screws firmly. Conduct the test again to ensure no bubbles are seen.
-

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part



Instrument Operating
Guidelines

18 Instrument Operating Guidelines

To ensure that your Quantifit is working properly and within specification, a daily calibration must be performed before each day of testing, and an annual factory calibration must be done once each year.

18.1 Calibration & Maintenance

Your Quantifit is an OSHA accepted Quantitative (QNFT) fit test instrument. It utilizes the Controlled Negative Pressure (CNP) fit test method as outlined in the Respiratory Protection Standard - 29 CFR 1910.134, Appendix A. The Quantifit is a highly accurate precision instrument that uses electronic pressure sensors to detect minute changes to very low levels of negative pressure to an accuracy of +/- 0.25%. To ensure the instrument operates at the parameters for which it is designed, OHD requires the Quantifit to receive annual maintenance and calibration at an authorized service facility.

Reasons for Annual Maintenance & Calibration:

- OSHA Mandate – 29 CFR 1910.134 Appendix A Part I.C.1.(b) – “The employer shall ensure that QNFT equipment is kept clean, and is maintained and calibrated according to the manufacturer’s instructions so as to operate at the parameters for which it was designed.”
- Best Practice – Annual calibration and maintenance is the accepted industry standard for Industrial Hygiene and Occupational Health instrumentation.
- Reliable Results – The Quantifit is a precision instrument that is used to help ensure employee safety. Critical decisions are made based on the results provided by the Quantifit. All precision instruments require some degree of calibration to ensure the measurements are accurate.
- Limits Liability – Complying with the manufacturer’s guidelines establishes good faith efforts towards employees’ health and safety. Failure to comply with established safety protocols could be viewed as negligent.
- Extends Service Life – The heart of the Quantifit is a mechanical piston type pressure engine. Included in the calibration procedure are pressure engine checks. The pressure engine is completely disassembled, cleaned, and lubricated where warranted.
- Upgrades – The calibration process includes upgrades to the latest firmware versions and modifications as needed.
- Confidence – Our NIST (National Institute of Standards and Technology) traceable calibration assures that the unit is operating properly within accepted parameters.

18.2 Operating Conditions & Specifications

Operating Range

- 15 to 30 Degrees C
- 60 to 86 Degrees F

Storage Range

- -40 to 60 Degrees C
- -40 to 140 Degrees F

Power Source

- 100 –240 VAC, 50/60 Hz

Power Supply Adapter

- 9 VDC, 5000 mA

Power Consumption

- Less than 1000 mA

Certifications

- UL, CE, CSA

FitTrack Software

- Pentium 133 MHz or better
- 2GB RAM
- Windows XP SP3, Vista, 7, 8, Server 2008, 2012
- USB 2.0 Port
- 25MB minimum disc space
- Any Windows-compatible printer

18.3 Service Return Form



Your Protection Our Priority

Service Return Form

Include a completed copy of this form with your shipment.

► Quantifit Serial #(s) _____

► List accessories included in shipment: *(Required accessories notated with *)*

Quantifit/FitTester 3000

- Tube Assembly* Vinyl Pouch
 Power Cord Computer Cable
 Printer Keyboard
 Trigger Button* or Squeeze Bulb*
 Adapters (Kit #: _____)
 Other: _____

Noise Instruments

- doseBadge Mounts
 Windscreens
 AC Adapter
 Carry Case
 Keyfob

Audiometers

- Headphones*
 Bioacoustic Simulator*

NOTE: We are not responsible for non-OHD accessories shipped with service units.

► Reason for return:

- Warranty Calibration Repair/Other

► Payment Information **(This section must be completed in order for us to service your instrument):**

- Warranty Repair Previously Purchased Maintenance Contract
 Purchase Order# _____ Maximum Amount Authorized: _____
We do require a copy of your purchase order.
 Purchase order copy is: Enclosed Being Mailed Being Faxed
 Credit Card: Type: _____ Number: _____ Exp: _____ CID: _____

► Describe any known problems: _____

► Before/After Data Needed? No Yes *(Additional charges will be applied)*

► Expedited (24hr) Service Needed? No Yes *(Additional charges will be applied)*

Please note: Requiring an estimate before work may delay service return time.

Bill To:	Ship To: (<input type="checkbox"/> check here if same as billing)
Name:	Name:
Company:	Company:
Address:	Address:
City, State, Zip:	City, State, Zip:
Phone:	Phone:
Fax:	Fax:
Email:	Email:

To expedite your repair:

- ❖ Please include a copy of this form when shipping your instrument.
- ❖ It is required that one Service Return Form be completed for each unit (except doseBadge kits).
- ❖ Terms are net 30 days OAC. **No RMA number is required.**

Return equipment, billing information and all correspondence to:

Occupational Health Dynamics
 2687 John Hawkins Parkway | Hoover, AL 35244
 Phone: (888) 464-3872 | Fax: (205) 980-5764
 calibration@ohdusa.com

18.4 What's New

To update FitTrack Gold, visit our website to see if you have the latest version. Check your version number under the Tools section, and click on the Version tab, which is the top right tab. Our website will list the version number as well as the release date. After downloading the update file, simply install the update. No need to uninstall your current version. While nothing should happen to your data, it's always a good idea to do a back up before changing any software.

The following is a list of updates, added features, and bug fixes that have been added to each incremental update. The newest version is listed first.

DATE: 06/27/2016
VERSION: 2.0.6.2

- **BUG FIX:** Allow an update from 2008 version of SQL Express.
- **BUG FIX:** Allow logo to be printed on all reports.
- **BUG FIX:** Fixed incorrect breathing rate for “Heavy” when creating custom protocol.
- **ENHANCEMENT:** Added the ability to record qualitative fit tests so that all fit test records can be contained in one place.
- **UPDATE:** Updated the manual and help files.

DATE: 03/31/2016
VERSION: 2.0.5.9

- **BUG FIX: Included** updated FitTrack Gold Manual.

DATE: 03/01/2016
VERSION: 2.0.5.8

- **BUG FIX: Allows** users to update SQL 2008 files to SQL 2012 versions.

DATE: 02/01/2016
VERSION: 2.0.5.7

- **BUG FIX:** When using the “delete NULL records” function introduced in 2.0.5.6, there is now a “busy” cursor when it’s working and a “Done” message when it has completed. This is to reduce confusion with the user.
-

DATE: 01/25/2016
VERSION: 2.0.5.6

- **BUG FIX:** Security settings had been tied to Windows login, so Security settings did not copy among logins. This has been fixed.
- **ENHANCEMENT:** A button has been added when doing a synchronization to give the user an opportunity to delete NULL records. This helps to keep the database clean when syncing.
- **ENHANCEMENT:** Added a tool to automatically index the database, which will help with speed with larger databases.

DATE: 01/03/2016
VERSION: 2.0.5.5

- **BUG FIX:** Last version (2.0.5.4) created an install issue that was fixed in this version.

DATE: 11/04/15
VERSION: 2.0.5.4

- **BUG FIX:** Worked more on English words that were not translated.
- **BUG FIX:** Removed “Extra Large” from default mask sizes, because there was already an “X-Large”

DATE: 10/27/15
VERSION: 2.0.5.3

- **BUG FIX:** Added some more translations that were missed previously, and updated words that had not yet been translated.

DATE: 9/11/15
VERSION: 2.0.5.2

- **BUG FIX:** Testing revealed minor problem with changing languages in 2.0.5.1.

DATE: 09/10/15
VERSION: 2.0.5.1

- **ENHANCEMENT:** Language feature works with Canadian and European French. Install Shield will detect language version of Windows and default to that version, although
-

this can be changed at any time in the Admin > Mode tab.

DATE: 07/25/15
VERSION: 2.0.4.9

- **ENHANCEMENT:** “Use All Companies Here” is now the default selection for the synchronization.
- **BUG FIX:** For custom protocols where exercises were used, the fit factor calculated the 0’s for the exercises into the overall fit factor. This has been corrected.
- **ENHANCEMENT:** Minor behind-the-scene changes for the language feature, mostly related to reports.

DATE: 06/24/15
VERSION: 2.0.4.8

- **ENHANCEMENT:** Work added with language translations, but not yet finished.
- **BUG FIX:** Corrected an issue on the Fit Test Results report where the report date did not follow the same format as the rest of the dates.

DATE: 03/26/15
VERSION: 2.0.4.7

- **BUG FIX:** Corrected issue when conflicting with another device that uses the FTDI driver.
- **ENHANCEMENT:** Added Medgate export functionality as a drop-down option under Export in Tools.
- **ENHANCEMENT:** Created an executable with SQL Express 2012

DATE: 02/06/15
VERSION: 2.0.4.6

- **ENHANCEMENT:** Added scroll bar to Home screen
- **ENHANCEMENT:** Added Medgate export functionality as a drop-down option under Export in Tools.

DATE: 09/09/14
VERSION: 2.0.4.5

- **BUG FIX:** Canceling a test would cause an issue with the following test. There was an issue in the way the graph was being drawn, as well as storing the fit factor for each step. This has been corrected.
-

DATE: 08/11/14
VERSION: 2.0.4.4

- **ENHANCEMENT:** A scroll bar has been added to the test screen, to allow scrolling when a screen resolution is less than 900 pixels high

DATE: 08/07/14
VERSION: 2.0.4.2

- **ENHANCEMENT:** Added fields to Home Screen to enable testing direction from this screen by choosing Company and Name, or by selecting a person from the Due for Test section.
- **ENHANCEMENT:** Updated test screen to have much larger and simpler test instructions, making it easier for an individual to test him or herself.
- **ENHANCEMENT:** Changed Personnel Screen so that many labels can be changed, or turned off, according to the user's needs. The Personnel Screen is set up through the Company Screen, and will only affect the particular company where the changes are assigned.
- **ENHANCEMENT:** Changed hyperlink properties on the Home Screen so that users can use a hyperlink to point to a specific file on the computer using "File://Path"
- **BUG FIX:** Corrected an issue when the software receives a 0 leak rate from the Quantifit.
- **MAINTENANCE:** Updated manual and help files.

DATE: 01/13/14
VERSION: 2.0.3.2

- **ENHANCEMENT:** Moved "Help" tab below Admin tab.
- **BUG FIX:** When printing Fit Track Card report directly to PDF, letters were being doubled because of a font issue.

DATE: 10/07/13
VERSION: 2.0.3.1

- **BUG FIX:** Changed coding to recognize international versions of Windows so that numbers all agree. Some countries use periods where we use commas, and vice versa. This was causing errors with fit factors. All measurement values will be switched to U.S. values, but these only apply to leak rates and fit factors, and should be transparent to the end user.

DATE: 06/04/13
VERSION: 2.0.3.0

- **ENHANCEMENT:** Added the Version tab to the Tools screen
-

- **ENHANCEMENT:** Updated manual
- **ENHANCEMENT:** Changed the FTDI driver to be the latest D2XX FTDI driver, version 2.08.28

DATE: 05/24/13
VERSION: 2.0.2.9

- **ENHANCEMENT:** Added the new disconnected mode, which will prevent the driver message and slowdown from occurring when no Quantifit has been attached. It will also prevent the "Quantifit Not Connected" message.
- **BUG FIX:** For Custom Install, the default password was incorrect, and this has been fixed.
- **BUG FIX:** When printing Outstanding Report from the dashboard, this would print ALL companies. The fix prints only the open company

DATE: 05/14/13
VERSION: 2.0.2.8

- **BUG FIX:** Updated Fit Test Card Report. Made report to fit margins of pre-perforated sheets, cleaned up text, added color.
- **BUG FIX:** Made one change to when SQL Server Express detects a restart is needed.
- **ENHANCEMENT:** Added additional logging when a database backup or restore error occurs.

DATE: 04/24/13
VERSION: 2.0.2.5

- **ENHANCEMENT:** Created an install package with no SQL database, which delivers a smaller file and quicker installation for upgrades or for those with SQL already installed.
- **BUG FIX:** Fixed an issue where the custom installer might fail, when selecting a different database.
- **ENHANCEMENT:** Added a new "Select Database" option in the Tools Menu.
- **BUG FIX:** Fixed a bug when changing the local sa password and the prompt was not displaying correctly.

DATE: 04/24/13
VERSION: 2.0.2.3

- **BUG FIX:** Corrected issues and errors that some customers experienced when doing a custom install.
-

- **ENHANCEMENT:** The tools menu now has the new "Select Database" button.

DATE: 04/02/13


VERSION: 2.0.2.2

- **BUG FIX:** With no middle initial present, the Fit Test Result report would only print last name of employee.
 - **ENHANCEMENT:** Synchronization now has an "All Companies" option.
-

OHD Quantifit and FitTrack Gold Software

The Gold Standard in Respiratory Protection

Part

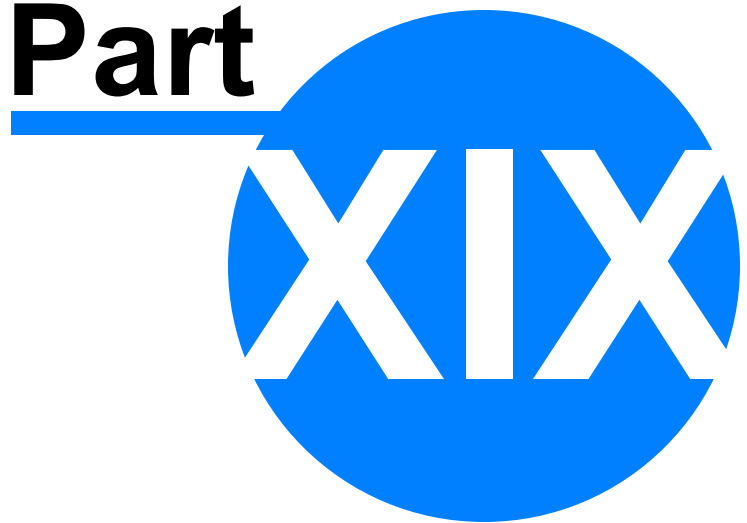

Terms & Conditions

19 Terms & Conditions

19.1 Claims

Our routine method of shipment is via common carrier, FOB origin. Upon delivery, if physical damage is found, retain all packing materials in their original condition and contact the carrier immediately to file a claim.

If the instrument is delivered in good physical condition but does not operate within specifications, or if there are any other problems not caused by shipping damage, please contact Occupational Health Dynamics (OHD) or your local sales representative.

19.2 Standard Terms and Conditions

Refunds & Credits Please note that only serialized products (products labeled with a distinct serial number) and accessories are eligible for partial refund and/or credit. Non-serialized parts and accessory items (cables, carrying cases, auxiliary modules, etc.) are not eligible for return or refund. In order to receive a partial refund/credit of a product purchase price on a serialized product, the product must not have been damaged by the customer or by the common carrier chosen by the customer to return the goods, and the product must be returned complete (meaning all manuals, cables, accessories, etc.) within 90 days of original purchase and in "as new" and resellable condition. The Return Procedure must be followed to assure prompt refund/credit.

Restocking Charges Only products returned within 90 days from the date of original purchase are eligible for refund/credit. Products returned within 30 days of original purchase are subject to a minimum restocking fee of 15%. Products returned in excess of 30 days after purchase, but prior to 90 days, are subject to a minimum restocking fee of 20%. Additional charges for damage and/or missing parts and accessories will be applied to all returns. Products not returned within 90 days of purchase, or products which are not in "as new" and resellable condition, are not eligible for credit return and will be returned to the customer.

Return Procedure Every product returned for refund/credit must be accompanied by a Return Material Authorization (RMA) number, to be obtained from our Order Processing Department. All items being returned must be sent freight prepaid to our factory location.

Certification This instrument was thoroughly tested and inspected and found to meet OHD manufacturing specifications when it was shipped from the factory. Calibration measurements are traceable to the National Institute of Standards and Technology (NIST). Devices for which there are no NIST calibration standards are measured against in-house performance standards using accepted test procedures.

19.3 Warranty and Product Support

The Quantifit is warranted by OHD against defects in materials and workmanship for two full years from the date of original purchase. During the warranty period, we will repair or, at our option, replace at no charge a product that proves to be defective, provided you return the product, shipping prepaid, to OHD. This warranty does not apply if the product has been damaged by accident or misuse or as the result of service or modification by other than OHD. **IN NO EVENT SHALL OHD BE LIABLE FOR CONSEQUENTIAL DAMAGES.**

Only serialized products and their accessory items (those items bearing a distinct serial number tag) are covered under this two-year warranty. **PHYSICAL DAMAGE CAUSED BY MISUSE OR PHYSICAL ABUSE IS NOT COVERED UNDER THE WARRANTY.** Items such as cables and non-serialized

modules are not covered under this warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state, province to province, or country to country. This

warranty is limited to repairing the instrument to OHD specifications. When you return an instrument to OHD., for service, repair, or calibration, we recommend using United Parcel Service, Federal Express, or Air Parcel Post. We also recommend that you insure your shipment for its actual replacement cost. OHD will not be responsible for lost shipments or instruments that are received in damaged condition due to improper packaging or handling. All warranty claim shipments must be made on a freight prepaid basis. Also, in order to expedite your claim, please include a properly completed copy of the Service Return Form. Recalibration of instruments, which have a recommended annual calibration frequency, is not covered under the warranty.

Use the original carton and packaging material for shipment. If they are not available, we recommend the following guide for repackaging:

- Use a double-walled carton of sufficient strength for the weight being shipped.
- Use heavy paper or cardboard to protect all instrument surfaces. Use nonabrasive material around all projecting parts.
- Use at least four inches of tightly packed, industrial-approved shock-absorbent material around the instrument.

Warranty Disclaimer Should you elect to have your instrument serviced and/or calibrated by someone other than OHD, please be advised that the original warranty covering your product becomes void when the tamper-resistant Quality Seal is removed or broken without proper factory authorization. We strongly recommend, therefore, that you send your instrument to OHD for factory service and calibration, especially during the original warranty period. In all cases, breaking the tamper-resistant Quality Seal should be avoided, as this seal is the key to your original instrument warranty. In the event that the seal must be broken to gain internal access to the instrument (e.g., in the case of a customer-installed firmware upgrade), you must first contact OHD technical support department at (205) 980-0180. You will be required to provide us with the serial number for your instrument as well as a valid reason for breaking the Quality Seal. You should break this seal only after you have received factory authorization. Do not break the Quality Seal before you have contacted us! Following these steps will help ensure that you will retain the original warranty on your instrument without interruption.

WARNING Unauthorized user modifications or application beyond the published specifications may result in electrical shock hazards or improper operation. OHD will not be responsible for any injuries sustained due to unauthorized equipment modifications.

© Copyright Occupational Health Dynamics (OHD) agrees to a limited copyright release that allows you to reproduce manuals and other printed materials for use in service training programs and other technical publications. If you would like other reproductions or distributions, submit a written request to OHD

Unpacking and Inspection Follow standard receiving practices upon receipt of the instrument. Check the shipping carton for damage. If damage is found, stop unpacking the instrument. Notify the carrier and ask for an agent to be present while the instrument is unpacked. There are no special unpacking instructions, but be careful not to damage the instrument when unpacking it. Inspect the instrument for physical damage such as bent or broken parts, dents, or scratches.

All written requests must be submitted to the contact information as follows:

OHD, Inc.
2687 John Hawkins Parkway
Hoover, Alabama 35244
(205) 980-0180
(205) 980-5764 FAX
sales@ohdusa.com
www.ohdusa.com

Index

- 1 -

1910.134 App. A 42

- A -

Accessories 20, 20
Adapter 29
Add Personnel 83
Add Subject and Test 13
Admin 131
Ambient Aerosol 31, 58
Annual Calibration 142
Auto Advance 58
Auto-Save 128

- B -

Backup 114, 127
Backup/Restore 112

- C -

C:Cartridge 38, 38
Calibration 144
 Calibration, Annual 118, 142
Calibration Due Date 76
Calibration Errors 55
Calibration Summary Report 105
CBRN 42
Challenge Pressure 37, 41
Clock Set 54
CNP 42, 58
Company 75, 98
Company/Operator 75
Contrast Adjust 58
Controlled Negative Pressure 58
Create New Company 101
CSA 31, 42
Custom Label 98
Cycle Count 63

- D -

Daily Calibration 28, 139
Datalog 59
Date Format 127
Date Format - Quantifit 54
Delete Personnel 84
Display Test 62
Dual Tube Cal Ports 24
Dual Tube Calibration 55
Due for Test 78, 126

- E -

Edit Name 57
Edit Personnel 84
Edit Protocol 50
Edit/Delete Company 101
Employee ID 112
Environmental Conditions 18
Erratic Graph Movement 138
Erratic Mask Pressure 137
Exhalation Valve Issues 139
Exhaust Port 24
Export Data 118

- F -

Facial Scarring/Blemishes 139
Factory Protocol 63
FF Auto Advance Fit Factor 58
Firmware Version 58
Fit Factor 31, 40
Fit Test Card 107
Fit Test Log Report 106
Fit Test Result Report 106
Fit Test Summary Report 106
FitTrack 5.0.1 114
FitTrack Gold Administration 124
FitTrack Gold Home 74
FitTrack Gold Personnel 80
FitTrack Gold Reports 104
FitTrack Gold Test 88
Flow 23

- G -

Graph 95

- H -

Header 104, 130
High Leakage 136
History 84
HM Auto Advance Fit Factor 58
Hold Breath 33
Home Screen 75, 126

- I -

Import Data 117
Import from Excel 115
Import from FitTrack 5.0.1 15
Import from Memory Stick 116
Import from Quantifit 116
Import/Export 114
Incremental 115
Inhalation Valve 44
Instructing the Test Subject 33
Interfacing with the Respirator 29

- K -

Keyboard 28
Keyboard Test 62

- L -

Languages 128
Large Leak 136
Leak Rate 41
Link Details 126
Links 77
Load Datalog 59
Login Required 124
Low Fit Factors 137

- M -

Mask Inventory 77, 126

memory stick 59
MIL 31, 42
Minimum Passing Fit Factor 42
Modeled Breathing Rate 41
Move Test 84
Msk: Mask 38, 38

- N -

NIST Calibration Date 58
Non-Incremental 115
Not Passing 139

- O -

Operator 131
Operator Name 57
Optical Sensor Knob 22
Orifice 55
OSHA 42
Outstanding Summary Report 108

- P -

Parameters 50
Peer 1 112
Peer 2 112
Permissions 124
Personnel 81
Personnel ID 83, 98
Personnel Test History 84
Power 24
Pressure 23
Pre-Test 36, 38
Print Reports 16
Printer Compatibility 24
Printer Test 62
Protocol 42, 119
Protocol Summary Report 105
Protocols 31, 42, 119

- Q -

Qualitative 91
Quantifit Detail 76
Quick Guides 12

- R -

Redon 42
Redon Protocol 42
Rename Protocol 50
Report Filter Settings 129
Report Format Settings 130
Reports 104, 129
Respirator 120
Respirator Summary Report 105
Restore 114
Role 131
Role-Based Settings 125

- S -

Save Datalog 59
SCBA 31, 42
Seal Check 23
Search 81
Security 124, 130
Serial Number 76
Service Return Form 144
Speaker Test 62
Speaker Volume 58
SQL Restore 114
Start-Up 126
Subject ID 90
Synchronize 112
System Menu 54
System Reset 55
System Setup 58

- T -

Temperature 142
Terms & Conditions 152
Test Cylinder 58
Test Date 94
Test Device 58
Test Graph 95
Test Mask Information 94
Test Operation 95
Test Operator 93
Test Protocol 90
Test Results 45, 58

Test Screen Other 93
Test Statistics 77, 95, 126
Test Step Instructions 30
Test Subject 89
Test-Q 41
Tools 112
Transducer 55
Trigger 23
Trigger Button 28, 30
Triple Tube 28
Troubleshooting 136

- U -

Update Firmware 131
USB 24
USB Devices 24
USB PC Port 24
User details 131
User Management 131
User Seal Check 30
Utility Menu 62

- V -

Valve 23

- W -

Warranty 152
WR:Work Rate 38, 38

- Z -

Z94.4-02 42
Zero Pressure 57
Zero the Sensor 28

OHD, INC
2687 John Hawkins Pkwy
Hoover, Alabama 35244
(888) 464-3872
www.ohdusa.com